

# ST-1002 Quick Installation Guide

## Package Contents

- ST-1002
- ST-1002 USB cable
- ST-1002 Setup Wizard CD with ST-1002 AP program, user manual and quick installation guide




## Quick Installation Procedure


1. Make sure your PC with internet access and latest formal Skype™ version (Free download from [www.skype.com](http://www.skype.com) )
2. Remove ST-1002, USB cable and setup wizard CD from ST-1002 package
3. Connect ST-1002 USB port with your computer USB port




4. Connect ST-1002 Phone port to a regular analog phone RJ-11 port through phone cable and make sure phone is on-hook properly
5. Connect ST-1002 Line port to a PSTN line

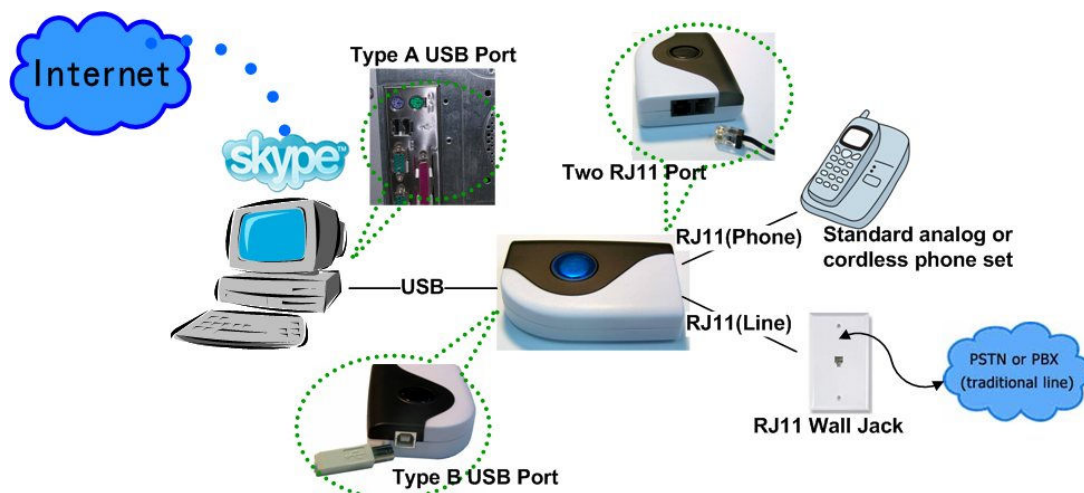

- Put ST-1002 setup wizard CD into your computer CD ROM and double-click setup.exe.

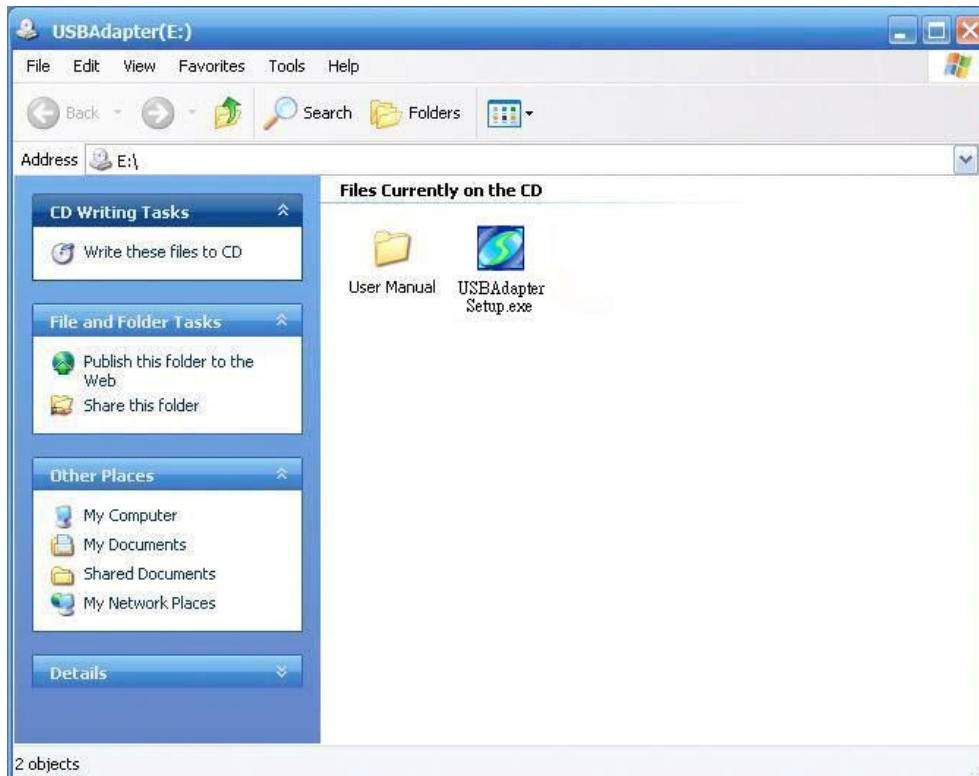

 
- In Windows 2000, user might get below “Digital Signature Not Found” window. Click Yes to continue installation.

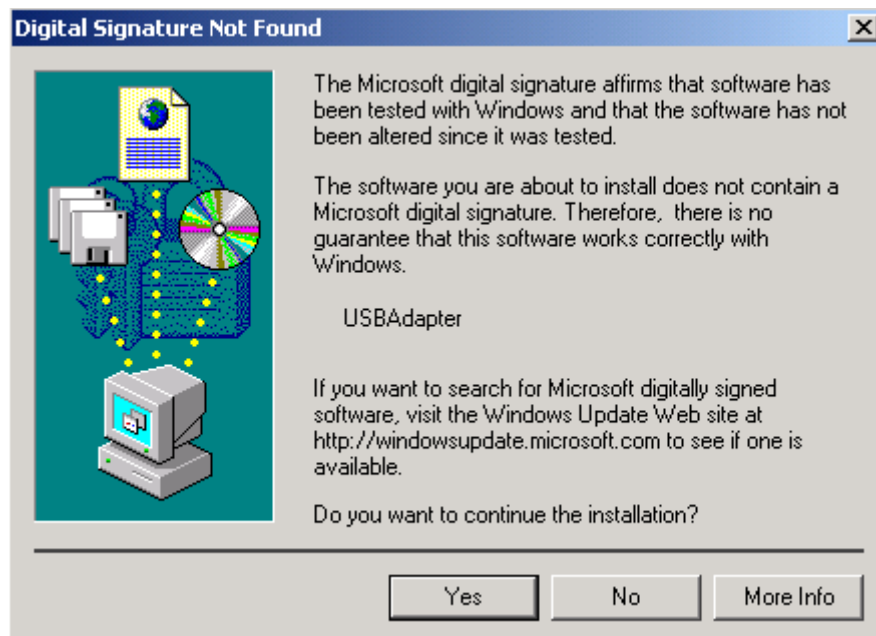

8. The “**Select Setup Language**” window pops up. Choose a preferred language by scrolling down the selection bar. After choosing the language, click OK.



 
9. The “**Welcome to the ST-1002 Setup Wizard**” appears. Read the on-screen instructions and click Next.

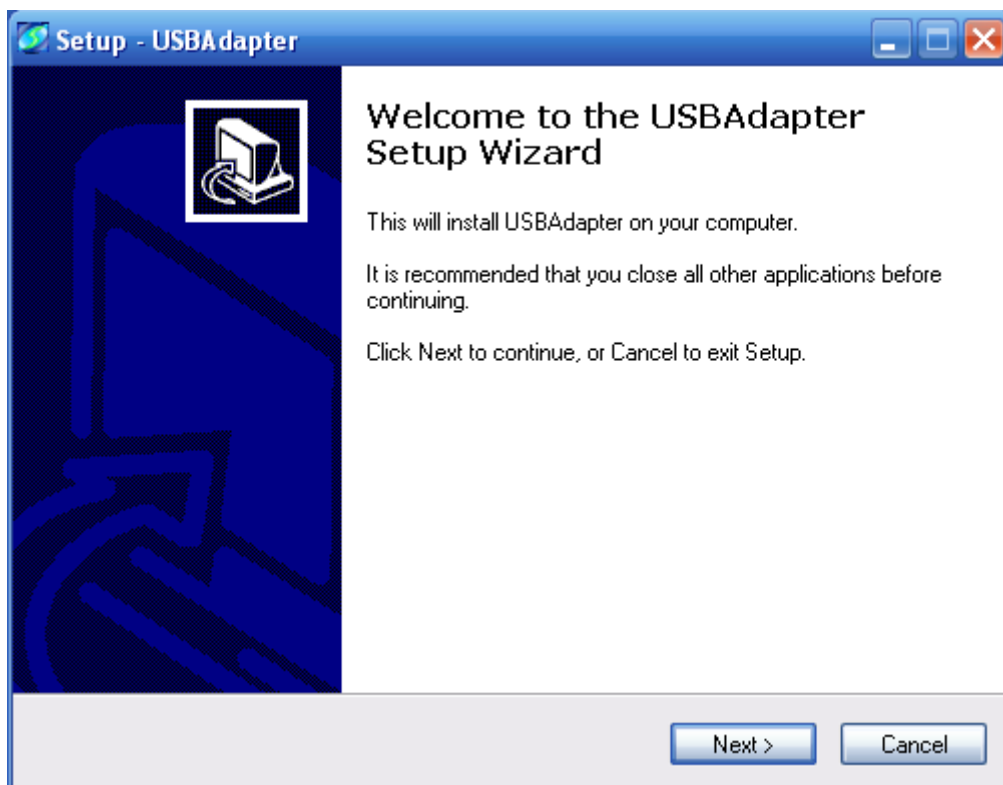


10. Following the on screen instructions step by step to complete ST-1002 installation. After ST-1002 AP program is launched, Skype will have one warning window pop-out. Please check appropriate option.



11. Setup two-digit Skype speed dial numbers for your Skype contact list.

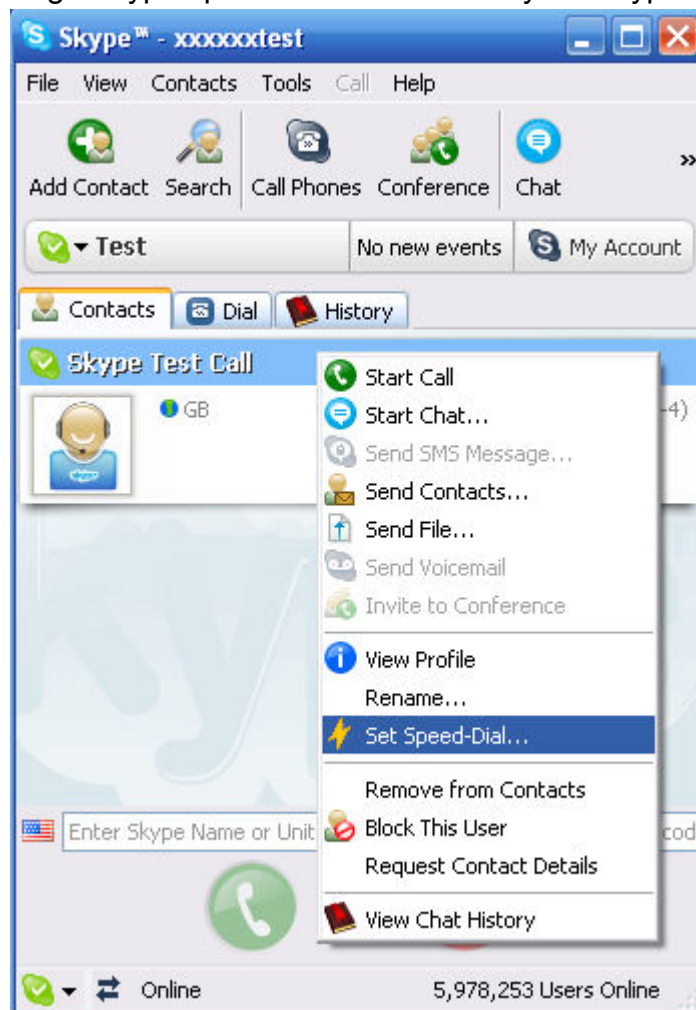

12. If Default operation mode in General tab is PSTN ( check from Option dialogue of ST-1002 system try icon in the right-bottom corner of Windows), user can pick up phone receiver and make a PSTN call as you did in the past. When user picks up the phone receiver, user will hear a familiar PSTN dial tone and notice green LED of ST-1002 is solid-on. User can press “# “ key to switch to the VoIP(Skype) mode and make a Skype call as following items 13~16. If user changes Default operation mode as VoIP, user will hear a Skype dial tone and notice blue LED is solid-on when the phone receiver is picked up. User can press “# “ key to switch to the PSTN mode and hear a familiar PSTN dial tone.
13. When ST-1002 is in the VoIP mode, pick up your phone receiver or handset( blue LED is solid-on) and dial Skype contact’s speed dial number + “#” key through the phone keypad after hearing a Skype dial tone and enjoy a Skype call.
14. For a SkypeOut™ call, dial “00” (or “+” key) + country code + local PSTN/Mobile + “#” key through the phone keypad or setup a SkypeOut contact list and call out by Skype speed dial number. For example, user can make a call to U.S.A. by pressing 00-1-408-888-8888. For Skype version later than version 2.5, user can omit 00 + country code when making a SkypeOut call by selecting a corresponding country after clicking Dial tab as below figure.

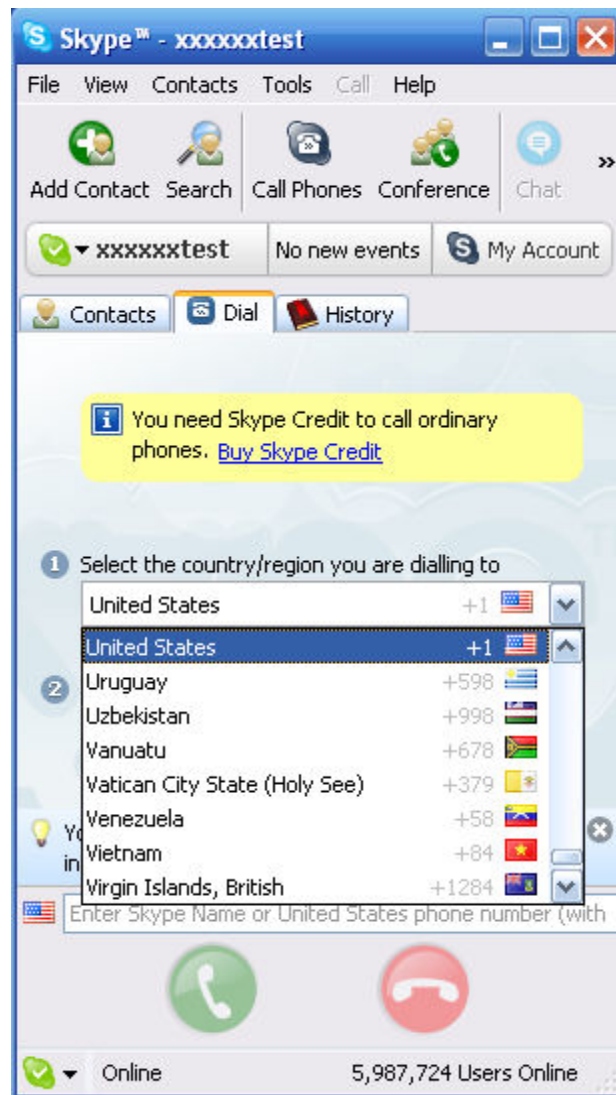

15. When there is a phone ring tone for an incoming call, pick up your phone receiver or handset to answer the call.
16. Put back your phone receiver to hang up a PSTN or Skype call or click Hang Up/Reject button to hang up a Skype call.