




# AT Commands Set

**SIM300\_ATC\_V2.00**

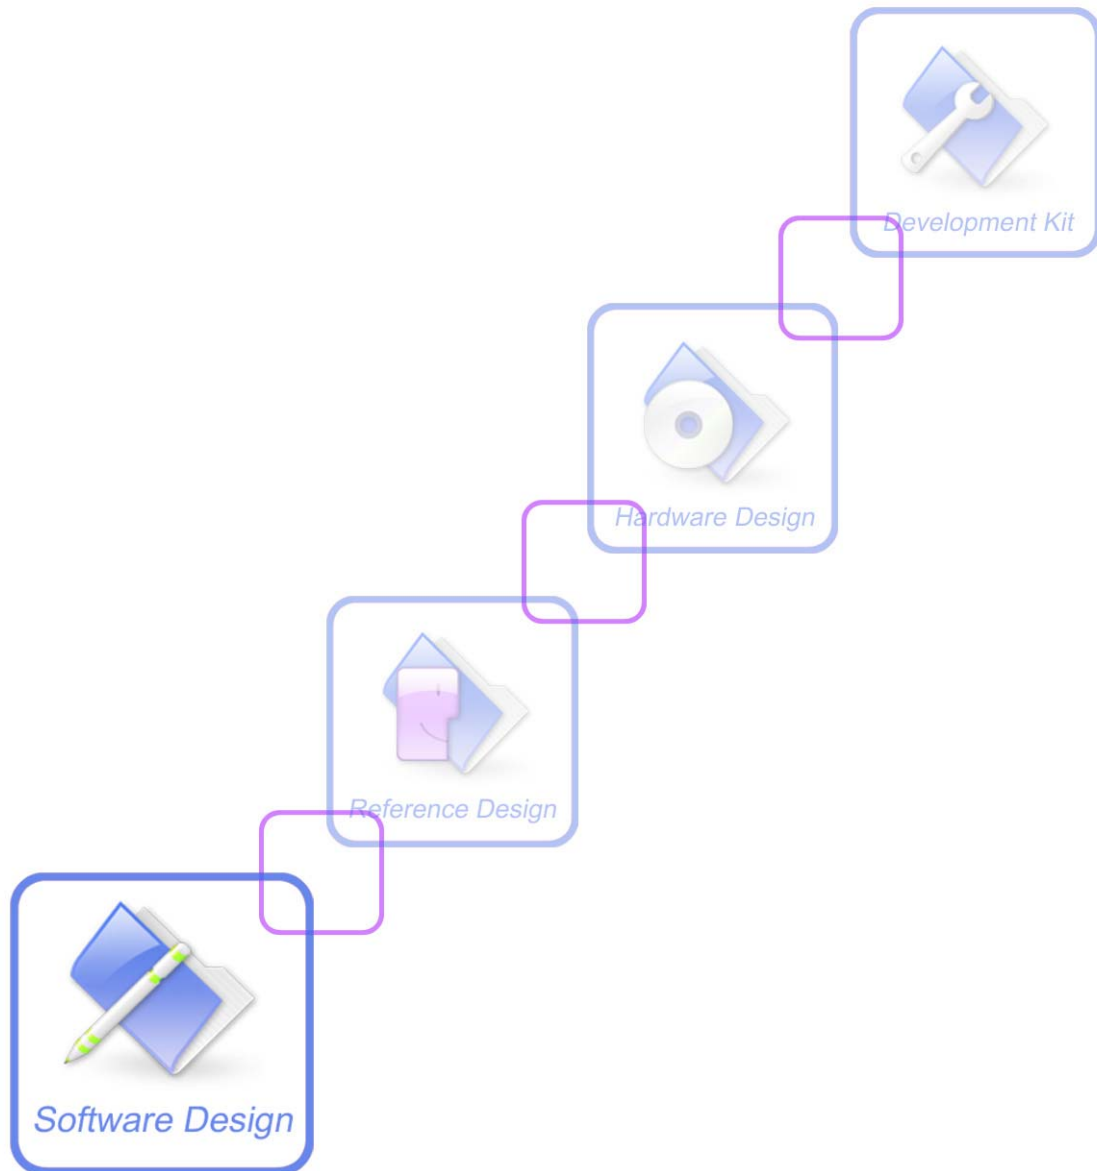

<b>Document Title:</b>	SIM300 AT Commands Set
<b>Version:</b>	2.00
<b>Date:</b>	2007-07-31
<b>Status:</b>	Release
<b>Document Control ID:</b>	SIM300_ATC_V2.00

### **General Notes**

Simcom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Simcom. The information provided is based upon requirements specifically provided to Simcom by the customers. Simcom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Simcom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

### **Copyright**

This document contains proprietary technical information which is the property of SIMCOM Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

*Copyright © SIMCOM Limited. 2007*

## 0 Version History

Preceding document: “SIM300 AT Interface Description” Version 1.06

Now document: “SIM300 AT Interface Description” Version 2.00

Version	Chapter	What is new
V1.01	4.3  4.2.4at+cmgr	Add new commands: AT+SMALPHAID AT+SMEXTRAINFO AT+SMEXTRAUNSOL Add a new parameter <mode>
V1.02	7.2.9 at+csns 7.2.25 at+ceng 3.2.15 at+chld	Change CSNS mode 2 to FAX and 4 to data Change the parameter <n> to <mode> Change the definition “1X Terminate the active call number X (X= 1-7)” to “1X Terminate the specific call number X (X= 1-7)( active, waiting or held)”
V1.03	8.2.23at+cipmode 8.2.24at+cipccfg	Select TCPIP Application Mode Configure transparent transfer mode
V1.04	7.2.1 at+ echo 7.2.29 at+ cmte 7.2.30 at+ csdt	Change the value of the parameter <channel> AT+CMTE AT+CSDT
V1.05	2.2.44 at+ilrr 2.2.45 at+ipr  10.1Profile Commands 7.2.31 at+cmgda 7.2.32 at+simtone 7.2.33 at+ccpd 3.2.19 at+clck 3.2.31 at+cpwd 7.2.34 at+cgid	Add a new value of IPR(0) Add a new value of IPR and some information (refer to 2.2.45.1) about it Delete some invalid information about +cfun  Add this Command Add this Command Add this Command Add a new value PF Add some new value: PS and PF Add this Command
V1.06	1.5 2.2.2 ata 2.2.3 atd 2.2.6 atd> <str> 2.2.21 ats6 2.2.22 ats7 2.2.24 ats10 2.2.26 atv 2.2.27 atx 2.2.29 at&c	Modify the SIM300 AT Command interface defaults Modify the description of ata Modify the description of atd Modify the description of atd> <str> Modify the parameter range from 0 to 10 Modify the parameter range from 1 to 255 Modify the parameter range to 1-254 and revise carries to carrier Add a table to describe result codes and their numeric equivalents Modify the description of atx Modify the description of at&c

2.2.30 at&d	Modify the description of at&d
2.2.35 at+ds	Modify the value range of parameters
2.2.36 at+gcap	Add the description of +CGSM, +FCLASS, +DS
2.2.43 at+ifc	Modify the parameter 2 of dce_by_dte and dte_by_dce
2.2.45 at+ipr	Add 14400 baud rate
3.2.2 at+camm	Modify the description of at+camm
3.2.4 at+cbst	Modify the description of at+cbst
3.2.11 at+gmr	Modify the format of firmware version name
3.2.14 at+csta	Modify the description of at+csta
3.2.18 at+clcc	Instead ALPHA parameter to quotation mark
3.2.19 at+clck	Add new parameter of “FD” and “BN” and new value PF
3.2.20 at+clip	Add parameter <CLI validity> to CLIP string to indicate the validity of CLI
3.2.24 at+cops	Add short alphanumeric <oper> to at+cops=? Command
3.2.28 at+cpbs	Modify the description of at+cpbs
3.2.29 at+cpbw	Modify the description of at+cpbw
3.2.31 at+cpwd	Add new parameters of “FD” and “BN”, remove parameter of “PF”
3.2.34 at+creg	Add URC strings description if creg is set to 2
3.2.35 at+crlp	Modify the value range of parameters
3.2.37 at+csq	Modify the description of at+csq
3.2.42 At+vtd	Remove parameter of 0
3.2.44 at+cmux	Modify the description of at+cmux
3.2.45 at+cnum	Modify the description of at+cnum
3.2.52 at+crsl	Modify the description of at+crsl
3.2.53 at+clvl	Modify the description of at+clvl
3.2.55 at+cpuc	Modify the description of at+cpuc
3.2.57 at+cbc	Add parameter 2 to indicate charge progress is completed
4.2.9 at+cnmi	Remove the value 1 of parameter <bfr>
7.2.3 at+cpowd	Add a new parameter 0 to this at Command
7.2.11 at+cmod	Modify the description of at+cmod
7.2.16 at+csmins	Modify the parameter of at+csmins
7.2.18 at+cdrind	Modify the description of at+cdrind
7.2.19 at+cspn	Modify the description of at+cspn
7.2.22 at+chf	Add test Command of at+chf
7.2.23 at+chfa	Modify the parameter of at+chfa
7.2.26 at+sclass0	Modify the description of at+sclass0
7.2.27 at+ccid	Modify the description of at+ccid
7.2.31 at+simtone	Change the frequency range from 4000 to 50000
7.2.34 at+moring	Add this AT Command

## SIM300 AT Commands Set

	8.2.2 at+cipsend	Modify the description of at+cipsend
	8.2.3 at+cipclose	Modify the description of at+cipclose
	8.2.4 at+cipshut	Modify at+cipshut
	8.2.6 at+cstt	Modify the overview of at+cstt
	8.2.7 at+ciicr	Modify the description of at+ciicr
	8.2.8 at+cifsr	Modify the description of at+cifsr
	8.2.9 at+cipstatus	Modify the description of at+cipstatus
	8.2.10 at+cdnscfg	Modify the description of at+cdnscfg
	8.2.11 at+cdnsgip	Modify the description of at+cdnsgip
	8.2.13 at+ciphead	Modify the overview of at+ciphead
	8.2.17 at+cipcsqp	Modify the description of at+cipcsqp
	8.2.18 at+cipcccon	Modify the description of at+cipcccon
	8.2.19 at+cipflp	Modify the overview of at+cipflp
	8.2.20 at+cipsrip	Modify the overview of at+cipsrip
	8.2.21at+cipdpdp	Modify the parameter of at+cipdpdp
	8.2.22at+cipscont	Modify the parameter of at+cipscont
	8.2.23at+cipmode	Modify the description of at+cipmode
	8.2.24 at+cipccfg	Modify the description of at+cipccfg
	At+cssn	Add CSSI and CSSU description of AT+CSSN
	At+clvl	Modify the description of at+clvl
	At+fmi	Modify the description of at+fmi
	At+cfclass	Modify the description of at+cfclass
	At+cpas	Change incoming to ringing
V2.00	New version	

## 1 Introduction

### 1.1 Scope of the document

This document presents the AT Command Set for SIMCOM cellular engine SIM300/SIM300Z, SIM340/SIM340Z and SIMA3 using in Release 10.0.

### 1.2 Related documents

You can visit the SIMCOM Website using the following link:

<http://www.sim.com>

### 1.3 Conventions and abbreviations

In this document, the GSM engines are referred to as following term:

- 1) ME (Mobile Equipment);
- 2) MS (Mobile Station);
- 3) TA (Terminal Adapter);
- 4) DCE (Data Communication Equipment) or facsimile DCE(FAX modem, FAX board);

In application, controlling device controls the GSM engine by sending AT Command via its serial interface. The controlling device at the other end of the serial line is referred to as following term:

- 1) TE (Terminal Equipment);
- 2) DTE (Data Terminal Equipment) or plainly “the application” which is running on an embedded system;

### 1.4 AT Command syntax

The "AT" or "at" prefix must be set at the beginning of each Command line. To terminate a Command line enter <CR>.

Commands are usually followed by a response that includes.”<CR><LF><response><CR><LF>” Throughout this document, only the responses are presented, <CR><LF> are omitted intentionally.

The AT Command set implemented by SIM300 is a combination of GSM07.05, GSM07.07 and ITU-T recommendation V.25ter and the AT commands developed by SIMCOM.

**Note: Only enter AT Command through serial port after SIM300 is power on and Unsolicited Result Code “RDY” is received from serial port. And if unsolicited result code”SCKS: 0” returned it indicates SIM card isn’t present. If autobauding is enabled, the Unsolicited Result Codes “RDY” and so on are not indicated when you start up the ME**

All these AT commands can be split into three categories syntactically: “**basic**”, “**S parameter**”, and “**extended**”. These are as follows:

#### 1.4.1 Basic syntax

These AT commands have the format of “**AT**<*x*><*n*>”, or “**AT**&<*x*><*n*>”, where “<*x*>” is the Command, and “<*n*>” is/are the argument(s) for that Command. An example of this is “**ATE**<*n*>”, which tells the DCE whether received characters should be echoed back to the DTE according to the value of “<*n*>”. “<*n*>” is optional and a default will be used if missing.

#### 1.4.2 S parameter syntax

These AT commands have the format of “**ATS**<*n*>=<*m*>”, where “<*n*>” is the index of the S register to set, and “<*m*>” is the value to assign to it. “<*m*>” is optional; if it is missing, then a default value is assigned.

#### 1.4.3 Extended Syntax

These commands can operate in several modes, as following table:

**Table 1: Types of AT commands and responses**

Test Command	AT+< <i>x</i> >=?	The mobile equipment returns the list of parameters and value ranges set with the corresponding Write Command or by internal processes.
Read Command	AT+< <i>x</i> >?	This command returns the currently set value of the parameter or parameters.
Write Command	AT+< <i>x</i> >=<...>	This command sets the user-definable parameter values.
Execution Command	AT+< <i>x</i> >	The execution command reads non-variable parameters affected by internal processes in the GSM engine

#### 1.4.4 Combining AT commands on the same Command line

You can enter several AT commands on the same line. In this case, you do not need to type the “**AT**” or “**at**” prefix before every Command. Instead, you only need type “**AT**” or “**or**” at the beginning of the Command line. Please Note to use a semicolon as Command delimiter.

The Command line buffer can accept a maximum of 256 characters. If the characters entered exceeded this number then none of the Command will be executed and TA will return “**ERROR**”.

### 1.4.5 Entering successive AT commands on separate lines

When you need to enter a series of AT commands on separate lines, please Note that you need to wait the final response (for example OK, CME error, CMS error) of last AT Command you entered before you enter the next AT Command.

## 1.5 Supported character sets

The SIM300 AT Command interface defaults to the **IRA** character set. The SIM300 supports the following character sets:

- GSM format
- UCS2
- HEX
- IRA
- PCCP
- PCDN
- 8859\_1

The character set can be set and interrogated using the “**AT+CSCS**” Command (GSM 07.07). The character set is defined in GSM specification 07.05.

The character set affects transmission and reception of SMS and SMS Cell Broadcast messages, the entry and display of phone book entries text field and SIM Application Toolkit alpha strings.

## 1.6 Flow control

Flow control is very important for correct communication between the GSM engine and DTE. For in the case such as a data or fax call, the sending device is transferring data faster than the receiving side is ready to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control. SIM300 support both two kinds of flow control. In Multiplex mode, it is recommended to use the hardware flow control.

### 1.6.1 Software flow control (XON/XOFF flow control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

The default flow control approach of SIM300 is hardware flow control (RTS/CTS flow control), to enable software flow control in the DTE interface and within GSM engine, type the following AT Command:

**AT+IFC=1, 1**



## **SIM300 AT Commands Set**

---

This setting is stored volatile, for use after restart, **AT+IFC=1, 1** should be stored to the user profile with **AT&W**.

Ensure that any communications software package (e.g. ProComm Plus, Hyper terminal or WinFax Pro) uses software flow control.

**NOTE:**

*Software Flow control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP) as the DTE interface may interpret binary data as flow control characters.*

### **1.6.2 Hardware flow control (RTS/CTS flow control)**

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer should be suspended, the CTS line is set inactive until the transfer from the receiving buffer has completed. When the receiving buffer is ok to receive more data, CTS goes active once again.

To achieve hardware flow control, ensure that the RTS/CTS lines are present on your application platform.

## 2 AT Commands According to V.25TER

These AT Command are designed according to the ITU-T (International Telecommunication Union, Telecommunication sector) V.25ter document.

### 2.1 Overview of AT Commands According to V.25TER

Command	Description
A/	RE-ISSUES LAST AT COMMAND GIVEN
ATA	ANSWER AN INCOMING CALL
ATD	MOBILE ORIGINATED CALL TO DIAL A NUMBER
ATD<<MEM><N>	ORIGINATE CALL TO PHONE NUMBER IN MEMORY <MEM>
>	
ATD<<N>	ORIGINATE CALL TO PHONE NUMBER IN CURRENT MEMORY
ATD<<STR>	ORIGINATE CALL TO PHONE NUMBER IN MEMORY WHICH CORRESPONDS TO FIELD <STR>
ATDL	REDIAL LAST TELEPHONE NUMBER USED
ATE	SET COMMAND ECHO MODE
ATH	DISCONNECT EXISTING CONNECTION
ATI	DISPLAY PRODUCT IDENTIFICATION INFORMATION
ATL	SET MONITOR SPEAKER LOUDNESS
ATM	SET MONITOR SPEAKER MODE
+++	SWITCH FROM DATA MODE OR PPP ONLINE MODE TO COMMAND MODE
ATO	SWITCH FROM COMMAND MODE TO DATA MODE
ATP	SELECT PULSE DIALLING
ATQ	SET RESULT CODE PRESENTATION MODE
ATS0	SET NUMBER OF RINGS BEFORE AUTOMATICALLY ANSWERING THE CALL
ATS3	SET COMMAND LINE TERMINATION CHARACTER
ATS4	SET RESPONSE FORMATTING CHARACTER
ATS5	SET COMMAND LINE EDITING CHARACTER
ATS6	SET PAUSE BEFORE BLIND DIALLING
ATS7	SET NUMBER OF SECONDS TO WAIT FOR CONNECTION COMPLETION
ATS8	SET NUMBER OF SECONDS TO WAIT WHEN COMMA DIAL MODIFIER ENCOUNTERED IN DIAL STRING OF D COMMAND
ATS10	SET DISCONNECT DELAY AFTER INDICATING THE ABSENCE OF DATA CARRIER

## SIM300 AT Commands Set

ATT	SELECT TONE DIALLING
ATV	TA RESPONSE FORMAT
ATX	SET CONNECT RESULT CODE FORMAT AND MONITOR CALL PROGRESS
ATZ	SET ALL CURRENT PARAMETERS TO USER DEFINED PROFILE
AT&C	SET DCD FUNCTION MODE
AT&D	SET DTR FUNCTION MODE
AT&F	SET ALL CURRENT PARAMETERS TO MANUFACTURER DEFAULTS
AT&V	DISPLAY CURRENT CONFIGURATION
AT&W	STORE CURRENT PARAMETER TO USER DEFINED PROFILE
AT+DR	V.42BIS DATA COMPRESSION REPORTING CONTROL
AT+DS	V.42BIS DATA COMPRESSION CONTROL
AT+GCAP	REQUEST COMPLETE TA CAPABILITIES LIST
AT+GMI	REQUEST MANUFACTURER IDENTIFICATION
AT+GMM	REQUEST TA MODEL IDENTIFICATION
AT+GMR	REQUEST TA REVISION IDENTIFICATION OF SOFTWARE RELEASE
AT+GOI	REQUEST GLOBAL OBJECT IDENTIFICATION
AT+GSN	REQUEST TA SERIAL NUMBER IDENTIFICATION (IMEI)
AT+ICF	SET TE-TA CONTROL CHARACTER FRAMING
AT+IFC	SET TE-TA LOCAL DATA FLOW CONTROL
AT+ILRR	SET TE-TA LOCAL DATA RATE REPORTING MODE
AT+IPR	SET TE-TA FIXED LOCAL RATE

## 2.2 Detailed Description of AT Commands According to V.25TER

### 2.2.1 A/ Re-issues The Last Command Given

<b>A/ Re-issues The Last Command Given</b>	
Execution	Response
Command	Re-issues the previous Command
A/	Note: It does not have to end with terminating character.
	Parameter
Reference	<b>Note</b>
V.25ter	This Command does not work when the serial multiplexer is active

## 2.2.2 ATA Answer An Incoming Call

ATA Answer An Incoming Call	
Execution Command <b>ATA</b>	<p>Response</p> <p>TA sends off-hook to the remote station.</p> <p>Note1: Any additional commands on the same Command line are ignored. Note2: This Command may be aborted generally by receiving a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>Response in case of data call, if successfully connected <b>CONNECT&lt;text&gt;</b> TA switches to data mode. Note: &lt;text&gt; output only if <b>ATX&lt;value&gt;</b> parameter setting with the &lt;value&gt; &gt;0 When TA returns to Command mode after call release <b>OK</b></p> <p>Response in case of voice call, if successfully connected <b>OK</b></p> <p>Response if no connection <b>NO CARRIER</b></p>
	Parameter
Reference V.25ter	Note See also <b>ATX</b>

## 2.2.3 ATD Mobile Originated Call To Dial A Number

ATD Mobile Originated Call To Dial A Number	
Execution Command <b>ATD&lt;n&gt;[&lt;mgsm &lt;f&gt;]</b>	<p>Response</p> <p>This Command can be used to set up outgoing <i>voice, data or fax calls</i>. It also serves to control <i>supplementary services</i>.</p> <p>Note: This Command may be aborted generally by receiving an <b>ATH</b> Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If no dial tone and (parameter setting <b>ATX2</b> or <b>ATX4</b>) <b>NO DIALTONE</b></p> <p>If busy and (parameter setting <b>ATX3</b> or <b>ATX4</b>) <b>BUSY</b></p> <p>If a connection cannot be established <b>NO CARRIER</b></p>

	<p>If connection successful and non-voice call.  <b>CONNECT&lt;text&gt;</b> TA switches to data mode.          Note: &lt;text&gt; output only if <b>ATX&lt;value&gt;</b> parameter setting with the &lt;value&gt; &gt;0</p> <p>When TA returns to Command mode after call release  <b>OK</b></p> <p>If connection successful and voice call  <b>OK</b></p>
	<p>Parameter</p> <p>&lt;n&gt; string of dialing digits and optionally V.25ter modifiers          dialing digits:  <b>0-9, *, #, +, A, B, C</b>          Following V.25ter modifiers are ignored:  <b>,(comma), T, P, !, W, @</b></p> <p><b>Emergency call:</b></p> <p>&lt;n&gt; Standardized emergency number 112(no SIM needed)</p> <p>&lt;mgsms&gt; string of <b>GSM</b> modifiers:  <b>I</b> Activates <b>CLIR</b> (Disables presentation of own number to called party)  <b>i</b> Deactivates <b>CLIR</b> (Enable presentation of own number to called party)  <b>G</b> Activates Closed User Group invocation for this call only  <b>g</b> Deactivates Closed User Group invocation for this call only</p> <p>&lt;;&gt; only required to set up voice call , return to Command state</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● Parameter “I” and “i” only if no *# code is within the dial string</li> <li>● &lt;n&gt; is default for last number that can be dialed by <b>ATDL</b></li> <li>● *# codes sent with <b>ATD</b> are treated as voice calls. Therefore, the Command must be terminated with a semicolon “;”</li> <li>● See <b>ATX</b> Command for setting result code and call monitoring parameters.</li> </ul> <p>Responses returned after dialing with <b>ATD</b></p> <ul style="list-style-type: none"> <li>● For voice call two different responses mode can be determined. <b>TA</b> returns “<b>OK</b>” immediately either after dialing was completed or after the call is established. The setting is controlled by <b>AT+COLP</b>. Factory default is <b>AT+COLP=0</b>, this cause the <b>TA</b> returns “<b>OK</b>” immediately</li> </ul>

after dialing was completed, otherwise **TA** will returns “**OK**”, “**BUSY**”, “**NO DIAL TONE**”, “**NO CARRIER**”.

Using **ATD** during an active voice call:

- When a user originates a second voice call while there is already an active voice call, the first call will be automatically put on hold.
- The current states of all calls can be easily checked at any time by using the **AT+CLCC** Command.

## 2.2.4 ATD> <mem><n> Originate Call To Phone Number In Memory <mem>

ATD><mem><n> Originate Call To Phone Number In Memory <mem>	
Execution	Response
Command	This Command can be used to dial a phone number from a specific phonebook.
ATD><mem><n> >[<I>][<G>];;	Note: This Command may be aborted generally by receiving an <b>ATH</b> Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.
	If error is related to <b>ME</b> functionality <b>+CME ERROR: &lt;err&gt;</b>
	If no dial tone and (parameter setting <b>ATX2</b> or <b>ATX4</b> ) <b>NO DIALTONE</b>
	If busy and (parameter setting <b>ATX3</b> or <b>ATX4</b> ) <b>BUSY</b>
	If a connection cannot be established <b>NO CARRIER</b>
	If connection successful and non-voice call. <b>CONNECT&lt;text&gt; TA</b> switches to data mode. Note: <text> output only if <b>ATX&lt;value&gt;</b> parameter setting with the <value> >0
	When <b>TA</b> returns to Command mode after call release <b>OK</b>
	If successfully connected and voice call <b>OK</b>

	<p>Parameters</p> <p><b>&lt;mem&gt;</b> Phonebook</p> <p>"DC" ME dialled calls list</p> <p>"FD" SIM fixed dialling-phonebook</p> <p>"LD" SIM last-dialling-phone book</p> <p>"LA" Last number all list</p> <p>"MC" ME missed (unanswered received) calls list</p> <p>"ME" ME phonebook</p> <p>"ON" SIM (or ME) own numbers (MSISDNs) list</p> <p>"RC" ME received calls list</p> <p>"SM" SIM phonebook</p> <p><b>&lt;n&gt;</b> Integer type memory location should be in the range of locations available in the memory used</p> <p><b>&lt;mgsms&gt;</b> string of <b>GSM</b> modifiers:</p> <p><b>I</b> Activates <b>CLIR</b> (Disables presentation of own number to called party)</p> <p><b>i</b> Deactivates <b>CLIR</b> (Enable presentation of own number to called party)</p> <p><b>G</b> Activates Closed User Group invocation for this call only</p> <p><b>g</b> Deactivates Closed User Group invocation for this call only</p> <p><b>&lt;;&gt;</b> only required to set up voice call , return to Command state</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● There is no <b>&lt;mem&gt;</b> for emergency call ("EN").</li> <li>● Parameter "I" and "i" only if no *# code is within the dial string</li> <li>● *# codes sent with <b>ATD</b> are treated as voice calls. Therefore, the Command must be terminated with a semicolon ";"</li> <li>● See <b>ATX</b> Command for setting result code and call monitoring parameters.</li> <li>● For example: The Command "<b>ATD&gt;SM7;</b>" is going to dial the phone number stored at location 7 in SIM phone book.</li> </ul>



## 2.2.5 ATD> <n> Originate Call To Phone Number In Current Memory

### ATD><n> Originate Call To Phone Number In Current Memory

<p>Execution</p> <p>Command</p> <p><b>ATD&gt;&lt;n&gt;[&lt;I&gt;][&lt;G&gt;][;]</b></p>	<p>Response</p> <p>This Command can be used to dial a phone number from current phonebook memory.</p> <p>Note: This Command may be aborted generally by receiving an <b>ATH</b> Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If error is related to <b>ME</b> functionality  <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no dial tone and (parameter setting <b>ATX2</b> or <b>ATX4</b>)  <b>NO DIALTONE</b></p> <p>If busy and (parameter setting <b>ATX3</b> or <b>ATX4</b>)  <b>BUSY</b></p> <p>If a connection cannot be established  <b>NO CARRIER</b></p> <p>If connection successful and non-voice call.  <b>CONNECT&lt;text&gt; TA</b> switches to data mode.          Note: &lt;text&gt; output only if <b>ATX&lt;value&gt;</b> parameter setting with the &lt;value&gt; &gt;0</p> <p>When <b>TA</b> returns to Command mode after call release  <b>OK</b></p> <p>If successfully connected and voice call  <b>OK</b></p>
	<p>Parameter</p> <p><b>&lt;n&gt;</b> Integer type memory location should be in the range of locations available in the memory used</p> <p><b>&lt;mgsm&gt;</b> string of <b>GSM</b> modifiers:</p> <ul style="list-style-type: none"> <li><b>I</b> Actives <b>CLIR</b> (Disables presentation of own number to called party)</li> <li><b>i</b> Deactivates <b>CLIR</b> (Enable presentation of own number to called party)</li> <li><b>G</b> Activates Closed User Group invocation for this call only</li> <li><b>g</b> Deactivates Closed User Group invocation for this call only</li> </ul>

	<;> only required to set up voice call , return to Command state
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● Parameter “T” and “i” only if no *# code is within the dial string</li> <li>● *# codes sent with <b>ATD</b> are treated as voice calls. Therefore, the Command must be terminated with a semicolon “;”</li> <li>● See <b>ATX</b> Command for setting result code and call monitoring parameters.</li> </ul>

### 2.2.6 ATD> <str> Originate Call To Phone Number In Memory Which Corresponds To Field <str>

#### ATD><str> Originate Call To Phone Number In Memory Which Corresponds To Field <str>

Execution Command <b>ATD&gt;&lt;str&gt;[I][G] [;]</b>	<p>Response</p> <p>This Command make the <b>TA</b> attempts to set up an outgoing call to stored number.</p> <p>All available memories are searched for the entry &lt;str&gt;.</p> <p>Note: This Command may be aborted generally by receiving an <b>ATH</b> Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If error is related to <b>ME</b> functionality <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no dial tone and (parameter setting <b>ATX2</b> or <b>ATX4</b>) <b>NO DIALTONE</b></p> <p>If busy and (parameter setting <b>ATX3</b> or <b>ATX4</b>) <b>BUSY</b></p> <p>If a connection cannot be established <b>NO CARRIER</b></p> <p>If connection successful and non-voice call. <b>CONNECT&lt;text&gt;</b> <b>TA</b> switches to data mode. Note: &lt;text&gt; output only if <b>ATX&lt;value&gt;</b> parameter setting with the &lt;value&gt; &gt;0</p> <p>When <b>TA</b> returns to Command mode after call release <b>OK</b></p> <p>If successfully connected and voice call <b>OK</b></p>
---	---

	<p>Parameters</p> <p><b>&lt;str&gt;</b> string type value (“x”), which should equal to an alphanumeric field in at least one phone book entry in the searched memories. <b>str</b> formatted as current <b>TE</b> character set specified by <b>+CSCS</b>.</p> <p><b>&lt;mgsm&gt;</b> string of <b>GSM</b> modifiers:</p> <p><b>I</b> Activates <b>CLIR</b> (Disables presentation of own number to called party)</p> <p><b>i</b> Deactivates <b>CLIR</b> (Enable presentation of own number to called party)</p> <p><b>G</b> Activates Closed User Group invocation for this call only</p> <p><b>g</b> Deactivates Closed User Group invocation for this call only</p> <p><b>&lt;;&gt;</b> only required to set up voice call , return to Command state</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● Parameter “I” and “i” only if no *# code is within the dial string</li> <li>● *# codes sent with <b>ATD</b> are treated as voice calls. Therefore, the Command must be terminated with a semicolon “;”</li> <li>● See <b>ATX</b> Command for setting result code and call monitoring parameters.</li> </ul>

### 2.2.7 ATDL Redial Last Telephone Number Used

ATDL Redial Last Telephone Number Used	
Execution Command <b>ATDL</b>	<p>Response</p> <p>This Command redials the last voice and data call number used.</p> <p>Note: This Command may be aborted generally by receiving an <b>ATH</b> Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If error is related to <b>ME</b> functionality  <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no dial tone and (parameter setting <b>ATX2</b> or <b>ATX4</b>)  <b>NO DIALTONE</b></p> <p>If busy and (parameter setting <b>ATX3</b> or <b>ATX4</b>)  <b>BUSY</b></p> <p>If a connection cannot be established  <b>NO CARRIER</b></p>

	<p>If connection successful and non-voice call.  <b>CONNECT&lt;text&gt;</b> TA switches to data mode.          Note: &lt;text&gt; output only if <b>ATX&lt;value&gt;</b> parameter setting with the &lt;value&gt; &gt;0</p> <p>When TA returns to Command mode after call release  <b>OK</b></p> <p>If successfully connected and voice call  <b>OK</b></p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● See <b>ATX</b> Command for setting result code and call monitoring parameters.</li> </ul>

**2.2.8 ATE Set Command Echo Mode**

<b>ATE Set Command Echo Mode</b>							
Execution Command <b>ATE&lt;value&gt;</b>	<p>Response</p> <p>This setting determines whether or not the TA echoes characters received from TE during Command state.  <b>OK</b></p> <p>Parameter</p> <table border="0"> <tr> <td><b>&lt;value&gt;</b></td> <td>0</td> <td>Echo mode off</td> </tr> <tr> <td></td> <td><u>1</u></td> <td>Echo mode on</td> </tr> </table>	<b>&lt;value&gt;</b>	0	Echo mode off		<u>1</u>	Echo mode on
<b>&lt;value&gt;</b>	0	Echo mode off					
	<u>1</u>	Echo mode on					
Reference V.25ter	Note						

**2.2.9 ATH Disconnect Existing Connection**

<b>ATH Disconnect Existing Connection</b>				
Execution Command <b>ATH[n]</b>	<p>Response</p> <p>Disconnect existing call by local TE from Command line and terminate call  <b>OK</b></p> <p>Note: OK is issued after circuit 109(DCD) is turned off, if it was previously on.</p> <p>Parameter</p> <table border="0"> <tr> <td><b>&lt;n&gt;</b></td> <td>0</td> <td>disconnect from line and terminate call</td> </tr> </table>	<b>&lt;n&gt;</b>	0	disconnect from line and terminate call
<b>&lt;n&gt;</b>	0	disconnect from line and terminate call		
Reference V.25ter	Note			

### 2.2.10 ATI Display Product Identification Information

ATI Display Product Identification Information	
Execution Command <b>ATI</b>	Response TA issues product information text  Example:  <b>SIMCOM_Ltd</b> <b>SIMCOM_SIM300</b> <b>Revision: 1008B09SIM300M32_SPANSION</b>  <b>OK</b>
	Parameter
Reference V.25ter	Note

### 2.2.11 ATL Set Monitor Speaker Loudness

ATL Set Monitor Speaker Loudness	
Execution Command <b>ATL&lt;value&gt;</b>	Response <b>OK</b>
	Parameter <value>    0    low speaker volume 1    low speaker volume 2    medium speaker volume 3    high speaker volume
Reference V.25ter	Note <ul style="list-style-type: none"> <li>The two commands ATL and ATM are implemented only for V.25 compatibility reasons and have no effect.</li> </ul>

### 2.2.12 ATM Set Monitor Speaker Mode

ATM Set Monitor Speaker Mode	
Execution Command <b>ATM&lt;value&gt;</b>	Response <b>OK</b>
	Parameter <value>    0    speaker is always off 1    speaker on until TA inform TE that carrier has been detected 2    speaker is always on when TA is off-hook
Reference V.25ter	Note <ul style="list-style-type: none"> <li>The two commands ATL and ATM are implemented only for V.25</li> </ul>

compatibility reasons and have no effect.

### 2.2.13 +++ Switch From Data Mode Or PPP Online Mode To Command Mode

#### +++ Switch From Data Mode Or PPP Online Mode To Command Mode

Execution Command +++	<p>Response</p> <p>This Command is only available during a CSD call or a GPRS connection. The +++ character sequence causes the TA to cancel the data flow over the AT interface and switch to Command mode. This allows you to enter AT Command while maintaining the data connection to the remote server or, accordingly, the GPRS connection.</p> <p><b>OK</b></p> <p>To prevent the +++ escape sequence from being misinterpreted as data, it should comply to following sequence:</p> <ol style="list-style-type: none"> <li>1. No characters entered for T1 time (0.5 seconds)</li> <li>2. “+++” characters entered with no characters in between</li> <li>3. No characters entered for T1 timer (0.5 seconds)</li> <li>4. Switch to Command mode, otherwise go to step 1.</li> </ol> <p>Parameter</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● To return from Command mode back to data or PPP online mode: Enter <b>ATO</b>.</li> </ul>

### 2.2.14 ATO Switch From Command Mode To Data Mode

#### ATO Switch From Command Mode To Data Mode

Execution Command ATO[n]	<p>Response</p> <p>TA resumes the connection and switches back from Command mode to data mode.</p> <p>If connection is not successfully resumed</p> <p><b>NO CARRIER</b></p> <p>else</p> <p>TA returns to data mode from Command mode <b>CONNECT</b> &lt;text&gt; Note: &lt;text&gt; only if parameter setting X&gt;0</p> <p>Parameter</p> <p>&lt;n&gt;            0        switch from Command mode to data mode</p>
Reference V.25ter	<p>Note</p>

### 2.2.15 ATP Select Pulse Dialing

#### ATP Select Pulse Dialing

## SIM300 AT Commands Set

Execution Command <b>ATP</b>	Response <b>OK</b>
	Parameter
Reference V.25ter	Note <ul style="list-style-type: none"> <li>● No effect in GSM</li> </ul>

### 2.2.16 ATQ Set Result Code Presentation Mode

#### ATQ Set Result Code Presentation Mode

Execution Command <b>ATQ&lt;n&gt;</b>	Response This parameter setting determines whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting. If <n>=0: <b>OK</b> If <n>=1: (none)						
	Parameter <table border="0"> <tr> <td>&lt;n&gt;</td> <td><u>0</u></td> <td>TA transmits result code</td> </tr> <tr> <td></td> <td>1</td> <td>Result codes are suppressed and not transmitted</td> </tr> </table>	<n>	<u>0</u>	TA transmits result code		1	Result codes are suppressed and not transmitted
<n>	<u>0</u>	TA transmits result code					
	1	Result codes are suppressed and not transmitted					
Reference V.25ter	Note						

### 2.2.17 ATSO Set Number Of Rings Before Automatically Answering The Call

#### ATSO Set Number Of Rings Before Automatically Answering The Call

Read Command <b>ATS0?</b>	Response <n>  <b>OK</b>						
Write Command <b>ATS0=&lt;n&gt;</b>	Response This parameter setting determines the number of rings before auto-answer. <b>OK</b>						
	Parameter <table border="0"> <tr> <td>&lt;n&gt;</td> <td><u>0</u></td> <td>automatic answering is disable</td> </tr> <tr> <td></td> <td>1-255</td> <td>enable automatic answering on the ring number specified</td> </tr> </table>	<n>	<u>0</u>	automatic answering is disable		1-255	enable automatic answering on the ring number specified
<n>	<u>0</u>	automatic answering is disable					
	1-255	enable automatic answering on the ring number specified					
Reference V.25ter	Note <ul style="list-style-type: none"> <li>● If &lt;n&gt; is set too high, the calling party may hang up before the call can be answered automatically.</li> </ul>						

### 2.2.18 ATS3 Set Command Line Termination Character

#### ATS3 Set Command Line Termination Character

Read Command <b>ATS3?</b>	Response  <n>  <b>OK</b>
Write Command <b>ATS3=&lt;n&gt;</b>	Response This parameter setting determines the character recognized by TA to terminate an incoming Command line. The TA also returns this character in output. <b>OK</b>
	Parameter <n>        0- <u>13</u> -127    Command line termination character
Reference V.25ter	Note ● Default 13 = CR.

### 2.2.19 ATS4 Set Response Formatting Character

<b>ATS4 Set Response Formatting Character</b>	
Read Command <b>ATS4?</b>	Response  <n>  <b>OK</b>
Write Command <b>ATS4=&lt;n&gt;</b>	Response This parameter setting determines the character generated by the TA for result code and information text. <b>OK</b>
	Parameter <n>        0- <u>10</u> -127    response formatting character
Reference V.25ter	Note ● Default 10 = LF.

### 2.2.20 ATS5 Set Command Line Editing Character

<b>ATS5 Set Command line editing character</b>	
Read Command <b>ATS5?</b>	Response  <n>  <b>OK</b>
Write Command <b>ATS5=&lt;n&gt;</b>	Response This parameter setting determines the character recognized by TA as a request to delete from the Command line the immediately preceding character. <b>OK</b>



## SIM300 AT Commands Set

	Parameter <n>      0- <u>8</u> -127      response formatting character
Reference V.25ter	Note <ul style="list-style-type: none"> <li>● Default 8 = Backspace.</li> </ul>

### 2.2.21 ATS6 Set Pause Before Blind Dialing

ATS6 Set Pause Before Blind Dialing	
Read Command ATS6?	Response <n>  <b>OK</b>
Write Command ATS6=<n>	Response <b>OK</b>
	Parameter <n>      0- <u>2</u> -10 number of seconds to wait before blind dialing
Reference V.25ter	Note <ul style="list-style-type: none"> <li>● No effect for GSM</li> </ul>

### 2.2.22 ATS7 Set Number Of Seconds To Wait For Connection Completion

ATS7 Set Number Of Seconds To Wait For Connection Completion	
Read Command ATS7?	Response <n>  <b>OK</b>
Write Command ATS7=<n>	Response This parameter setting determines the amount of time to wait for the connection completion in case of answering or originating a call. <b>OK</b>
	Parameter <n>      1- <u>60</u> -255      number of seconds to wait for connection completion
Reference V.25ter	Note <ul style="list-style-type: none"> <li>● If called party has specified a high value for <b>ATS0=&lt;n&gt;</b>, call setup may fail.</li> <li>● The correlation between ATS7 and ATS0 is important Example: Call may fail if ATS7=30 and ATS0=20.</li> <li>● ATS7 is only applicable to data call.</li> </ul>

### 2.2.23 ATS8 Set Number Of Second To Wait For Comma Dial Modifier Encountered In Dial String Of D Command

ATS8 Set Number Of Second To Wait For Comma Dial Modifier Encountered In Dial String Of D Command	
---	--

## SIM300 AT Commands Set

Read Command <b>ATS8?</b>	Response <b>&lt;n&gt;</b>  <b>OK</b>
Write Command <b>ATS8=&lt;n&gt;</b>	Response <b>OK</b>  Parameter <b>&lt;n&gt;</b> 0      no pause when comma encountered in dial string 1-255    number of seconds to wait
Reference V.25ter	Note ● No effect for GSM

### 2.2.24 ATS10 Set Disconnect Delay After Indicating The Absence Of Data Carrier

#### ATS10 Set Disconnect Delay After Indicating The Absence Of Data Carrier

Read Command <b>ATS10?</b>	Response <b>&lt;n&gt;</b>  <b>OK</b>
Write Command <b>ATS10=&lt;n&gt;</b>	Response This parameter setting determines the amount of time that the TA will remain connected in absence of data carrier. If the data carrier is once more detected before disconnect, the TA remains connected. <b>OK</b>  Parameter <b>&lt;n&gt;</b> 1- <u>15</u> -254      number of tenths seconds of delay
Reference V.25ter	Note

### 2.2.25 ATT Select Tone Dialing

#### ATT Select Tone Dialing

Execution Command <b>ATT</b>	Response <b>OK</b>  Parameter
Reference V.25ter	Note ● No effect in GSM

### 2.2.26 ATV TA Response Format

#### ATV TA Response Format

<p>Execution Command <b>ATV&lt;value&gt;</b></p>	<p><b>Response</b></p> <p>This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses.</p> <p>When &lt;value&gt;=0 <b>0</b></p> <p>When &lt;value&gt;=1 <b>OK</b></p> <p><b>Parameter</b></p> <table border="0"> <tr> <td style="vertical-align: top;"><b>&lt;value&gt;</b></td> <td style="vertical-align: top;"><b>0</b></td> <td>Information response: &lt;text&gt;&lt;CR&gt;&lt;LF&gt; Short result code format: &lt;numeric code&gt;&lt;CR&gt;</td> </tr> <tr> <td style="vertical-align: top;"><b>1</b></td> <td></td> <td>Information response: &lt;CR&gt;&lt;LF&gt;&lt;text&gt;&lt;CR&gt;&lt;LF&gt; Long result code format: &lt;CR&gt;&lt;LF&gt;&lt;verbose code&gt;&lt;CR&gt;&lt;LF&gt;</td> </tr> </table> <p>The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.</p>	<b>&lt;value&gt;</b>	<b>0</b>	Information response: <text><CR><LF> Short result code format: <numeric code><CR>	<b>1</b>		Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>
<b>&lt;value&gt;</b>	<b>0</b>	Information response: <text><CR><LF> Short result code format: <numeric code><CR>					
<b>1</b>		Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>					
<p>Reference V.25ter</p>	<p>Note</p>						

<b>ATV1</b>	<b>ATV0</b>	<b>Description</b>
OK	0	Acknowledges execution of a Command
CONNECT	1	A connection has been established; the DCE is moving from Command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection failed
ERROR	4	Command not recognized, Command line maximum length exceeded, parameter value invalid, or other problem with processing the Command line
NO DIALTONE	6	No dial tone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)
PROCEEDING	9	An AT command is being processed
CONNECT <text>	Manufacturer-specific	Same as CONNECT, but includes manufacturer-specific text that may specify DTE speed, line speed, error control, data compression, or other status

### 2.2.27 ATX Set CONNECT Result Code Format And Monitor Call Progress

ATX Set CONNECT Result Code Format And Monitor Call Progress																
Execution Command <b>ATX&lt;value&gt;</b>	<p>Response</p> <p>This parameter setting determines whether or not the TA detected the presence of dial tone and busy signal and whether or not TA transmits particular result codes</p> <p><b>OK</b></p>															
	<p>Parameter</p> <table border="0"> <tr> <td><b>&lt;value&gt;</b></td> <td><b>0</b></td> <td><b>CONNECT</b> result code only returned, dial tone and busy detection are both disabled</td> </tr> <tr> <td></td> <td><b>1</b></td> <td><b>CONNECT&lt;text&gt;</b> result code only returned, dial tone and busy detection are both disabled</td> </tr> <tr> <td></td> <td><b>2</b></td> <td><b>CONNECT&lt;text&gt;</b> result code returned, dial tone detection is enabled, busy detection is disabled</td> </tr> <tr> <td></td> <td><b>3</b></td> <td><b>CONNECT&lt;text&gt;</b> result code returned, dial tone detection is disabled, busy detection is enabled</td> </tr> <tr> <td></td> <td><b>4</b></td> <td><b>CONNECT&lt;text&gt;</b> result code returned, dial tone and busy detection are both enabled</td> </tr> </table>	<b>&lt;value&gt;</b>	<b>0</b>	<b>CONNECT</b> result code only returned, dial tone and busy detection are both disabled		<b>1</b>	<b>CONNECT&lt;text&gt;</b> result code only returned, dial tone and busy detection are both disabled		<b>2</b>	<b>CONNECT&lt;text&gt;</b> result code returned, dial tone detection is enabled, busy detection is disabled		<b>3</b>	<b>CONNECT&lt;text&gt;</b> result code returned, dial tone detection is disabled, busy detection is enabled		<b>4</b>	<b>CONNECT&lt;text&gt;</b> result code returned, dial tone and busy detection are both enabled
<b>&lt;value&gt;</b>	<b>0</b>	<b>CONNECT</b> result code only returned, dial tone and busy detection are both disabled														
	<b>1</b>	<b>CONNECT&lt;text&gt;</b> result code only returned, dial tone and busy detection are both disabled														
	<b>2</b>	<b>CONNECT&lt;text&gt;</b> result code returned, dial tone detection is enabled, busy detection is disabled														
	<b>3</b>	<b>CONNECT&lt;text&gt;</b> result code returned, dial tone detection is disabled, busy detection is enabled														
	<b>4</b>	<b>CONNECT&lt;text&gt;</b> result code returned, dial tone and busy detection are both enabled														
Reference V.25ter	Note															

### 2.2.28 ATZ Set All Current Parameters To User Defined Profile

ATZ Set All Current Parameters To User Defined Profile	
Execution Command <b>ATZ[&lt;value&gt;]</b>	<p>Response</p> <p>TA sets all current parameters to the user defined profile.</p> <p><b>OK</b></p>
	<p>Parameter</p> <p><b>&lt;value&gt;</b> <u>0</u>    Reset to profile number 0</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● The user defined profile is stored in non volatile memory;</li> <li>● If the user profile is not valid, it will default to the factory default profile;</li> <li>● Any additional commands on the same Command line are ignored.</li> </ul>

### 2.2.29 AT&C Set DCD Function Mode

AT&C Set DCD Function Mode	
Execution Command <b>AT&amp;C[&lt;value&gt;]</b>	<p>Response</p> <p>This parameter determines how the state of circuit 109(DCD) relates to the detection of received line signal from the distant end.</p> <p><b>OK</b></p>

## SIM300 AT Commands Set

	<p>Parameter</p> <p>&lt;value&gt; 0     <b>DCD</b> line is always ON</p> <p>          <u>1</u>     <b>DCD</b> line is ON only in the presence of data carrier</p>
Reference V.25ter	Note

### 2.2.30 AT&D Set DTR Function Mode

<b>AT&amp;D Set DTR Function Mode</b>	
Execution Command <b>AT&amp;D[&lt;value&gt;]</b>	<p>Response</p> <p>This parameter determines how the TA responds when circuit 108/2(DTR) is changed from the ON to the OFF condition during data mode.</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>&lt;value&gt; 0     TA ignores status on DTR</p> <p>          <u>1</u>     ON-&gt;OFF on DTR: Change to Command mode with remaining the connected call</p> <p>          2     ON-&gt;OFF on DTR: Disconnect call, change to Command mode. During state DTR = OFF is auto-answer off.</p>
Reference V.25ter	Note

### 2.2.31 AT&F Set All Current Parameters To Manufacturer Defaults

<b>AT&amp;F Set All Current Parameters To Manufacturer Defaults</b>	
Execution Command <b>AT&amp;F[&lt;value&gt;]</b>	<p>Response</p> <p>TA sets all current parameters to the manufacturer defined profile.</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>&lt;value&gt; <u>0</u>     set all TA parameters to manufacturer defaults.</p>
Reference V.25ter	Note

### 2.2.32 AT&V Display Current Configuration

<b>AT&amp;V Display Current Configuration</b>	
Execution Command <b>AT&amp;V[&lt;n&gt;]</b>	<p>Response</p> <p>TA returns the current parameter setting.</p> <p>&lt;current configurations text&gt;</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>&lt;n&gt;    <u>0</u>     profile number</p>

Reference V.25ter	Note
----------------------	------

### 2.2.33 AT&W Store Current Parameter To User Defined Profile

AT&W Store Current Parameter To User Defined Profile	
Execution Command AT&W[<n>]	<p>Response</p> <p>TA stores the current parameter setting in the user defined profile.</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>&lt;n&gt;    <u>0</u>    profile number to store to</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● The user defined profile is stored in non volatile memory.</li> </ul>

### 2.2.34 AT+DR V.42bis Data Compression Reporting Control

AT+DR V.42bis Data Compression Reporting Control	
Test Command AT+DR=?	<p>Response</p> <p>+DR: (list of supported &lt;value&gt;s)</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>See Write Command.</p>
Read Command AT+DR?	<p>Response</p> <p>+DR: &lt;value&gt;</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>See Write Command.</p>
Write Command AT+DR=[<value>]	<p>Response</p> <p>This parameter setting determines whether or not intermediate result code of the current data compressing is reported by TA to TE after a connection establishment.</p> <p><b>OK</b></p>
	<p>Parameter</p> <p>&lt;value&gt;    <u>0</u>    reporting disabled</p> <p>             1    reporting enabled</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● If the &lt;value&gt; is set to 1, then the intermediate result code reported at call set up is: <b>+DR: &lt;type&gt;</b></li> </ul>

	<b>&lt;type&gt;</b>	NONE	data compression is not in use
		V42B	Rec. V42bis is in use in both direction
		V42B RD	Rec. V42bis is in use in receive direction only
		V42B TD	Rec. V42bis is in use in transmit direction only

### 2.2.35 AT+DS V.42bis Data Compression Control

AT+DS V.42bis Data Compression Control																									
Test Command <b>AT+DS=?</b>	Response <b>+DS:</b> (list of supported <b>&lt;p0&gt;</b> s), (list of supported <b>&lt;n&gt;</b> s), (list of supported <b>&lt;p1&gt;</b> s), (list of supported <b>&lt;p2&gt;</b> s)  <b>OK</b>  Parameter See Write Command.																								
Read Command <b>AT+DS?</b>	Response <b>+DS: &lt;p0&gt;,&lt;n&gt;,&lt;p1&gt;,&lt;p2&gt;</b>  <b>OK</b>  Parameter See Write Command.																								
Write Command <b>AT+DS=[&lt;p0&gt;,&lt;n&gt;,&lt;p1&gt;,&lt;p2&gt;]]</b>	Response This parameter setting determines the possible data compression mode by TA at the compression negotiation with the remote TA after a call set up. <b>OK</b>  Parameters <table border="0"> <tr> <td><b>&lt;p0&gt;</b></td> <td>0</td> <td>NONE</td> </tr> <tr> <td></td> <td>1</td> <td>transmit only</td> </tr> <tr> <td></td> <td>2</td> <td>receive only</td> </tr> <tr> <td></td> <td>3</td> <td>both direction, but allow negotiation</td> </tr> <tr> <td><b>&lt;n&gt;</b></td> <td>0</td> <td>allow negotiation of p0 down</td> </tr> <tr> <td></td> <td>1</td> <td>do not allow negotiation of p0 - disconnect on difference</td> </tr> <tr> <td><b>&lt;p1&gt;</b></td> <td>512-1024</td> <td>dictionary size</td> </tr> <tr> <td><b>&lt;p2&gt;</b></td> <td>6-64</td> <td>maximum string size (default 20)</td> </tr> </table>	<b>&lt;p0&gt;</b>	0	NONE		1	transmit only		2	receive only		3	both direction, but allow negotiation	<b>&lt;n&gt;</b>	0	allow negotiation of p0 down		1	do not allow negotiation of p0 - disconnect on difference	<b>&lt;p1&gt;</b>	512-1024	dictionary size	<b>&lt;p2&gt;</b>	6-64	maximum string size (default 20)
<b>&lt;p0&gt;</b>	0	NONE																							
	1	transmit only																							
	2	receive only																							
	3	both direction, but allow negotiation																							
<b>&lt;n&gt;</b>	0	allow negotiation of p0 down																							
	1	do not allow negotiation of p0 - disconnect on difference																							
<b>&lt;p1&gt;</b>	512-1024	dictionary size																							
<b>&lt;p2&gt;</b>	6-64	maximum string size (default 20)																							
Reference V.25ter	Note <ul style="list-style-type: none"> <li>● This Command is only for data call;</li> <li>● GSM transmits the data transparent. The remote TA may support this compression;</li> <li>● This Command must be used in conjunction with Command AT+CRLP to enable compression (+CRLP=X,X,X,X,1,X).</li> </ul>																								

### 2.2.36 AT+GCAP Request Complete TA Capabilities List

AT+GCAP Request Complete TA Capabilities List	
Test Command <b>AT+GCAP=?</b>	Response <b>OK</b>
	Parameter
Execution Command <b>AT+GCAP</b>	Response TA reports a list of additional capabilities. <b>+GCAP: &lt;name&gt;s</b>  <b>OK</b>
	Parameters <b>&lt;name&gt;</b> +CGSM      GSM function is supported +FCLASS     FAX function is supported +DS            Data compression is supported
Reference V.25ter	Note

### 2.2.37 AT+GMI Request Manufacture Identification

AT+GMI Request Manufacture Identification	
Test Command <b>AT+GMI=?</b>	Response <b>OK</b>
	Parameter
Execution Command <b>AT+GMI</b>	TA reports one or more lines of information text which permit the user to identify the manufacturer. <b>SIMCOM_Ltd</b>  <b>OK</b>
	Parameter
Reference V.25ter	Note

### 2.2.38 AT+GMM Request TA Model Identification

AT+GMM Request TA Model Identification	
Test Command <b>AT+GMM=?</b>	Response <b>OK</b>
	Parameter



## SIM300 AT Commands Set

Execution Command <b>AT+GMM</b>	TA reports one or more lines of information text which permit the user to identify the specific model of device. <b>SIMCOM_SIM300</b>  <b>OK</b>
	Parameter
Reference V.25ter	Note

### 2.2.39 AT+GMR Request TA Revision Identification Of Software Release

<b>AT+GMR Request TA Revision Identification Of Software Release</b>	
Test Command <b>AT+GMR=?</b>	Response <b>OK</b>
	Parameter
Execution Command <b>AT+GMR</b>	TA reports one or more lines of information text which permit the user to identify the revision of software release. <b>Revision: &lt;revision&gt;</b>  <b>OK</b>
	Parameter <b>&lt;revision&gt;</b> revision of software release
Reference V.25ter	Note

### 2.2.40 AT+GOI Request Global Object Identification

<b>AT+GOI Request Global Object Identification</b>	
Test Command <b>AT+GOI=?</b>	Response <b>OK</b>
	Parameter
Execution Command <b>AT+GOI</b>	Response TA reports one or more lines of information text which permit the user to identify the device, based on the ISO system for registering unique object identifiers. <b>&lt;Object Id&gt;</b>  <b>OK</b>

## SIM300 AT Commands Set

	Parameter < <b>Object Id</b> > identifier of device type see X.208, 209 for the format of < <b>Object Id</b> >
Reference V.25ter	<b>Note</b> For example in SIM300 wireless module, string “SIM300” is displayed.

### 2.2.41 AT+GSN Request TA Serial Number Identification (IMEI)

AT+GSN Request TA Serial Number Identification(IMEI)	
Test Command AT+GSN=?	Response <b>OK</b>
	Parameter
Execution Command AT+GSN	Response TA reports the IMEI (international mobile equipment identifier) number in information text which permit the user to identify the individual ME device. <sn>  <b>OK</b>
	Parameter <sn> IMEI of the telephone(International Mobile station Equipment Identity)
Reference V.25ter	<b>Note</b> ● The serial number (IMEI) is varied by individual ME device.

### 2.2.42 AT+ICF Set TE-TA Control Character Framing

AT+ICF Set TE-TA Control Character Framing	
Test Command AT+ICF=?	Response +ICF: (list of supported <format>s), (list of supported <parity>s)  <b>OK</b>
	Parameter See Write Command.
Read Command AT+ICF?	Response +ICF: <format>,<parity>  <b>OK</b>
	Parameter See Write Command.
Write Command AT+ICF=[<format>,<parity>]	Response This parameter setting determines the serial interface character framing format and parity received by TA from TE.  <b>OK</b>

	<p>Parameters</p> <p><b>&lt;format&gt;</b>    1            8 data 0 parity 2 stop</p> <p>                  2            8 data 1 parity 1 stop</p> <p>                  <u>3</u>            8 data 0 parity 1 stop</p> <p>                  4            7 data 0 parity 2 stop</p> <p>                  5            7 data 1 parity 1 stop</p> <p>                  6            7 data 0 parity 1 stop</p> <p><b>&lt;parity&gt;</b>      0            odd</p> <p>                  1            even</p> <p>                  2            mark (1)</p> <p>                  <u>3</u>            space (0)</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>● The Command is applied for Command state;</li> <li>● The <b>&lt;parity&gt;</b> field is ignored if the <b>&lt; format &gt;</b> field specifies no parity.</li> </ul>

**2.2.43 AT+IFC Set TE-TA Local Data Flow Control**

<b>AT+IFC Set TE-TA Local Data Flow Control</b>	
<p>Test Command</p> <p><b>AT+IFC=?</b></p>	<p>Response</p> <p><b>+IFC:</b> (list of supported <b>&lt;dce_by_dte&gt;</b>s), (list of supported <b>&lt;dte_by_dce&gt;</b>s)</p> <p><b>OK</b></p> <p>Parameter</p> <p>See Write Command.</p>
<p>Read Command</p> <p><b>AT+IFC?</b></p>	<p>Response</p> <p><b>+IFC:</b> <b>&lt;dce_by_dte&gt;</b>,<b>&lt;dte_by_dce&gt;</b></p> <p><b>OK</b></p> <p>Parameter</p> <p>See Write Command.</p>
<p>Write Command</p> <p><b>AT+IFC=[&lt;dce_by_dte&gt;[,&lt;dte_by_dce&gt;]]</b></p>	<p>Response</p> <p>This parameter setting determines the data flow control on the serial interface for data mode.</p> <p><b>OK</b></p>

	<p>Parameters</p> <p><b>&lt;dce_by_dte&gt;</b> specifies the method will be used by TE at receive of data from TA</p> <p>0 None</p> <p>1 XON/XOFF, don't pass characters on to data stack</p> <p>2 RTS flow control</p> <p>3 XON/XOFF, pass characters on to data stack</p> <p><b>&lt;dte_by_dce&gt;</b> specifies the method will be used by TA at receive of data from TE</p> <p>0 None</p> <p>1 XON/XOFF</p> <p>2 CTS flow control</p>
Reference V.25ter	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>This flow control is applied for data mode;</li> </ul>

#### 2.2.44 AT+ILRR Set TE-TA Local Data Rate Reporting Mode

AT+ILRR Set TE-TA Local Data Rate Reporting Mode	
<p>Test Command</p> <p><b>AT+ILRR=?</b></p>	<p>Response</p> <p><b>+ILRR:</b> (list of supported <b>&lt;value&gt;</b>s)</p> <p><b>OK</b></p> <p>Parameter</p> <p>See Write Command.</p>
<p>Read Command</p> <p><b>AT+ILRR?</b></p>	<p>Response</p> <p><b>+ILRR:</b> <b>&lt;value&gt;</b></p> <p><b>OK</b></p> <p>Parameter</p> <p>See Write Command.</p>
<p>Write Command</p> <p><b>AT+ILRR=[&lt;value&gt;]</b></p>	<p>Response</p> <p>This parameter setting determines whether or not an intermediate result code of local rate is reported at connection establishment. The rate is applied after the final result code of the connection is transmitted to TE.</p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;value&gt;</b>    0    Disables reporting of local port rate</p> <p>              1    Enables reporting of local port rate</p>
<p>Reference</p> <p>V.25ter</p>	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>If the <b>&lt;value&gt;</b> is set to 1, the following intermediate result will comes out on connection to indicates the port rate settings</li> </ul> <p><b>+ILRR:&lt;rate&gt;</b></p> <p><b>&lt;rate&gt;</b> port rate setting on call connection in Baud per second</p>

	0(Autobauding ,see chapter 2.2.45.1 )
	300
	1200
	2400
	4800
	9600
	14400
	19200
	28800
	38400
	57600
	<u>115200</u>

### 2.2.45 AT+IPR Set TE-TA Fixed Local Rate

<b>AT+IPR Set TE-TA Fixed Local Rate</b>	
Test Command <b>AT+IPR=?</b>	<p>Response</p> <p><b>+IPR:</b> (list of supported auto detectable &lt;rate&gt;s),(list of supported fixed-only&lt;rate&gt;s)</p> <p><b>OK</b></p> <p>Parameter See Write Command.</p>
Read Command <b>AT+IPR?</b>	<p>Response</p> <p><b>+IPR: &lt;rate&gt;</b></p> <p><b>OK</b></p> <p>Parameter See Write Command.</p>
Write Command <b>AT+IPR=&lt;rate&gt;</b>	<p>Response</p> <p>This parameter setting determines the data rate of the TA on the serial interface. The rate of Command takes effect following the issuance of any result code associated with the current Command line.</p> <p><b>OK</b></p>

	<b>Parameter</b> <b>&lt;rate&gt;</b> Baud rate per second 0(Autobauding ,see chapter 2.2.45.1 ) 300 1200 2400 4800 9600 14400 19200 28800 38400 57600 <u>115200</u>
Reference V.25ter	<b>Note</b> Factory setting is AT+IPR=0 ( autobauding ) .It can be restored with AT&F and ATZ when you modified the bit rate's value.

### 2.2.45.1 Autobauding

Synchronization between DTE and DCE ensure that DTE and DCE are correctly synchronized and the bit rate used by the DTE is detected by the DCE (= ME). To allow the bit rate to be synchronized simply issue an "AT" or "at" string. This is necessary when you start up the module while autobauding is enabled. It is recommended to wait 3 to 5 seconds before sending the first AT character. Otherwise undefined characters might be returned.

If you want to use autobauding and auto-answer at the same time, you can easily enable the DTE-DCE synchronization, when you activate autobauding first and then configure the auto-answer mode.

#### Restrictions on autobauding operation

- The serial interface has to be operated at 8 data bits, no parity and 1 stop bit (factory setting).
- Only the strings .AT. or .at. can be detected (neither .aT. nor .At.).
- Unsolicited Result Codes that may be issued before the ME detects the new bit rate (by receiving the first AT Command string) will be sent at the previously detected bit rate.
- The Unsolicited Result Codes "RDY" and so on are not indicated when you start up the ME while autobauding is enabled.
- It is not recommended to switch to autobauding from a bit rate that cannot be detected by the autobauding mechanism (e.g. 300 baud). Responses to +IPR=0 and any commands on the same line might be corrupted.
- See also Chapter 2.2.44.

#### Autobauding and bit rate after restart

The most recently detected bit rate cannot be stored when module is powered down (Store bit rate determined with AT&W). Therefore, module will detect bit rate again after restart.

## 3 AT Commands According to GSM07.07

### 3.1 Overview of AT Command According to GSM07.07

Command	Description
AT+CACM	ACCUMULATED CALL METER(ACM) RESET OR QUERY
AT+CAMM	ACCUMULATED CALL METER MAXIMUM(ACM MAX) SET OR QUERY
AT+CAOC	ADVICE OF CHARGE
AT+CBST	SELECT BEARER SERVICE TYPE
AT+CCFC	CALL FORWARDING NUMBER AND CONDITIONS CONTROL
AT+CCUG	CLOSED USER GROUP CONTROL
AT+CCWA	CALL WAITING CONTROL
AT+CEER	EXTENDED ERROR REPORT
AT+CGMI	REQUEST MANUFACTURER IDENTIFICATION
AT+CGMM	REQUEST MODEL IDENTIFICATION
AT+CGMR	REQUEST TA REVISION IDENTIFICATION OF SOFTWARE RELEASE
AT+CGSN	REQUEST PRODUCT SERIAL NUMBER IDENTIFICATION (IDENTICAL WITH +GSN)
AT+CSCS	SELECT TE CHARACTER SET
AT+CSTA	SELECT TYPE OF ADDRESS
AT+CHLD	CALL HOLD AND MULTIPARTY
AT+CIMI	REQUEST INTERNATIONAL MOBILE SUBSCRIBER IDENTITY
AT+CKPD	KEYPAD CONTROL
AT+CLCC	LIST CURRENT CALLS OF ME
AT+CLCK	FACILITY LOCK
AT+CLIP	CALLING LINE IDENTIFICATION PRESENTATION
AT+CLIR	CALLING LINE IDENTIFICATION RESTRICTION
AT+CMEE	REPORT MOBILE EQUIPMENT ERROR
AT+COLP	CONNECTED LINE IDENTIFICATION PRESENTATION
AT+COPS	OPERATOR SELECTION
AT+CPAS	MOBILE EQUIPMENT ACTIVITY STATUS
AT+CPBF	FIND PHONEBOOK ENTRIES
AT+CPBR	READ CURRENT PHONEBOOK ENTRIES
AT+CPBS	SELECT PHONEBOOK MEMORY STORAGE
AT+CPBW	WRITE PHONEBOOK ENTRY
AT+CPIN	ENTER PIN
AT+CPWD	CHANGE PASSWORD
AT+CR	SERVICE REPORTING CONTROL

AT+CRC	SET CELLULAR RESULT CODES FOR INCOMING CALL INDICATION
AT+CREG	NETWORK REGISTRATION
AT+CRLP	SELECT RADIO LINK PROTOCOL PARAMETER
AT+CRSM	RESTRICTED SIM ACCESS
AT+CSQ	SIGNAL QUALITY REPORT
AT+FCLASS	FAX: SELECT, READ OR TEST SERVICE CLASS
AT+FMI	FAX: REPORT MANUFACTURED ID
AT+FMM	FAX: REPORT MODEL ID
AT+FMR	FAX: REPORT REVISION ID
AT+VTD	TONE DURATION
AT+VTS	DTMF AND TONE GENERATION
AT+CMUX	MULTIPLEXER CONTROL
AT+CNUM	SUBSCRIBER NUMBER
AT+CPOL	PREFERRED OPERATOR LIST
AT+COPN	READ OPERATOR NAMES
AT+CFUN	SET PHONE FUNCTIONALITY
AT+CCLK	CLOCK
AT+CSIM	GENERIC SIM ACCESS
AT+CALM	ALERT SOUND MODE
AT+CRSL	RINGER SOUND LEVEL
AT+CLVL	LOUD SPEAKER VOLUME LEVEL
AT+CMUT	MUTE CONTROL
AT+CPUC	PRICE PER UNIT CURRENCY TABLE
AT+CCWE	CALL METER MAXIMUM EVENT
AT+CBC	BATTERY CHARGE
AT+CUSD	UNSTRUCTURED SUPPLEMENTARY SERVICE DATA
AT+CSSN	SUPPLEMENTARY SERVICES NOTIFICATION

## 3.2 Detailed Descriptions of AT Command According to GSM07.07

### 3.2.1 AT+CACM Accumulated Call Meter (ACM) Reset Or Query

<b>AT+CACM Accumulated Call Meter(ACM) Reset Or Query</b>	
Test Command <b>AT+CACM=?</b>	Response <b>OK</b> Parameter
Read Command <b>AT+CACM?</b>	Response TA returns the current value of ACM. <b>+CACM: &lt;acm&gt;</b> <b>OK</b>



	<p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;acm&gt;</b> string type; three bytes of the current ACM value in hexa-decimal format (e.g. "00001E" indicates decimal value 30) 000000 - FFFFFFFF</p>
<p>Write Command <b>AT+CACM=[&lt;passwd&gt;]</b></p>	<p>Parameter</p> <p><b>&lt;passwd&gt;</b> string type: SIM PIN2</p> <p>Response</p> <p>TA resets the Advice of Charge related accumulated call meter (ACM) value in SIM file EF (ACM). ACM contains the total number of home units for both the current and preceding calls.</p> <p>OK</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>

### 3.2.2 AT+CAMM Accumulated Call Meter Maximum (ACM max) Set Or Query

<b>AT+CAMM Accumulated Call Meter Maximum(ACM max) Set Or Query</b>	
<p>Test Command <b>AT+CAMM=?</b></p>	<p>Response</p> <p>OK</p> <p>Parameter</p>
<p>Read Command <b>AT+ CAMM?</b></p>	<p>Response</p> <p>TA returns the current value of ACM max. <b>+CAMM: &lt;acmmax&gt;</b></p> <p>OK</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters see Write Command</p>
<p>Write Command <b>AT+CAMM=[&lt;acmmax&gt;[,&lt;passwd&gt;]]</b></p>	<p>Response</p> <p>TA sets the Advice of Charge related accumulated call meter maximum value in SIM file EF (ACM max). ACM max contains the maximum number of home units allowed to be consumed by the subscriber.</p> <p>OK</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;acmmax&gt;</b> string type; three bytes of the max. ACM value in</p>

	<p>hex-decimal format (e.g. "00001E" indicates decimal value 30)</p> <p>000000</p> <p>disable ACMmax feature</p> <p>000001-FFFFFF</p> <p><b>&lt;passwd&gt;</b> string type SIM PIN2</p>
Reference GSM 07.07 [13]	Note

### 3.2.3 AT+CAOC Advice Of Charge

<b>AT+CAOC Advice Of Charge</b>	
Test Command <b>AT+CAOC=?</b>	Response <b>+CAOC:</b> (list of supported <b>&lt;mode&gt;</b> s)  <b>OK</b> Parameters see Write Command
Read Command <b>AT+CAOC?</b>	Response <b>+CAOC:</b> <b>&lt;mode&gt;</b>  <b>OK</b> Parameters see Write Command
Write Command <b>AT+CAOC=&lt;mode&gt;</b>	Response TA sets the Advice of Charge supplementary service function mode. If error is related to ME functionality: <b>+CME ERROR:</b> <b>&lt;err&gt;</b> If <b>&lt;mode&gt;</b> =0, TA returns the current call meter value <b>+CAOC:</b> <b>&lt;ccm&gt;</b>  <b>OK</b> If <b>&lt;mode&gt;</b> =1, TA deactivates the unsolicited reporting of CCM value <b>OK</b> If <b>&lt;mode&gt;</b> =2, TA activates the unsolicited reporting of CCM value <b>OK</b> Parameters <b>&lt;mode&gt;</b> <ul style="list-style-type: none"> <li>0 query CCM value</li> <li><u>1</u> deactivate the unsolicited reporting of CCM value</li> <li>2 activate the unsolicited reporting of CCM value</li> </ul> <b>&lt;ccm&gt;</b> string type; three bytes of the current CCM value in hex-decimal format (e.g. "00001E" indicates decimal

	value 30); bytes are similarly coded as ACMmax value in the SIM 000000-FFFFFF
Reference GSM 07.07 [13]	Note

### 3.2.4 AT+CBST Select Bearer Service Type

AT+CBST Select Bearer Service Type																																																	
Test Command <b>AT+CBST=?</b>	Response <b>+CBST:</b> (list of supported <speed>s) ,(list of supported <name>s) ,(list of supported <ce>s)  <b>OK</b> Parameter see Write Command																																																
Read Command <b>AT+CBST?</b>	Response <b>+CBST:</b> <speed>,<name>,<ce>  <b>OK</b> Parameter see Write Command																																																
Write Command <b>AT+CBST=[&lt;speed&gt;] [,&lt;name&gt;[,&lt;ce&gt;]] ]</b>	Response TA selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated. <b>OK</b>  Parameters <table border="0"> <tr> <td>&lt;speed&gt;</td> <td>0</td> <td>autobauding</td> </tr> <tr> <td></td> <td>1</td> <td>300 bps(V.21)</td> </tr> <tr> <td></td> <td>2</td> <td>1200 bps(V.22)</td> </tr> <tr> <td></td> <td>3</td> <td>1200/75 bps(V.23)</td> </tr> <tr> <td></td> <td>4</td> <td>2400 bps(V.22bis)</td> </tr> <tr> <td></td> <td>5</td> <td>2400 bps(V.26ter)</td> </tr> <tr> <td></td> <td>6</td> <td>4800 bps(V.32)</td> </tr> <tr> <td></td> <td>7</td> <td>9600 bps(V.32)</td> </tr> <tr> <td></td> <td>12</td> <td>9600 bps(V.34)</td> </tr> <tr> <td></td> <td>14</td> <td>14400 bps(V.34)</td> </tr> <tr> <td></td> <td>34</td> <td>1200 bps (V.120)</td> </tr> <tr> <td></td> <td>36</td> <td>2400 bps (V.120)</td> </tr> <tr> <td></td> <td>38</td> <td>4800 bps (V.120)</td> </tr> <tr> <td></td> <td>39</td> <td>9600 bps (V.120)</td> </tr> <tr> <td></td> <td>43</td> <td>14400 bps (V.120)</td> </tr> <tr> <td></td> <td>65</td> <td>300 bps (V.110)</td> </tr> </table>	<speed>	0	autobauding		1	300 bps(V.21)		2	1200 bps(V.22)		3	1200/75 bps(V.23)		4	2400 bps(V.22bis)		5	2400 bps(V.26ter)		6	4800 bps(V.32)		7	9600 bps(V.32)		12	9600 bps(V.34)		14	14400 bps(V.34)		34	1200 bps (V.120)		36	2400 bps (V.120)		38	4800 bps (V.120)		39	9600 bps (V.120)		43	14400 bps (V.120)		65	300 bps (V.110)
<speed>	0	autobauding																																															
	1	300 bps(V.21)																																															
	2	1200 bps(V.22)																																															
	3	1200/75 bps(V.23)																																															
	4	2400 bps(V.22bis)																																															
	5	2400 bps(V.26ter)																																															
	6	4800 bps(V.32)																																															
	7	9600 bps(V.32)																																															
	12	9600 bps(V.34)																																															
	14	14400 bps(V.34)																																															
	34	1200 bps (V.120)																																															
	36	2400 bps (V.120)																																															
	38	4800 bps (V.120)																																															
	39	9600 bps (V.120)																																															
	43	14400 bps (V.120)																																															
	65	300 bps (V.110)																																															

## SIM300 AT Commands Set

	66 1200 bps(V.110 or X.31 flag stuffing) 68 2400 bps(V.110 or X.31 flag stuffing) 70 4800 bps(V.110 or X.31 flag stuffing) 71 9600 bps(V.110 or X.31 flag stuffing) 75 14400 bps(V.110 or X.31 flag stuffing)
	<b>&lt;name&gt;</b> <u>0</u> asynchronous modem 2    PAD access (asynchronous)
	<b>&lt;ce&gt;</b> 0    transparent <u>1</u> non-transparent
Reference GSM 07.07 [14]	Note GSM 02.02[1]: lists the allowed combinations of the sub parameters

### 3.2.5 AT+CCFC Call Forwarding Number And Conditions Control

AT+CCFC Call Forwarding Number And Conditions Control	
Test Command <b>AT+CCFC=?</b>	Response <b>+CCFC:</b> (list of supported <reads>)
	<b>OK</b>
	Parameters see Write Command

Write Command	Response
<b>AT+CCFC =</b> <b>&lt;reads&gt;, &lt;mode&gt;</b> <b>[, &lt;number&gt; [,</b> <b>&lt;type&gt; [,&lt;class&gt;</b> <b>[, &lt;subaddr&gt;</b> <b>[,&lt;satype&gt;</b> <b>[,&lt;time&gt;]]]]]</b>	<p>TA controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported.</p> <p>Only ,&lt;reads&gt; and &lt;mode&gt; should be entered with mode (0-2,4)</p> <p>If &lt;mode&gt;&lt;=2 and Command successful</p> <p><b>OK</b></p> <p>If &lt;mode&gt;=2 and Command successful (only in connection with &lt;reads&gt; 0 – 3)</p> <p>For registered call forward numbers:</p> <p><b>+CCFC: &lt;status&gt;, &lt;class1&gt;[, &lt;number&gt;, &lt;type&gt;</b>  <b>[,&lt;subaddr&gt;,&lt;satype&gt;[,&lt;time&gt;]]] [&lt;CR&gt;&lt;LF&gt;+CCFC: ....]</b></p> <p><b>OK</b></p> <p>If no call forward numbers are registered (and therefore all classes are inactive):</p> <p><b>+CCFC: &lt;status&gt;, &lt;class&gt;</b></p> <p><b>OK</b></p> <p>where &lt;status&gt;=0 and &lt;class&gt;=7</p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
	<p>Parameters</p> <p><b>&lt;reads&gt;</b></p> <p>0 unconditional            1 mobile busy            2 no reply            3 not reachable            4 all call forwarding (0-3)            5 all conditional call forwarding (1-3)</p> <p><b>&lt;mode&gt;</b></p> <p>0 disable            1 enable            2 query status            3 registration            4 erasure</p> <p><b>&lt;number&gt;</b> string type phone number of forwarding address in format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b> type of address in integer format; default 145 when dialing string includes international access code character "+", otherwise 129</p>

	<p><b>&lt;subaddr&gt;</b> string type subaddress of format specified by <b>&lt;satype&gt;</b></p> <p><b>&lt;satype&gt;</b> type of sub-address in integer</p> <p><b>&lt;class&gt;</b></p> <ul style="list-style-type: none"><li>1 voice</li><li>2 data</li><li>4 fax</li><li>7 all classes</li></ul> <p><b>&lt;time&gt;</b> time to wait before call is forwarded,rounded to a multiple of 5 sec. 1...20..30 (only for <b>&lt;reas&gt;</b>=no reply)</p> <p><b>&lt;status&gt;</b></p> <ul style="list-style-type: none"><li>0 not active</li><li>1 active</li></ul>
Reference GSM07.07	Note

### 3.2.6 AT+CCUG Closed User Group Control

AT+CCUG Closed User Group Control																									
Read Command <b>AT+CCUG?</b>	Response <b>+CCUG: &lt;n&gt;,&lt;index&gt;,&lt;info&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>																								
	Parameter see Write Command																								
Test Command <b>AT+CCUG=?</b>	Response <b>OK</b>																								
Write Command <b>AT+CCUG=[&lt;n&gt; ] [,&lt;index&gt;[,&lt;info &gt;]]]</b>	TA sets the Closed User Group supplementary service parameters as a default adjustment for all following calls. <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>																								
	Parameters <table border="0"> <tr> <td><b>&lt;n&gt;</b></td> <td><u>0</u></td> <td>disable CUG</td> </tr> <tr> <td></td> <td>1</td> <td>enable CUG</td> </tr> <tr> <td><b>&lt;index&gt;</b></td> <td><u>0</u>...9</td> <td>CUG index</td> </tr> <tr> <td></td> <td>10</td> <td>no index (preferred CUG taken from subscriber data)</td> </tr> <tr> <td><b>&lt;info&gt;</b></td> <td><u>0</u></td> <td>no information</td> </tr> <tr> <td></td> <td>1</td> <td>suppress OA (Outgoing Access)</td> </tr> <tr> <td></td> <td>2</td> <td>suppress preferential CUG</td> </tr> <tr> <td></td> <td>3</td> <td>suppress OA and preferential CUG</td> </tr> </table>	<b>&lt;n&gt;</b>	<u>0</u>	disable CUG		1	enable CUG	<b>&lt;index&gt;</b>	<u>0</u> ...9	CUG index		10	no index (preferred CUG taken from subscriber data)	<b>&lt;info&gt;</b>	<u>0</u>	no information		1	suppress OA (Outgoing Access)		2	suppress preferential CUG		3	suppress OA and preferential CUG
<b>&lt;n&gt;</b>	<u>0</u>	disable CUG																							
	1	enable CUG																							
<b>&lt;index&gt;</b>	<u>0</u> ...9	CUG index																							
	10	no index (preferred CUG taken from subscriber data)																							
<b>&lt;info&gt;</b>	<u>0</u>	no information																							
	1	suppress OA (Outgoing Access)																							
	2	suppress preferential CUG																							
	3	suppress OA and preferential CUG																							
Reference	Note																								

### 3.2.7 AT+CCWA Call Waiting Control

AT+CCWA Call Waiting Control	
Read Command <b>AT+CCWA?</b>	Response <b>+CCWA: &lt;n&gt;</b>  <b>OK</b>
Test Command <b>AT+CCWA=?</b>	Response <b>+CCWA: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Write Command <b>AT+CCWA=[&lt;n &gt;]</b>	Response TA controls the Call Waiting supplementary service. Activation, deactivation and status query are supported.

<p>[,&lt;mode&gt;[,&lt;class&gt;]]</p>	<p>If &lt;mode&gt;=2 and Command successful</p> <p><b>OK</b></p> <p>If &lt;mode&gt;=2 and Command successful</p> <p>+CCWA:&lt;status&gt;,&lt;class1&gt;[&lt;CR&gt;&lt;LF&gt;+CCWA:&lt;status&gt;,&lt;class2&gt;[...]]</p> <p><b>OK</b></p> <p>Note :&lt; status&gt;=0 should be returned only if service is not active for any &lt;class&gt; i.e. +CCWA: 0, 7 will be returned in this case.</p> <p>When mode=2, all active call waiting classes will be reported. In this mode the Command is abort able by pressing any key.</p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p>&lt;n&gt;            0        disable presentation of an unsolicited result code                         1        enable presentation of an unsolicited result code</p> <p>&lt;mode&gt;        when &lt;mode&gt; parameter not given, network is not interrogated                         0        disable                         1        enable                         2        query status</p> <p>&lt;class&gt;        is a sum of integers each representing a class of information                         1        voice (telephony)                         2        data (bearer service)                         4        fax (facsimile)                         7        default(equals to all classes)</p> <p>&lt;status&gt;      0        not active                         1        enable</p>
	<p>Unsolicited result code</p> <p>When the presentation Call Waiting at the TA is enabled (and Call Waiting is enabled) and a terminating call set up has attempted during an established call, an unsolicited result code is returned:</p> <p><b>+CCWA: &lt;number&gt;,&lt;type&gt;,&lt;class&gt;[,&lt;alpha&gt;]</b></p>
	<p>Parameters</p> <p>&lt;number&gt;     string type phone number of calling address in format specified by &lt;type&gt;</p> <p>&lt;type&gt;        type of address octet in integer format;                         129 Unknown type(ISDN format number)                         161 National number type(ISDN format)                         145 International number type(ISDN format )                         177 Network specific number(ISDN format)</p> <p>&lt;alpha&gt;       optional string type alphanumeric representation of &lt;number&gt; corresponding to the entry found in phone book</p>



Reference GSM 07.07	Note
------------------------	------

### 3.2.8 AT+CEER Extended Error Report

AT+CEER Extended Error Report	
Test Command AT+CEER=?	Response OK
Execution Command AT+CEER	Response TA returns an extended report of the reason for the last call release. +CEER: <report>  OK Parameter <report> Reason for last call release as number code
Reference GSM 07.07 [13]	Note

### 3.2.9 AT+CGMI Request Manufacturer Identification

AT+CGMI Request Manufacturer Identification	
Test Command AT+CGMI=?	Response OK
Execution Command AT+CGMI	Response TA returns manufacturer identification text. <manufacturer>  OK Parameter <manufacturer>
Reference GSM 07.07 [13]	Note

### 3.2.10 AT+CGMM Request Model Identification

AT+CGMM Request Model Identification	
Test Command AT+CGMM=?	Response OK
Execution	Response

Command <b>AT+CGMM</b>	TA returns product model identification text. <b>&lt;model&gt;</b>  <b>OK</b> Parameter <b>&lt;model&gt;</b> product model identification text.
Reference GSM 07.07 [13]	Note

### 3.2.11 AT+CGMR Request TA Revision Identification Of Software Release

<b>AT+CGMR Request TA Revision Identification Of Software Release</b>	
Test Command <b>AT+CGMR=?</b>	Response <b>OK</b>
Execution Command <b>AT+CGMR</b>	Response TA returns product software version identification text. <b>Revision:</b> <revision>  <b>OK</b> Parameter <b>&lt;revision&gt;</b> product software version identification text.
Reference GSM 07.07 [13]	Note

### 3.2.12 AT+CGSN Request Product Serial Number Identification (Identical With +GSN)

<b>AT+CGSN Request Product Serial Number Identification (Identical With +GSN)</b>	
Test Command <b>AT+CGSN=?</b>	Response <b>OK</b>
Execution Command <b>AT+CGSN</b>	Response see +GSN <b>&lt;sn&gt;</b>  <b>OK</b> Parameter see +GSN
Reference GSM 07.07 [13]	Note

### 3.2.13 AT+CSCS Select TE Character Set

<b>AT+CSCS Select TE Character Set</b>	
Test Command <b>AT+CSCS=?</b>	Response <b>+CSCS:</b> (list of supported <chset>s)

	<p><b>OK</b></p> <p>Parameters</p> <p><b>&lt;chset&gt;</b>    "GSM"        GSM default alphabet.</p> <p>                  "HEX"        character strings consist only of hexadecimal numbers from 00 to FF;</p> <p>                  "IRA "        international reference alphabet</p> <p>                  "PCCP"      PC character set Code</p> <p>                  "PCDN"      PC Danish/Norwegian character set</p> <p>                  "UCS2"      UCS2 alphabet</p> <p>                  "8859-1"    ISO 8859 Latin I character set</p>
Read Command <b>AT+CSCS?</b>	<p>Response</p> <p><b>+CSCS: &lt;chset&gt;</b></p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;chset&gt;</b> see Test Command</p>
Write Command <b>AT+CSCS=&lt;chset&gt;</b>	<p>Response</p> <p>Sets which character set &lt;chset&gt; are used by the TE. The TA can then convert character strings correctly between the TE and ME character sets.</p> <p>Parameter</p> <p><b>&lt;chset&gt;</b> see Test Command</p>
Reference GSM 07.07 [13]	Note

### 3.2.14 AT+CSTA Select Type Of Address

<b>AT+CSTA Select Type Of Address</b>	
Test Command <b>AT+CSTA=?</b>	<p>Response</p> <p><b>+CSTA: (129,145, 161,177)</b></p> <p><b>OK</b></p>
Read Command <b>AT+CSTA?</b>	<p>Response</p> <p><b>+CSTA: &lt;type&gt;</b></p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt; type &gt;</b> Current address type setting.</p>
Reference GSM 07.07 [13]	<p>Note</p> <p>The ATD Command overrides this setting when a number is dialed.</p> <p>129 Unknown type(ISDN format number)</p> <p>161 National number type(ISDN format)</p> <p>145 International number type(ISDN format )</p> <p>177 Network specific number(ISDN format)</p>

### 3.2.15 AT+CHLD Call Hold And Multiparty

AT+CHLD Call Hold And Multiparty																			
Test Command <b>AT+CHLD=?</b>	Response <b>+CHLD:</b> (list of supported <n>s)  <b>OK</b>																		
Write Command <b>AT+CHLD=[&lt;n&gt; ]</b>	Response TA controls the supplementary services Call Hold, Multiparty and Explicit Call Transfer. Calls can be put on hold, recovered, released, added to conversation, and transferred.  Note These supplementary services are only applicable to tele service 11 (Speech: Telephony).  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>																		
	Parameter <table border="0"> <tr> <td style="padding-right: 20px;"><b>&lt;n&gt;</b></td> <td style="padding-right: 20px;">0</td> <td>Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any).</td> </tr> <tr> <td></td> <td>1</td> <td>Terminate all active calls (if any) and accept the other call (waiting call or held call). It can not terminate active call if there is only one call.</td> </tr> <tr> <td></td> <td>1X</td> <td>Terminate the specific call number X (X= 1-7)( active, waiting or held)</td> </tr> <tr> <td></td> <td>2</td> <td>Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call</td> </tr> <tr> <td></td> <td>2X</td> <td>Place all active calls except call X (X= 1-7) on hold</td> </tr> <tr> <td></td> <td>3</td> <td>Add the held call to the active calls</td> </tr> </table>	<b>&lt;n&gt;</b>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any).		1	Terminate all active calls (if any) and accept the other call (waiting call or held call). It can not terminate active call if there is only one call.		1X	Terminate the specific call number X (X= 1-7)( active, waiting or held)		2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call		2X	Place all active calls except call X (X= 1-7) on hold		3	Add the held call to the active calls
<b>&lt;n&gt;</b>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any).																	
	1	Terminate all active calls (if any) and accept the other call (waiting call or held call). It can not terminate active call if there is only one call.																	
	1X	Terminate the specific call number X (X= 1-7)( active, waiting or held)																	
	2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call																	
	2X	Place all active calls except call X (X= 1-7) on hold																	
	3	Add the held call to the active calls																	
Reference	Note																		

### 3.2.16 AT+CIMI Request International Mobile Subscriber Identity

AT+CIMI Request International Mobile Subscriber Identity	
Test Command <b>AT+CIMI=?</b>	Response <b>OK</b> Parameter
Execution	Response

## SIM300 AT Commands Set

Command <b>AT+CIMI</b>	TA returns <IMSI> for identifying the individual SIM which is attached to ME. <b>&lt;IMSI&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameter <b>&lt;IMSI&gt;</b> International Mobile Subscriber Identity (string without double quotes)
Reference GSM 07.07 [13]	Note

### 3.2.17 AT+CKPD Keypad Control

<b>AT+CKPD Keypad Control</b>																															
Test Command <b>AT+CKPD=?</b>	Response <b>OK</b> Parameters																														
Write Command <b>AT+CKPD=[&lt;keys&gt; [,&lt;time&gt;[,&lt;pause&gt;]]]</b>	Response TA emulates ME keypad by giving each keystroke as a character in a string <keys>. <time>*0.1 seconds is the time to stroke each key and <pause>*0.1 seconds is the length of pause between two strokes.  Keystrokes <keys> are emulated. <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameters <b>&lt;keys&gt;</b> string of characters representing keys as listed in the following table (based on PCCA STD-101 Annex table I-3):  <table border="0"> <thead> <tr> <th>Char.:</th> <th>ASCII-Code:</th> <th>Note:</th> </tr> </thead> <tbody> <tr> <td>#</td> <td>35</td> <td>hash (number sign)</td> </tr> <tr> <td>*</td> <td>42</td> <td>star (*)</td> </tr> <tr> <td>0.. 9</td> <td>48... 57</td> <td>number keys</td> </tr> <tr> <td>:</td> <td>58</td> <td>escape character for manufacturer specific keys</td> </tr> <tr> <td>D/d</td> <td>68/100</td> <td>volume down</td> </tr> <tr> <td>E/e</td> <td>69/101</td> <td>connection end (END)</td> </tr> <tr> <td>R/r</td> <td>82/114</td> <td>recall last number (R/RCL/MR)</td> </tr> <tr> <td>S/s</td> <td>83/115</td> <td>connection start (SEND)</td> </tr> <tr> <td>U/u</td> <td>85/117</td> <td>volume up</td> </tr> </tbody> </table>	Char.:	ASCII-Code:	Note:	#	35	hash (number sign)	*	42	star (*)	0.. 9	48... 57	number keys	:	58	escape character for manufacturer specific keys	D/d	68/100	volume down	E/e	69/101	connection end (END)	R/r	82/114	recall last number (R/RCL/MR)	S/s	83/115	connection start (SEND)	U/u	85/117	volume up
Char.:	ASCII-Code:	Note:																													
#	35	hash (number sign)																													
*	42	star (*)																													
0.. 9	48... 57	number keys																													
:	58	escape character for manufacturer specific keys																													
D/d	68/100	volume down																													
E/e	69/101	connection end (END)																													
R/r	82/114	recall last number (R/RCL/MR)																													
S/s	83/115	connection start (SEND)																													
U/u	85/117	volume up																													

	<p><b>&lt;time&gt;</b> 0...255 seconds (default value is manufacturer specific, but should be so long that a normal ME can handle keystrokes correctly)</p> <p><b>&lt;pause&gt;</b> 0... 25.5 seconds (default value is manufacturer specific, but should be so long that a normal ME can handle keystrokes correctly)</p>
Reference GSM 07.07 [13]	Note

### 3.2.18 AT+CLCC List Current Calls Of ME

AT+CLCC List Current Calls Of ME	
Test Command AT+CLCC=?	Response <b>OK</b> Parameters
Execution Command AT+CLCC	<p>Response</p> <p>TA returns a list of current calls of ME.</p> <p>Note: If Command succeeds but no calls are available, no information response is sent to TE.</p> <p>[+CLCC: &lt;id1&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;[, &lt;number&gt;,&lt;type&gt;[, “ ” ]]</p> <p>[&lt;CR&gt;&lt;LF&gt;+CLCC: &lt;id2&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;[, &lt;number&gt;,&lt;type&gt;[, “ ” ]]</p> <p>[...]]</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;idx&gt;</b> integer type; call identification number as described in GSM 02.30[19] sub clause 4.5.5.1; this number can be used in +CHLD Command operations</p> <p><b>&lt;dir&gt;</b> 0 mobile originated (MO) call 1 mobile terminated (MT) call</p> <p><b>&lt;stat&gt;</b> state of the call: 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)</p> <p><b>&lt;mode&gt;</b> bearer/tele service: 0 voice 1 data</p>

	<p>2 fax</p> <p>9 unknown</p> <p><b>&lt;empty&gt;</b> 0 call is not one of multiparty (conference) call parties</p> <p>1 call is one of multiparty (conference) call parties</p> <p><b>&lt;number&gt;</b> string type phone number in format specified by <b>&lt;type&gt;</b></p> <p><b>&lt;type&gt;</b> type of address of octet in integer format;</p> <p>129 Unknown type(ISDN format number)</p> <p>161 National number type(ISDN format)</p> <p>145 International number type(ISDN format )</p> <p>177 Network specific number(ISDN format)</p>
Reference GSM 07.07 [13][14]	Note

### 3.2.19 AT+CLCK Facility Lock

<b>AT+CLCK Facility Lock</b>	
Test Command <b>AT+CLCK=?</b>	<p>Response</p> <p><b>+CLCK:</b> (list of supported <b>&lt;fac&gt;</b>s)</p> <p><b>OK</b></p> <p>Parameter see Write Command</p>
Write Command <b>AT+CLCK = &lt;fac&gt;, &lt;mode&gt; [,&lt;passwd&gt; [,&lt;class&gt;]]</b>	<p>Response</p> <p>This Command is used to lock, unlock or interrogate a ME or a network facility <b>&lt;fac&gt;</b>. Password is normally needed to do such actions. When querying the status of a network service (<b>&lt;mode&gt;=2</b>) the response line for 'not active' case (<b>&lt;status&gt;=0</b>) should be returned only if service is not active for any <b>&lt;class&gt;</b>.</p> <p>If <b>&lt;mode&gt;&lt;&gt;2</b> and Command is successful</p> <p><b>OK</b></p> <p>If <b>&lt;mode&gt;=2</b> and Command is successful</p> <p><b>+CLCK: &lt;status&gt;[,&lt;class1&gt;[&lt;CR&gt;&lt;LF&gt;</b> <b>+CLCK: &lt;status&gt;, class2....]]</b></p> <p><b>OK</b></p> <p>Parameters</p> <p><b>&lt;fac&gt;</b> "PS" PH-SIM (lock Phone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p>"SC" SIM (lock SIM card) (SIM asks password in ME power-up and when this lock Command issued)</p>

	<p>"AO" BAOC (Barr All Outgoing Calls) (refer GSM02.88[6] clause 1)</p> <p>"OI" BOIC (Barr Outgoing International Calls) (refer GSM02.88[6] clause 1)</p> <p>"OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer GSM02.88[6] clause 1)</p> <p>"AI" BAIC (Barr All Incoming Calls) (refer GSM02.88[6] clause 2)</p> <p>"IR" BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer GSM02.88 [6] clause 2)</p> <p>"AB" All Barring services (refer GSM02.30[19]) (applicable only for &lt;mode&gt;=0)</p> <p>"AG" All out Going barring services (refer GSM02.30[19]) (applicable only for &lt;mode&gt;=0)</p> <p>"AC" All in Coming barring services (refer GSM02.30[19]) (applicable only for &lt;mode&gt;=0)</p> <p>"FD" SIM fixed dialing memory: If the mobile is locked to "FD", only the phone numbers stored to the "FD" memory can be dialed</p> <p>"BN" SIM barred memory: If the mobile is locked to "BN", the phone numbers stored to the "BN" memory can not be dialed</p> <p>"PF" Lock Phone to the very first SIM card</p> <p>"PN" Network Personalization (refer GSM 02.22[33])</p> <p>"PU" network subset Personalization (refer GSM 02.22[33])</p> <p>"PP" service Provider Personalization (refer GSM 02.22[33])</p> <p>"PC" Corporate Personalization (refer GSM 02.22[33])</p> <p>&lt;mode&gt; 0 unlock 1 lock 2 query status</p> <p>&lt;passwd&gt; password</p> <p>&lt;class&gt; 1 voice 2 data 4 fax 7 all classes (default)</p> <p>&lt;status&gt; 0 off 1 on</p>
Reference <b>GSM 07.07 [14]</b>	Note



### 3.2.20 AT+CLIP Calling Line Identification Presentation

<b>AT+CLIP Calling Line Identification Presentation</b>																
Read Command <b>AT+CLIP?</b>	<p>Response</p> <p><b>+CLIP: &lt;n&gt;, &lt;m&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters see Write Command</p>															
Test Command <b>AT+CLIP=?</b>	<p>Response</p> <p><b>+CLIP: (list of supported &lt;n&gt;s)</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>															
Write Command <b>AT+CLIP=[&lt;n&gt;]</b>	<p>Response</p> <p>TA enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <table border="0"> <tr> <td><b>&lt;n&gt;</b></td> <td>0</td> <td>suppress unsolicited result codes</td> </tr> <tr> <td></td> <td>1</td> <td>display unsolicited result codes</td> </tr> <tr> <td><b>&lt;m&gt;</b></td> <td>0</td> <td>CLIP not provisioned</td> </tr> <tr> <td></td> <td>1</td> <td>CLIP provisioned</td> </tr> <tr> <td></td> <td>2</td> <td>unknown</td> </tr> </table>	<b>&lt;n&gt;</b>	0	suppress unsolicited result codes		1	display unsolicited result codes	<b>&lt;m&gt;</b>	0	CLIP not provisioned		1	CLIP provisioned		2	unknown
<b>&lt;n&gt;</b>	0	suppress unsolicited result codes														
	1	display unsolicited result codes														
<b>&lt;m&gt;</b>	0	CLIP not provisioned														
	1	CLIP provisioned														
	2	unknown														

	<p><b>Unsolicited result code</b></p> <p>When the presentation of the CLI at the TE is enabled (and calling subscriber allows), an unsolicited result code is returned after every RING (or +CRING: &lt;type&gt;) at a mobile terminating call.</p> <p><b>+CLIP: &lt;number&gt;, &lt;type&gt;,"",&lt;alphaId&gt;,&lt;CLI validity&gt;</b></p> <p>Parameters</p> <p><b>&lt;number&gt;</b> string type phone number of calling address in format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b> type of address octet in integer format;        129 Unknown type(ISDN format number)        161 National number type(ISDN format)        145 International number type(ISDN format )        177 Network specific number(ISDN format)</p> <p><b>&lt;alphaId&gt;</b> string type alphanumeric representation of &lt;number&gt; corresponding to the entry found in phone book</p> <p><b>&lt;CLI validity&gt;</b> 0 CLI valid        1 CLI has been withheld by the originator        2 CLI is not available due to interworking problems or limitations of originating network</p>
Reference	Note

### 3.2.21 AT+CLIR Calling Line Identification Restriction

<b>AT+CLIR Calling Line Identification Restriction</b>	
Read Command <b>AT+CLIR?</b>	Response <b>+CLIR: &lt;n&gt;, &lt;m&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Test Command <b>AT+CLIR=?</b>	Response <b>+CLIR: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Write Command <b>AT+CLIR=[&lt;n&gt;]</b>	Response TA restricts or enables the presentation of the CLI to the called party when originating a call. The Command overrides the CLIR subscription (default is restricted or

	<p>allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite Command.</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
	<p>Parameters</p> <p><b>&lt;n&gt;</b> (parameter sets the adjustment for outgoing calls):</p> <ul style="list-style-type: none"> <li><u>0</u> presentation indicator is used according to the subscription of the CLIR service</li> <li>1 CLIR invocation</li> <li>2 CLIR suppression</li> </ul> <p><b>&lt;m&gt;</b> (parameter shows the subscriber CLIR service status in the network):</p> <ul style="list-style-type: none"> <li>0 CLIR not provisioned</li> <li>1 CLIR provisioned in permanent mode</li> <li>2 unknown (e.g. no network, etc.)</li> <li>3 CLIR temporary mode presentation restricted</li> <li>4 CLIR temporary mode presentation allowed</li> </ul>
Reference	Note

### 3.2.22 AT+CMEE Report Mobile Equipment Error

<b>AT+CMEE Report Mobile Equipment Error</b>	
Test Command <b>AT+CMEE=?</b>	<p>Response</p> <p><b>+CMEE:</b> (list of supported &lt;n&gt;s)</p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
Read Command <b>AT+CMEE?</b>	<p>Response</p> <p><b>+CMEE:</b> &lt;n&gt;</p> <p><b>OK</b></p> <p>Parameters See Write Command</p>
Write Command <b>AT+CMEE=[&lt;n&gt; &lt;n&gt;]</b>	<p>Response</p> <p>TA disables or enables the use of result code <b>+CME ERROR: &lt;err&gt;</b> as an indication of an error relating to the functionality of the ME.</p> <p><b>OK</b></p>

	Parameters <n>        0     disable result code 1     enable result code and use numeric values 2     enable result code and use verbose values
Reference GSM 07.07 [13]	Note

### 3.2.23 AT+COLP Connected Line Identification Presentation

AT+COLP Connected Line Identification Presentation	
Read Command <b>AT+COLP?</b>	Response <b>+COLP: &lt;n&gt;,&lt;m&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
	Parameters See Write Command
Test Command <b>AT+COLP=?</b>	Response <b>+COLP: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
	Parameters See Write Command
Write Command <b>AT+COLP=[&lt;n&gt; ]</b>	Response TA enables or disables the presentation of the COL (Connected Line) at the TE for a mobile originated call. It has no effect on the execution of the supplementary service COLR in the network. Intermediate result code is returned from TA to TE before any +CR or V.25ter responses. <b>OK</b>
	Parameters <b>&lt;n&gt;</b> (parameter sets/shows the result code presentation status in the TA): 0     disable 1     enable <b>&lt;m&gt;</b> (parameter shows the subscriber COLP service status in the network): 0     COLP not provisioned 1     COLP provisioned 2     unknown (e.g. no network, etc.)

	<p>Intermediate result code</p> <p>When enabled (and called subscriber allows), an intermediate result code is returned before any +CR or V.25ter responses:</p> <p><b>+COLP: &lt;number&gt;,&lt;type&gt;[,&lt;subaddr&gt;,&lt;satype&gt; [,&lt;alpha&gt;]]</b></p>
	<p>Parameters</p> <p><b>&lt;number&gt;</b> string type phone number of format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b> type of address octet in integer format;</p> <p>129 Unknown type(ISDN format number)</p> <p>161 National number type(ISDN format)</p> <p>145 International number type(ISDN format )</p> <p>177 Network specific number(ISDN format)</p> <p><b>&lt;subaddr&gt;</b> string type sub address of format specified by &lt;satype&gt;</p> <p><b>&lt;satype&gt;</b> type of sub address octet in integer format (refer GSM 04.08 [8] sub clause 10.5.4.8)</p> <p><b>&lt;alpha&gt;</b> optional string type alphanumeric representation of &lt;number&gt; corresponding to the entry found in phone book</p>
Reference	Note

### 3.2.24 AT+COPS Operator Selection

AT+COPS Operator Selection	
<p>Test Command</p> <p><b>AT+COPS=?</b></p>	<p>Response</p> <p>TA returns a list of quadruplets, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network, networks referenced in SIM, and other networks.</p> <p><b>+COPS:</b> (list of supported&lt;stat&gt;, long alphanumeric &lt;oper&gt;, short alphanumeric &lt;oper&gt;, numeric &lt;oper&gt;)s [,(list of supported &lt;mode&gt;s),(list of supported &lt;format&gt;s)]</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
	<p>Parameters</p> <p>see Write Command</p>

<p>Read Command <b>AT+COPS?</b></p>	<p>Response TA returns the current mode and the currently selected operator. If no operator is selected, &lt;format&gt; and &lt;oper&gt; are omitted. <b>+COPS: &lt;mode&gt;[, &lt;format&gt;[, &lt;oper&gt;]]</b></p> <p><b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters see Write Command</p>																																							
<p>Write Command <b>AT+COPS = &lt;mode&gt; [,&lt;format&gt;[,&lt;operator&gt;]]</b></p>	<p>Response TA forces an attempt to select and register the GSM network operator. If the selected operator is not available, no other operator shall be selected (except &lt;mode&gt;=4). The selected operator name format shall apply to further read commands (+COPS?).</p> <p><b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <table border="0"> <tr> <td><b>&lt;stat&gt;</b></td> <td>0</td> <td>unknown</td> </tr> <tr> <td></td> <td>1</td> <td>operator available</td> </tr> <tr> <td></td> <td>2</td> <td>operator current</td> </tr> <tr> <td></td> <td>3</td> <td>operator forbidden</td> </tr> <tr> <td><b>&lt;oper&gt;</b></td> <td></td> <td>operator in format as per &lt;mode&gt;</td> </tr> <tr> <td><b>&lt;mode&gt;</b></td> <td>0</td> <td>automatic mode; &lt;oper&gt; field is ignored</td> </tr> <tr> <td></td> <td>1</td> <td>manual operator selection; &lt;oper&gt; field shall be present</td> </tr> <tr> <td></td> <td>2</td> <td>manual deregister from network</td> </tr> <tr> <td></td> <td>3</td> <td>set only &lt;format&gt; (for read Command +COPS?) – not shown in Read Command response</td> </tr> <tr> <td></td> <td>4</td> <td>manual/automatic selected; if manual selection fails, automatic mode (&lt;mode&gt;=0) is entered</td> </tr> <tr> <td><b>&lt;format&gt;</b></td> <td>0</td> <td>long format alphanumeric &lt;oper&gt;;can be up to 16 characters long</td> </tr> <tr> <td></td> <td>1</td> <td>short format alphanumeric &lt;oper&gt;</td> </tr> <tr> <td></td> <td>2</td> <td>numeric &lt;oper&gt;; GSM Location Area Identification number</td> </tr> </table>	<b>&lt;stat&gt;</b>	0	unknown		1	operator available		2	operator current		3	operator forbidden	<b>&lt;oper&gt;</b>		operator in format as per <mode>	<b>&lt;mode&gt;</b>	0	automatic mode; <oper> field is ignored		1	manual operator selection; <oper> field shall be present		2	manual deregister from network		3	set only <format> (for read Command +COPS?) – not shown in Read Command response		4	manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered	<b>&lt;format&gt;</b>	0	long format alphanumeric <oper>;can be up to 16 characters long		1	short format alphanumeric <oper>		2	numeric <oper>; GSM Location Area Identification number
<b>&lt;stat&gt;</b>	0	unknown																																						
	1	operator available																																						
	2	operator current																																						
	3	operator forbidden																																						
<b>&lt;oper&gt;</b>		operator in format as per <mode>																																						
<b>&lt;mode&gt;</b>	0	automatic mode; <oper> field is ignored																																						
	1	manual operator selection; <oper> field shall be present																																						
	2	manual deregister from network																																						
	3	set only <format> (for read Command +COPS?) – not shown in Read Command response																																						
	4	manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered																																						
<b>&lt;format&gt;</b>	0	long format alphanumeric <oper>;can be up to 16 characters long																																						
	1	short format alphanumeric <oper>																																						
	2	numeric <oper>; GSM Location Area Identification number																																						
<p>Reference GSM 07.07 [14]</p>	<p>Note</p>																																							

### 3.2.25 AT+CPAS Mobile Equipment Activity Status

AT+CPAS Mobile Equipment Activity Status													
Test Command <b>AT+CPAS=?</b>	Response <b>+CPAS:</b> (list of supported <b>&lt;pas&gt;</b> s)  <b>OK</b>												
	Parameter see Execution Command												
Execution Command <b>AT+CPAS</b>	Response TA returns the activity status of ME. <b>+CPAS:</b> <b>&lt;pas&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR:</b> <b>&lt;err&gt;</b>												
	Parameter <table border="0"> <tr> <td><b>&lt;pas&gt;</b></td> <td>0</td> <td>ready</td> </tr> <tr> <td></td> <td>2</td> <td>unknown (ME is not guaranteed to respond to instructions)</td> </tr> <tr> <td></td> <td>3</td> <td>ringing</td> </tr> <tr> <td></td> <td>4</td> <td>call in progress or call hold</td> </tr> </table>	<b>&lt;pas&gt;</b>	0	ready		2	unknown (ME is not guaranteed to respond to instructions)		3	ringing		4	call in progress or call hold
<b>&lt;pas&gt;</b>	0	ready											
	2	unknown (ME is not guaranteed to respond to instructions)											
	3	ringing											
	4	call in progress or call hold											
Reference GSM 07.07 [13]	Note												

### 3.2.26 AT+CPBF Find Phonebook Entries

AT+CPBF Find Phonebook Entries	
Test Command <b>AT+CPBF=?</b>	Response <b>+CPBF:</b> maximum length of field <b>&lt;nlength&gt;</b> ,maximum length of field <b>&lt;tlength&gt;</b>  <b>OK</b>
	Parameters see Write Command
Write Command <b>AT+CPBF=[&lt;findtext&gt;]</b>	Response TA returns phone book entries (from the current phone book memory storage selected with +CPBS) which contain alphanumeric string <b>&lt;findtext&gt;</b> .  <b>[+CPBF: &lt;index1&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt;[[...]            &lt;CR&gt;&lt;LF&gt;+CBPF: &lt;index2&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt;]</b>  <b>OK</b>

	<p>Parameters</p> <p><b>&lt;findtext&gt;</b> string type field of maximum length &lt;tlength&gt; in current TE character set specified by +CSCS.</p> <p><b>&lt;index1&gt;</b> integer type values in the range of location numbers of phone book memory</p> <p><b>&lt;index2&gt;</b> integer type values in the range of location numbers of phone book memory</p> <p><b>&lt;number&gt;</b> string type phone number of format &lt;type&gt; &lt;type&gt;type of address octet in integer format ; 129 Unknown type(ISDN format number) 161 National number type(ISDN format) 145 International number type(ISDN format ) 177 Network specific number(ISDN format)</p> <p><b>&lt;text&gt;</b> string type field of maximum length &lt;tlength&gt; in current TE character set specified by +CSCS.</p> <p><b>&lt;nlength&gt;</b> integer type value indicating the maximum length of field &lt;number&gt;</p> <p><b>&lt;tlength&gt;</b> integer type value indicating the maximum length of field &lt;text&gt;</p>
Reference GSM 07.07 [13]	Note

### 3.2.27 AT+CPBR Read Current Phonebook Entries

<b>AT+CPBR Read Current Phonebook Entries</b>	
Test Command <b>AT+CPBR=?</b>	<p>Response</p> <p>TA returns location range supported by the current storage as a compound value and the maximum lengths of &lt;number&gt; and &lt;text&gt; fields.</p> <p><b>+CPBR:</b> (list of supported &lt;index&gt;s), &lt;nlength&gt;, &lt;tlength&gt;</p> <p><b>OK</b></p> <p>Parameters</p> <p><b>&lt;index&gt;</b> location number</p> <p><b>&lt;nlength&gt;</b> max. length of phone number</p> <p><b>&lt;tlength&gt;</b> max. length of text for number</p>



<p>Write Command <b>AT+CPBR=</b> <b>&lt;index1&gt;</b> <b>[, &lt;index2&gt;]</b></p>	<p>Response</p> <p>TA returns phone book entries in location number range &lt;index1&gt;...&lt;index2&gt; from the current phone book memory storage selected with +CPBS. If &lt;index2&gt; is left out, only location &lt;index1&gt; is returned.</p> <p><b>+CPBR:&lt;index1&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt;[&lt;CR&gt;&lt;LF&gt;+CPBR: .....+CPBR: &lt;index2&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt;]</b></p> <p><b>OK</b></p> <p>Parameters</p> <p><b>&lt;index1&gt;</b> read as of this location number  <b>&lt;index2&gt;</b> read to this location number  <b>&lt;number&gt;</b> phone number  <b>&lt;type&gt;</b> type of number  <b>&lt;text&gt;</b> ext for phone number in current TE character set specified by +CSCS.</p>
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>

### 3.2.28 AT+CPBS Select Phonebook Memory Storage

<p><b>AT+CPBS Select Phonebook Memory Storage</b></p>	
<p>Test Command <b>AT+CPBS=?</b></p>	<p>Response</p> <p><b>+CPBS: (list of supported &lt;storage&gt;s)</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
<p>Read Command <b>AT+CPBS?</b></p>	<p>Response</p> <p><b>+CPBS: &lt;storage&gt;[,&lt;used&gt;,&lt;total&gt;]</b></p> <p><b>OK</b></p> <p>Parameters See Write Command</p>
<p>Write Command <b>AT+CPBS=&lt;stor</b> <b>age&gt;[,&lt;used&gt;,&lt;to</b> <b>tal&gt;]</b></p>	<p>Response</p> <p>TA selects current phone book memory storage, which is used by other phone book commands.</p> <p><b>OK</b></p>

	<p>Parameters</p> <p><b>&lt;storage&gt;</b> "MC" ME missed (unanswered) calls list  "RC" ME received calls list  "DC" ME dialed calls list(+CPBW may not be applicable or this storage)(same as LD)  "LA" Last Number All list (LND/LNM/LNR)  "ME" ME phonebook  "BN" SIM barred dialed number  "SD" SIM service dial number  "VM" SIM voice mailbox  "FD" SIM fix dialing-phone book  "LD" SIM last-dialling-phone book  "ON" SIM (or ME) own numbers (MSISDNs) list  "SM" SIM phonebook</p> <p><b>&lt;used&gt;</b> integer type value indicating the total number of used Locations in selected memory</p> <p><b>&lt;total&gt;</b> integer type value indicating the total number of locations In selected memory</p>
Reference GSM 07.07 [13]	Note

### 3.2.29 AT+CPBW Write Phonebook Entry

<b>AT+CPBW Write Phonebook Entry</b>	
<p>Test Command <b>AT+CPBW=?</b></p>	<p>Response</p> <p>TA returns location range supported by the current storage, the maximum length of &lt;number&gt; field, supported number formats of the storage, and the maximum length of &lt;text&gt; field.</p> <p><b>+CPBW:</b> (list of supported &lt;index&gt;s), &lt;nlength&gt;, (list of supported &lt;type&gt;s), &lt;tlength&gt;</p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
<p>Write Command <b>AT+CPBW= &lt;index1&gt; [, &lt;number&gt;, [&lt;type&gt;, [&lt;text&gt;]]]</b></p>	<p>Response</p> <p>TA writes phone book entry in location number &lt;index&gt; in the current phone book memory storage selected with +CPBS. Entry fields written are phone number &lt;number&gt; (in the format &lt;type&gt;) and text &lt;text&gt; associated with the number. If those fields are omitted, phone book entry is deleted. If &lt;index&gt; is left out, but &lt;number&gt; is given, entry is written to the first free location in the phone book.</p> <p><b>OK</b></p>

	<p>Parameters</p> <p><b>&lt;nlength&gt;</b> max. length of phone number</p> <p><b>&lt;tlength&gt;</b> max. length of text for number</p> <p><b>&lt;index&gt;</b> location number</p> <p><b>&lt;number&gt;</b> phone number</p> <p><b>&lt;type&gt;</b> type of number;</p> <p>129 Unknown type(ISDN format number)</p> <p>161 National number type(ISDN format)</p> <p>145 International number type(ISDN format )</p> <p>177 Network specific number(ISDN format)</p> <p><b>&lt;text&gt;</b> text for phone number in current TE character set specified by +CSCS.</p> <p><b>Note:</b> The following characters in &lt;text&gt; must be entered via the escape sequence:</p> <table border="1"> <thead> <tr> <th>GSM char.</th> <th>Seq.</th> <th>Seq.(hex)</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>\</td> <td>\5C</td> <td>5C 35 43</td> <td>(backslash)</td> </tr> <tr> <td>“</td> <td>\22</td> <td>5C 32 32</td> <td>(string delimiter)</td> </tr> <tr> <td>BSP</td> <td>\08</td> <td>5C 30 38</td> <td>(backspace)</td> </tr> <tr> <td>NULL</td> <td>\00</td> <td>5C 30 30</td> <td>(GSM null)</td> </tr> </tbody> </table> <p>‘0’ (GSM null) may cause problems for application layer software when reading string lengths.</p>	GSM char.	Seq.	Seq.(hex)	Note	\	\5C	5C 35 43	(backslash)	“	\22	5C 32 32	(string delimiter)	BSP	\08	5C 30 38	(backspace)	NULL	\00	5C 30 30	(GSM null)
GSM char.	Seq.	Seq.(hex)	Note																		
\	\5C	5C 35 43	(backslash)																		
“	\22	5C 32 32	(string delimiter)																		
BSP	\08	5C 30 38	(backspace)																		
NULL	\00	5C 30 30	(GSM null)																		
Reference GSM 07.07 [13]	Note																				

### 3.2.30 AT+CPIN Enter PIN

<b>AT+CPIN Enter PIN</b>	
Test Command <b>AT+CPIN=?</b>	Response <b>OK</b> Parameter see Write Command
Read Command <b>AT+CPIN?</b>	Response TA returns an alphanumeric string indicating whether some password is required or not. <b>+CPIN: &lt;code&gt;</b>  <b>OK</b>

	<p>Parameter</p> <p><b>&lt;code&gt;</b> READY no further entry needed</p> <p>SIM PIN ME is waiting for SIM PIN</p> <p>SIM PUK ME is waiting for SIM PUK</p> <p>PH_SIM PIN ME is waiting for phone to SIM card (antitheft)</p> <p>PH_SIM PUK ME is waiting for SIM PUK (antitheft)</p> <p>SIM PIN2 PIN2, e.g. for editing the FDN book possible only if preceding Command was acknowledged with +CME ERROR:17</p> <p>SIM PUK2 possible only if preceding Command was acknowledged with error +CME ERROR: 18.</p>
<p>Write Command</p> <p><b>AT+CPIN=&lt;pin&gt;</b>  <b>[, &lt;new pin&gt;]</b></p>	<p>Response</p> <p>TA stores a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken and an error message, +CME ERROR, is returned to TE.</p> <p>If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, &lt;new pin&gt;, is used to replace the old pin in the SIM.</p> <p><b>OK</b></p> <p>Parameters</p> <p><b>&lt;pin&gt;</b> string type; password</p> <p><b>&lt;new pin&gt;</b> string type; If the PIN required is SIM PUK or SIMPUK2: new password</p>
<p>Reference</p> <p>GSM 07.07 [13]</p>	<p>Note</p>

### 3.2.31 AT+CPWD Change Password

<p><b>AT+CPWD Change Password</b></p>	
<p>Test Command</p> <p><b>AT+CPWD=?</b></p>	<p>Response</p> <p>TA returns a list of pairs which present the available facilities and the maximum length of their password.</p> <p><b>+CPWD:</b> (list of supported <b>&lt;fac&gt;</b>s, <b>&lt;pwdlength&gt;</b>s)</p> <p><b>OK</b></p> <p>Parameters</p> <p><b>&lt;fac&gt;</b></p> <p>otherwise see Write Command, without "FD"</p> <p><b>&lt;pwdlength&gt;</b> integer max. length of password</p>
<p>Write Command</p> <p><b>AT+CPWD =</b>  <b>&lt;fac&gt;</b>,  <b>&lt;oldpwd&gt;</b>,</p>	<p>Response</p> <p>TA sets a new password for the facility lock function.</p> <p><b>OK</b></p>

	Parameters
	<p><b>&lt;fac&gt;</b></p> <p>"PS" Phone locked to SIM (device code). The "PS" password may either be individually specified by the client or, depending on the subscription, supplied from the provider (e.g. with a prepaid mobile).</p> <p>"SC" SIM (lock SIM card) (SIM asks password in ME power-up and when this lock Command issued)</p> <p>"AO" BAOC (Barr All Outgoing Calls) (refer GSM02.88[6] clause 1)</p> <p>"OI" BOIC (Barr Outgoing International Calls) (refer GSM02.88[6] clause 1)</p> <p>"OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer GSM02.88[6] clause 1)</p> <p>"AI" BAIC (Barr All Incoming Calls) (refer GSM02.88[6] clause 2)</p> <p>"IR" BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer GSM02.88 [6] clause 2)</p> <p>"AB" All Barring services (refer GSM02.30[19]) (applicable only for &lt;mode&gt;=0)</p> <p>"AG" All outgoing barring services (refer GSM02.30[19]) (applicable only for &lt;mode&gt;=0)</p> <p>"AC" All incoming barring services (refer GSM02.30[19]) (applicable only for &lt;mode&gt;=0)</p> <p>"FD" SIM fixed dialing memory feature</p> <p>"BN" SIM barred memory feature</p> <p>"P2" SIM PIN2</p> <p><b>&lt;oldpwd&gt;</b> password specified for the facility from the user interface or with Command. If an old password has not yet been set, &lt;oldpwd&gt; is not to enter.</p> <p><b>&lt;newpwd&gt;</b> new password</p>
Reference GSM 07.07 [13]	Note

### 3.2.32 AT+CR Service Reporting Control

AT+CR Service Reporting Control	
Test Command <b>AT+CR=?</b>	Response <b>+CR:</b> (list of supported <b>&lt;mode&gt;</b> s)
	<b>OK</b>
	Parameter see Write Command

Read Command <b>AT+CR?</b>	Response <b>+CR: &lt;mode&gt;</b>  <b>OK</b>  Parameters see Write Command																		
Write Command <b>AT+CR=[&lt;mode &gt;]</b>	Response TA controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE at a call set up. <b>OK</b> Parameter <table border="0" data-bbox="488 689 815 763"> <tr> <td><b>&lt;mode&gt;</b></td> <td><u>0</u></td> <td>disable</td> </tr> <tr> <td></td> <td>1</td> <td>enable</td> </tr> </table> Intermediate result code If enabled, an intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) is transmitted. <b>+CR:&lt;serv&gt;</b> Parameter <table border="0" data-bbox="488 1122 1174 1272"> <tr> <td><b>&lt;serv&gt;</b></td> <td>ASYNC</td> <td>asynchronous transparent</td> </tr> <tr> <td></td> <td>SYNC</td> <td>synchronous transparent</td> </tr> <tr> <td></td> <td>REL ASYNC</td> <td>asynchronous non-transparent</td> </tr> <tr> <td></td> <td>REL SYNC</td> <td>synchronous non-transparent</td> </tr> </table>	<b>&lt;mode&gt;</b>	<u>0</u>	disable		1	enable	<b>&lt;serv&gt;</b>	ASYNC	asynchronous transparent		SYNC	synchronous transparent		REL ASYNC	asynchronous non-transparent		REL SYNC	synchronous non-transparent
<b>&lt;mode&gt;</b>	<u>0</u>	disable																	
	1	enable																	
<b>&lt;serv&gt;</b>	ASYNC	asynchronous transparent																	
	SYNC	synchronous transparent																	
	REL ASYNC	asynchronous non-transparent																	
	REL SYNC	synchronous non-transparent																	
Reference GSM 07.07 [13]	Note																		

### 3.2.33 AT+CRC Set Cellular Result Codes For Incoming Call Indication

<b>AT+CRC Set Cellular Result Codes For Incoming Call Indication</b>	
Test Command <b>AT+CRC=?</b>	Response <b>+CRC: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>  Parameters see Write Command
Read Command <b>AT+CRC?</b>	Response <b>+CRC: &lt;mode&gt;</b>  <b>OK</b>  Parameter see Write Command

<p>Write Command <b>AT+CRC=[&lt;mode&gt;]</b></p>	<p>Response TA controls whether or not the extended format of incoming call indication is used. <b>OK</b> Parameter <b>&lt;mode&gt;</b>    <u>0</u>    disable extended format                   1    enable extended format</p> <hr/> <p>Unsolicited result code When enabled, an incoming call is indicated to the TE with unsolicited result code +CRING: &lt;type&gt; instead of the normal RING. Parameter <b>&lt;type&gt;</b>    ASYNC    asynchronous transparent                   SYNC    synchronous transparent                   REL ASYNC asynchronous non-transparent                   REL SYNC synchronous non-transparent                   FAX    facsimile                   VOICE    voice</p>
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>

### 3.2.34 AT+CREG Network Registration

<b>AT+CREG Network Registration</b>	
<p>Test Command <b>AT+CREG=?</b></p>	<p>Response <b>+CREG:</b> (list of supported &lt;n&gt;s)  <b>OK</b> Parameters see Write Command</p>
<p>Read Command <b>AT+CREG?</b></p>	<p>Response TA returns the status of result code presentation and an integer &lt;stat&gt; which shows whether the network has currently indicated the registration of the ME. Location information elements &lt;lac&gt; and &lt;ci&gt; are returned only when &lt;n&gt;=2 and ME is registered in the network. <b>+CREG:</b> &lt;n&gt;,&lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt;</p>

<p>Write Command <b>AT+CREG=&lt;n&gt;</b></p>	<p>Response</p> <p>TA controls the presentation of an unsolicited result code +CREG: &lt;stat&gt; when &lt;n&gt;=1 and there is a change in the ME network registration status.</p> <p>OK</p> <hr/> <p>Parameters</p> <p><b>&lt;n&gt;</b>      0      disable network registration unsolicited result code                   1      enable network registration unsolicited result code     +CREG: &lt;stat&gt;                   2      enable network registration unsolicited result code with location information</p> <p><b>&lt;stat&gt;</b>    0      not registered, ME is not currently searching a new operator to register to                   1      registered, home network                   2      not registered, but ME is currently searching a new operator to register to                   3      registration denied                   4      unknown                   5      registered, roaming</p> <p><b>&lt;lac&gt;</b>      string type; two byte location area code in hexadecimal format</p> <p><b>&lt; ci &gt;</b>      string type; two byte cell ID in hexadecimal format</p> <hr/> <p>Unsolicited result code</p> <p>If &lt;n&gt;=1 and there is a change in the ME network registration status  <b>+CREG:</b> &lt;stat&gt;</p> <p>If &lt;n&gt;=2 and there is a change in the ME network registration status or a change of the network cell:  <b>+CREG:</b> &lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]</p> <p>Parameters  see Write Command</p>
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>



### 3.2.35 AT+CRLP Select Radio Link Protocol Parameter

AT+CRLP Select Radio Link Protocol Parameter	
Test Command <b>AT+CRLP=?</b>	Response TA returns values supported. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present).  <b>+CRLP:</b> (list of supported <iws>s), (list of supported <mws>s), (list of supported <T1>s), (list of supported <N2>s), (list of supported <ver1>s), (list of supported <T4>s)  <b>OK</b>
	Parameters see Write Command
Read Command <b>AT+CRLP?</b>	Response TA returns current settings for RLP version. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present).  <b>+CRLP:</b> <iws>,<mws>,<T1>,<N2>,<ver1>,<T4>  <b>OK</b>
	Parameters see Write Command
Write Command <b>AT+CRLP=[&lt;iws&gt; &gt;,&lt;mws&gt;[,&lt;T1&gt;[ ,&lt;N2&gt;[,&lt;ver&gt;[,&lt;T4&gt;]]]]]</b>	Response TA sets radio link protocol (RLP) parameters used when non-transparent data calls are setup.  <b>OK</b>
	Parameters <iws> 0-61 Interworking window size (IWF to MS) <mws> 0-61 Mobile window size(MS to IWF) <T1> 39-255 acknowledgment timer T1 in 10 ms units <N2> 1-255 retransmission attempts N2 <verx> 0-1 RLP version number in integer format; when Version indication is not present it shall equal 0. Note: Versions 0 and 1 share the same parameter set. <T4> 3-255 re-sequencing period in integer format, in units of 10 ms. This is NOT used for RLP versions 0 and 1.
Reference GSM 07.07 [13]	Note

### 3.2.36 AT+CRSM Restricted SIM Access

AT+CRSM Restricted SIM Access	
Test Command <b>AT+CRSM=?</b>	Response <b>OK</b>
Write Command <b>AT+CRSM=&lt;Command&gt;[,&lt;fileId&gt;[,&lt;P1&gt;,&lt;P2&gt;,&lt;P3&gt;[,&lt;data&gt;]]]</b>	Response <b>+CRSM: &lt;sw1&gt;, &lt;sw2&gt; [,&lt;response&gt;]</b>  <b>OK / ERROR / +CME ERROR: &lt;err&gt;</b>  Parameters <b>&lt;Command&gt;</b> 176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS all other values are reserved; refer GSM 11.11. <b>&lt;fileId&gt;</b> integer type; this is the identifier for an elementary data file on SIM. Mandatory for every Command except STATUS <b>&lt;P1&gt;,&lt;P2&gt;,&lt;P3&gt;</b> integer type, range 0 - 255 parameters to be passed on by the ME to the SIM; refer GSM 11.11. <b>&lt;data&gt;</b> information which shall be written to the SIM (hexadecimal character format) <b>&lt;sw1&gt;, &lt;sw2&gt;</b> integer type, range 0 - 255 status information from the SIM about the execution of the actual Command. These parameters are delivered to the TE in both cases, on successful or failed execution of the Command; refer GSM 11.11. <b>&lt;response&gt;</b> response of a successful completion of the Command previously issued (hexadecimal character format)
Reference GSM 07.07 GSM 11.11	Note

### 3.2.37 AT+CSQ Signal Quality Report

AT+CSQ Signal Quality Report	
Test Command <b>AT+CSQ=?</b>	Response <b>+CSQ: (list of supported &lt;rssi&gt;s),(list of supported &lt;ber&gt;s)</b>  <b>OK</b>

**SIM300 AT Commands Set**

<p>Execution Command <b>AT+CSQ</b></p>	<p>Response <b>+CSQ: &lt;rss&gt;,&lt;ber&gt;</b></p> <p><b>OK</b></p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Execution Command returns received signal strength indication &lt;rss&gt; and channel bit error rate &lt;ber&gt; from the ME. Test Command returns values supported by the TA.</p> <p>Parameters</p> <p><b>&lt;rss&gt;</b></p> <p>0 -113 dBm or less 1 -111 dBm 2...30 -109... -53 dBm 31 -51 dBm or greater 99 not known or not detectable</p> <p><b>&lt;ber&gt;</b> (in percent):</p> <p>0...7 as RXQUAL values in the table in GSM 05.08 [20] subclause 8.2.4 99 not known or not detectable</p>
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>

**3.2.38 AT+FCLASS FAX: Select, Read Or Test Service Class**

<p><b>AT+FCLASS FAX: Select, Read Or Test Service Class</b></p>	
<p>Test Command <b>AT+FCLASS=?</b></p>	<p>Response <b>+FCLASS: (list of supported &lt;n&gt;s)</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
<p>Read Command <b>AT+ FCLASS?</b></p>	<p>Response <b>+FCLASS: &lt;n&gt;</b></p> <p><b>OK</b></p> <p>Parameters See Write Command.</p>
<p>Write Command <b>AT+FCLASS= [&lt;n&gt;]</b></p>	<p>Response TA sets a particular mode of operation (data fax). This causes the TA to process information in a manner suitable for that type of information</p> <p><b>OK</b></p>

	Parameter <n>            0        data 1        fax class 1 (TIA-578-A)
Reference GSM 07.07 [13]	Note

**3.2.39 AT+FMI FAX: Report Manufactured ID**

<b>AT+FMI FAX: Report Manufactured ID</b>	
Test Command <b>AT+ FMI =?</b>	Response <b>OK</b>  Parameters see Execution Command
Execution Command <b>AT+ FMI</b>	Response TA reports one or more lines of information text which permit the user to identify the manufacturer. <b>&lt;manufacturer Id&gt;</b>  <b>OK</b>  Parameter <b>&lt;manufacturer Id&gt;</b>
Reference EIA/TIA-578-D	Note

**3.2.40 AT+FMM FAX: Rreport Mmodel ID**

<b>AT+FMM FAX: Rreport Mmodel ID</b>	
Test Command <b>AT+ FMM =?</b>	Response <b>OK</b>  Parameters see Execution Command
Execution Command <b>AT+ FMM</b>	Response TA reports one or more lines of information text which permit the user to identify the specific model of device. <b>&lt;model Id&gt;</b>  <b>OK</b>  Parameter <b>&lt;model Id&gt;</b>
Reference EIA/TIA-578-D	Note

### 3.2.41 AT+FMR FAX: Report Revision ID

AT+FMR FAX: Report Revision ID	
Test Command <b>AT+ FMR =?</b>	Response <b>OK</b>
	Parameter see Execution Command
Execution Command <b>AT+ FMR</b>	Response TA reports one or more lines of information text which permit the user to identify the version, revision level or data or other information of the device. <b>Revision:&lt;Revision Id&gt;</b> <b>OK</b>
	Parameter <b>&lt;Revision Id&gt;</b> the version, revision level or data or other information of the device.
Reference EIA/TIA-578-D	Note

### 3.2.42 AT+VTD Tone Duration

AT+VTD Tone Duration	
Test Command <b>AT+VTD=?</b>	Response <b>+VTD:</b> (list of supported <b>&lt;n&gt;</b> s) <b>OK</b>
	Parameters see Write Command
Read Command <b>AT+VTD?</b>	Response <b>+VTD: &lt;n&gt;</b> <b>OK</b>
	Parameter see Write Command
Write Command <b>AT+VTD = &lt;n&gt;</b>	Response This Command refers to an integer <b>&lt;n&gt;</b> that defines the length of tones emitted as a result of the <b>+VTS</b> Command. This does not affect the <b>D</b> Command. <b>OK</b>
	Parameter <b>&lt;n&gt;</b> 1-255 duration of the tone in 1/10 seconds
Reference	Note

## 3.2.43 AT+VTS DTMF And Tone Generation

AT+VTS DTMF And Tone Generation	
Test Command <b>AT+VTS=?</b>	Response <b>+VTS:</b> (list of supported <dtmf>s), ,(list of supported <duration>s)  <b>OK</b>  Parameters see Write Command
Write Command <b>AT+VTS=&lt;dtmf-string&gt;</b>	Response This Command allows the transmission of DTMF tones and arbitrary tones in voice mode. These tones may be used (for example) when announcing the start of a recording period. Note: D is used only for dialing. <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Note: The Command is writing only.  Parameters <dtmf-string> which has a max length of 20 characters, must be entered between double quotes (“ ”) and consists of combinations of the following separated by commas. But a single character does not require quotes.  1) <dtmf> A single ASCII characters in the set 0-9, #,*, A-D. This is interpreted as a sequence of DTMF tones whose duration is set by the +VTD Command. 2) {<dtmf>, <duration>} This is interpreted as a DTMF tone whose duration is determined by <duration>. <b>&lt;duration&gt;</b> duration of the tone in 1/10 seconds range :1-255
Reference GSM 07.07 [13]	Note

## 3.2.44 AT+CMUX Multiplexer Control

AT+CMUX Multiplexer Control	
Test Command <b>AT+CMUX=?</b>	Response <b>+CMUX:</b> list of supported (<mode>s),(<subset>s),(<port_speed>s),(<N1>s),(<T1>s),(<N2>s),(<T2>s),(<T3>s),(<k>s)  <b>OK</b>  Parameters See Write Command
Write Command <b>AT+CMUX=[&lt;mode&gt;[,&lt;subset&gt;[,&lt;port_speed&gt;[,&lt;N1&gt;[,&lt;T1&gt;[,&lt;N2&gt;[,&lt;T2&gt;[,&lt;T3&gt;[,&lt;k&gt;]]]]]]]]</b>	Response <b>+CME ERROR: &lt;err&gt;</b>  Parameters <b>&lt;mode&gt;</b> multiplexer transparency mechanism <u>0</u> Basic option 1 Advanced option (GSM 07.10 multiplexer) <b>&lt;subset&gt;</b> the way in which the multiplexer control channel is set up <u>0</u> UIH frames used only <b>&lt;port_speed&gt;</b> transmission rate <u>5</u> 115200bit/s <b>&lt;N1&gt;</b> maximum frame size <u>127</u> <b>&lt;T1&gt;</b> acknowledgement timer in units of ten milliseconds <u>10</u> <b>&lt;N2&gt;</b> maximum number of re-transmissions <u>3</u> <b>&lt;T2&gt;</b> response timer for the multiplexer control channel in units of ten milliseconds <u>30</u> <b>&lt;T3&gt;</b> wake up response timers in seconds <u>10</u> <b>&lt;k&gt;</b> window size, for Advanced operation with Error Recovery options <u>2</u>
Read Command <b>AT+CMUX ?</b>	Response: <b>+CMUX: (mode-1),0,5,127,10,3,30,10,2</b>  <b>OK</b> <b>ERROR</b>
Reference GSM 07.07 [13]	Note 1. Advanced option with Error Recovery options is not supported. 2. The multiplexing transmission rate is according to the current serial baud rate. It is recommended to enable multiplexing protocol under 115200 bit/s baud rate

3. Multiplexer control channels are listed as follows:		
Channel Number	Type	DLCI
None	Multiplexer Control	0
1	07.07 and 07.05	1
2	07.07 and 07.05	2
3	07.07 and 07.05	3
4	07.07 and 07.05	4

### 3.2.45 AT+CNUM Subscriber Number

AT+CNUM	Subscriber Number
Test Command AT+CNUM=?	Response <b>OK</b>
Execution Command AT+CNUM	Response <b>+CNUM:</b> [<alpha1>,<number1>,<type1>[,<speed>,<service>[,<itc>]] [<CR><LF>+CNUM: [<alpha2>,<number2>,<type2>[,<speed>,<service> [,<itc>]] [...]]  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameters <b>&lt;alphax&gt;</b> optional alphanumeric string associated with <numberx>; used character set should be the one selected with Command Select TE Character Set +CSCS <b>&lt;numberx&gt;</b> string type phone number of format specified by <typex> <b>&lt;typex&gt;</b> type of address octet in integer format (refer GSM 04.08 [8] subclause 10.5.4.7) <b>&lt;speed&gt;</b> as defined by the +CBST Command <b>&lt;service&gt;</b> (service related to the phone number: ) 0 asynchronous modem 1 synchronous modem 2 PAD Access (asynchronous) 3 Packet Access (synchronous) 4 Voice 5 Fax <b>&lt;itc&gt;</b> (information transfer capability: ) 0 3.1 kHz 1 UDI
Reference GSM 07.07 [13]	Note



## 3.2.46 AT+CPOL Preferred Operator List

AT+CPOL Preferred Operator List	
Test Command AT+CPOL=?	Response +CPOL: (list of supported <index>s),(list of supported <format>s)  <b>OK</b>  Parameters see Write Command
Read Command AT+CPOL?	Response +CPOL: <index1>,<format>,<oper1> [<CR><LF>+CPOL: <index2>,<format>,<oper2> [...]]  <b>OK</b> +CME ERROR: <err>  Parameters See Write Command
Write Command AT+CPOL=<index>,<format>,<oper>	Response +CME ERROR: <err>  Parameters <index> integer type: order number of operator in SIM preferred operator list <format> 0 long format alphanumeric <oper> 1 short format alphanumeric <oper> 2 numeric <oper> <oper> string type: <format> indicates whether alphanumeric or numeric format used (see +COPS Command)
Reference GSM 07.07 [13]	Note

## 3.2.47 AT+COPN Read Pperator Names

AT+COPN Read Operator Names	
Test Command AT+COPN=?	Response <b>OK</b>

Execution Command <b>AT+COPN</b>	Response <b>+COPN: &lt;numeric1&gt;,&lt;alpha1 &gt;</b> <b>[&lt;CR&gt;&lt;LF&gt;+COPN: &lt;numeric2&gt;,&lt;alpha2&gt;</b> <b>[...]]</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
Reference GSM 07.07 [13]	Note
Parameters <numeric> string type: operator in numeric format (see +COPS) <alpha> string type: operator in long alphanumeric format (see +COPS)	

**3.2.48 AT+CFUN Set Phone Functionality.**

<b>AT+CFUN Set Phone Functionality.</b>	
Test Command <b>AT+CFUN=?</b>	Response <b>+CFUN: (list of supported &lt;fun&gt;s), (list of supported &lt;rst&gt;s)</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
Parameters See Write Command	
Read Command <b>AT+CFUN?</b>	Response <b>+CFUN: &lt;fun&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
Parameters See Write Command	
Write Command <b>AT+CFUN=&lt;fun &gt;, [&lt;rst&gt;]</b>	Response <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>

## SIM300 AT Commands Set

	<p>Parameters</p> <p><b>&lt;fun&gt;</b>      0      minimum functionality                           1      full functionality (Default)                           4      disable phone both transmit and receive RF circuits</p> <p><b>&lt;rst&gt;</b>      0      Set the ME to &lt;fun&gt; power level immediately. This is the default when &lt;rst&gt; is not given.                           1      Set the ME to &lt;fun&gt; power level after the ME been reset.</p>
Reference GSM 07.07 [13]	Note

### 3.2.49 AT+CCLK Clock

<b>AT+CCLK Clock</b>	
Test Command <b>AT+CCLK=?</b>	Response <b>OK</b>
	Parameters
Read Command <b>AT+CCLK?</b>	Response <b>+CCLK: &lt;time&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter See Write Command
Write Command <b>AT+CCLK=&lt;time&gt;</b>	Response <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter <b>&lt;time&gt;</b> string type value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -48...+48). E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"
Reference GSM 07.07 [13]	Note

### 3.2.50 AT+CSIM Generic SIM Access

AT+CSIM Generic SIM Access	
Test Command <b>AT+CSIM=?</b>	Response <b>OK</b>
	Parameter
Write Command <b>AT+CSIM=&lt;length&gt;,&lt;Command&gt;</b>	Response <b>+CSIM: &lt;Command&gt;,&lt;response&gt;</b> <b>OK</b> <b>ERROR</b>
	Parameters <b>&lt;length&gt;</b> integer type: length of characters sent to the TE in <Command> or <response> (i.e. twice the number of octets in the raw data) <b>&lt;Command&gt;</b> string type: hex format: GSM 11.11 SIM Command sent from the ME to the SIM <b>&lt;response&gt;</b> string type: hex format: GSM 11.11 response from SIM to <Command>
Reference GSM 07.07 [13]	Note

### 3.2.51 AT+CALM Alert Sound Mode

AT+CALM Alert Sound Mode	
Test Command <b>AT+CALM=?</b>	Response <b>+CALM: (list of supported &lt;mode&gt;s)</b> <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter See Write Command
Read Command <b>AT+CALM?</b>	Response <b>+CALM: &lt;mode&gt;</b> <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter See Write Command
Write Command <b>AT+CALM=&lt;mode&gt;</b>	Response <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>

	Parameter <b>&lt;mode&gt;</b> <u>0</u> normal mode 1    silent mode (all sounds from ME are prevented)
Reference GSM 07.07 [13]	Note

### 3.2.52 AT+CRSL Ringer Sound Level

AT+CRSL Ringer Sound Level	
Test Command <b>AT+CRSL=?</b>	Response <b>+CRSL:</b> (list of supported <b>&lt;level&gt;</b> s)  <b>OK</b> <b>+CME ERROR:</b> <b>&lt;err&gt;</b>
	Parameter See Write Command
Read Command <b>AT+CRSL?</b>	Response <b>+CRSL:</b> <b>&lt;level&gt;</b>  <b>OK</b> <b>+CME ERROR:</b> <b>&lt;err&gt;</b>
	Parameter See Write Command
Write Command <b>AT+CRSL=&lt;level&gt;</b> <b>I&gt;</b>	Response <b>+CME ERROR:</b> <b>&lt;err&gt;</b>
	Parameter <b>&lt;level&gt;</b> integer type value(0-100) with manufacturer specific range (smallest value represents the lowest sound level)
Reference GSM 07.07 [13]	Note

### 3.2.53 AT+CLVL Loud Speaker Volume Level

AT+CLVL Loud Speaker Volume Level	
Test Command <b>AT+CLVL=?</b>	Response <b>+CLVL:</b> (list of supported <b>&lt;level&gt;</b> s)  <b>OK</b> <b>+CME ERROR:</b> <b>&lt;err&gt;</b>
	Parameter see Write Command

Read Command <b>AT+CLVL?</b>	Response <b>+CLVL: &lt;level&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter See Write Command
Write Command <b>AT+CLVL=&lt;level&gt;</b>	Response <b>+CME ERROR: &lt;err&gt;</b>
	Parameter <b>&lt;level&gt;</b> integer type value with manufacturer specific range (smallest value represents the lowest sound level)
Reference GSM 07.07 [13]	Note

**3.2.54 AT+CMUT Mute Control**

<b>AT+CMUT Mute Control</b>	
Test Command <b>AT+CMUT=?</b>	Response <b>+CMUT: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
	Parameter see Write Command
Read Command <b>AT+CMUT?</b>	Response <b>+CMUT: &lt;n&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter See Write Command
Write Command <b>AT+CMUT=&lt;n&gt;</b>	Response <b>+CME ERROR: &lt;err&gt;</b>
	Parameter <b>&lt;n&gt;</b> <u>0</u> mute off 1      mute on
Reference GSM 07.07 [13]	Note

### 3.2.55 AT+CPUC Price Per Unit And Currency Table

AT+CPUC Price Per Unit And Currency Table	
Test Command AT+CPUC=?	Response <b>OK</b>
	Parameters see Write Command
Read Command AT+CPUC?	Response <b>+CPUC: &lt;currency&gt;,&lt;ppu&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameters See Write Command
Write Command AT+CPUC=<currency>,<ppu>[,<passwd>]	Response <b>+CME ERROR: &lt;err&gt;</b>
	Parameters <b>&lt;currency&gt;</b> string type; three-character currency code (e.g. "GBP", "DEM"); character set as specified by Command Select TE Character Set +CSCS <b>&lt;ppu&gt;</b> string type; price per unit; dot is used as a decimal separator(e.g. "2.66") <b>&lt;passwd&gt;</b> string type; SIM PIN2
Reference GSM 07.07 [13]	Note

### 3.2.56 AT+CCWE Call Meter Maximum Event

AT+CCWE Call Meter Maximum Event	
Test Command AT+CCWE=?	Response <b>+CCWE: (list of supported &lt;mode&gt;s)</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter see Write Command
Read Command AT+CCWE?	Response <b>+CCWE: &lt;mode&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>

	Parameter See Write Command
Write Command <b>AT+CCWE=[&lt;mode&gt;]</b>	Response <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>
	Parameter <b>&lt;mode&gt;</b> <u>0</u> Disable call meter warning event 1    Enable call meter warning event
	<u>Unsolicited result codes supported:</u>  <b>+CCWV</b> Shortly before the ACM (Accumulated Call Meter) maximum value is reached, an unsolicited result code +CCWV will be  Approximately when 5 seconds call time remains. It is also issued when starting a call if less than 5 s call time remains.  Parameters
Reference GSM 07.07 [13]	Note GSM 07.07 specifies 30 seconds, so SIMCOM deviate from the specification.

### 3.2.57 AT+CBC Battery Charge

<b>AT+CBC Battery Charge</b>	
Test Command <b>AT+CBC=?</b>	Response <b>+CBC: (list of supported &lt; bcs &gt;s),(list of supported &lt; bcl &gt;s),(voltage)</b>  <b>OK</b>
	Parameters see Execution Command
Execution Command <b>AT+CBC</b>	Response <b>+CBC: &lt; bcs &gt;, &lt; bcl &gt;,&lt;voltage&gt;</b>  <b>OK</b> <b>+CME ERROR: &lt;err&gt;</b>



	<p>Parameters</p> <p><b>&lt;bc&gt;</b> charge status</p> <p>0 ME is not charging</p> <p>1 ME is charging</p> <p>2 Charging has finished</p> <p><b>&lt;bcl&gt;</b> battery connection level</p> <p>1...100 battery has 1-100 percent of capacity remaining</p> <p>vent</p> <p><b>&lt;voltage&gt;</b> battery voltage(mV)</p>
Reference GSM 07.07 [13]	<p>Note</p> <p>Support for this Command will be hardware dependant and only be used when battery is set to vibrator</p>

### 3.2.58 AT+CUSD Unstructured Supplementary Service Data

AT+ CUSD Unstructured Supplementary Service Data	
<p>Test Command</p> <p><b>AT+CUSD=?</b></p>	<p>Response</p> <p><b>+CUSD: (&lt;n&gt;s)</b></p> <p><b>OK</b></p> <p>Parameter</p> <p>see Write Command</p>
<p>Read Command</p> <p><b>AT+CUSD?</b></p>	<p>Response</p> <p><b>+CUSD: &lt;n&gt;</b></p> <p><b>OK</b></p> <p>Parameter</p> <p>see Write Command</p>
<p>Write Command</p> <p><b>AT+CUSD=[&lt;n&gt;[,&lt;str&gt;[,&lt;dcs&gt;]]</b></p>	<p>Response</p> <p><b>OK</b></p> <p><b>ERROR</b></p> <p>Parameters</p> <p><b>&lt;n&gt;</b> a numeric parameter which indicates control of the unstructured supplementary service data</p> <p>0 disable the result code presentation in the TA</p> <p>1 enable the result code presentation in the TA</p> <p>2 cancel session (not applicable to read Command response)</p> <p><b>&lt;str&gt;</b> string type USSD-string</p> <p><b>&lt;dcs&gt;</b> Cell Broadcast Data Coding Scheme in integer format (default 0)</p>
Reference GSM 03.38 [25]	Note

## 3.2.59 AT+CSSN Supplementary Services Notification

AT+CSSN Supplementary Services Notification	
Test Command AT+CSSN=?	<p>Response</p> <p>+CSSN: (list of supported &lt;n&gt;s), (list of supported &lt;m&gt;s)</p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
Read Command AT+CSSN?	<p>Response</p> <p>+CSSN: &lt;n&gt;,&lt;m&gt;</p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
Write Command AT+CSSN=[<n>[ ,<m>]]	<p>Response</p> <p><b>OK</b> <b>ERROR</b></p> <p>Parameters</p> <p>&lt;n&gt;      a numeric parameter which indicates whether to show the +CSSI:&lt;code1&gt;[,&lt;index&gt;] result code presentation status after a mobile originated call setup</p> <p>0      disable</p> <p>1      enable</p> <p>&lt;m&gt;      a numeric parameter which indicates whether to show the +CSSU:&lt;code2&gt; result code presentation status during a mobile terminated call setup or during a call, or when a forward check supplementary service notification is received.</p> <p>0      disable</p> <p>1      enable</p> <p>&lt;code1&gt;    0      unconditional call forwarding is active</p> <p>          1      some of the conditional call forwarding are active</p> <p>          2      call has been forwarded</p> <p>          3      call is waiting</p> <p>          4      this is a CUG call (also &lt;index&gt; present)</p> <p>          5      outgoing calls are barred</p> <p>          6      incoming calls are barred</p> <p>          7      CLIR suppression rejected</p> <p>&lt;index&gt;    closed user group index</p> <p>&lt;code2&gt;    0      this is a forwarded call</p>
Reference	Note

## 4 AT Commands According to GSM07.05

The GSM 07.05 commands are for performing SMS and CBS related operations. SIM300 II supports both Text and PDU modes.

### 4.1 Overview of AT Commands According to GSM07.05

Command	Description
AT+CMGD	DELETE SMS MESSAGE
AT+CMGF	SELECT SMS MESSAGE FORMAT
AT+CMGL	LIST SMS MESSAGES FROM PREFERRED STORE
AT+CMGR	READ SMS MESSAGE
AT+CMGS	SEND SMS MESSAGE
AT+CMGW	WRITE SMS MESSAGE TO MEMORY
AT+CMSS	SEND SMS MESSAGE FROM STORAGE
AT+CMGC	SEND SMS COMMAND
AT+CNMI	NEW SMS MESSAGE INDICATIONS
AT+CPMS	PREFERRED SMS MESSAGE STORAGE
AT+CRES	RESTORE SMS SETTINGS
AT+CSAS	SAVE SMS SETTINGS
AT+CSCA	SMS SERVICE CENTER ADDRESS
AT+CSCB	SELECT CELL BROADCAST SMS MESSAGES
AT+CSDH	SHOW SMS TEXT MODE PARAMETERS
AT+CSMP	SET SMS TEXT MODE PARAMETERS
AT+CSMS	SELECT MESSAGE SERVICE

### 4.2 Detailed Descriptions of AT Commands According to GSM07.05

#### 4.2.1 AT+CMGD Delete SMS Message

AT+CMGD Delete SMS Message	
Read Command AT+CMGD=?	Response +CMGD: (Range of SMS on SIM card can be deleted)  <b>OK</b>
Write Command AT+CMGD=<index>	Response TA deletes message from preferred message storage <mem1> location <index>. <b>OK</b> <b>ERROR</b> If error is related to ME functionality: +CMS ERROR:<err>
	Parameter <index> integer type; value in the range of location numbers supported by the associated memory
Reference	Note

GSM 07.05

#### 4.2.2 AT+CMGF Select SMS Message Format

##### AT+CMGF Select SMS Message Format

Read Command <b>AT+CMGF?</b>	Response <b>+CMGF: &lt;mode&gt;</b>  <b>OK</b>
	Parameter see Write Command
Test Command <b>AT+CMGF=?</b>	Response <b>+CMGF: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Write Command <b>AT+CMGF=[&lt;mode&gt;]</b>	Response TA sets parameter to deNote which input and output format of messages to use. <b>OK</b>
	Parameter <b>&lt;mode&gt;</b> <u>0</u> PDU mode 1    text mode
Reference GSM 07.05	Note

#### 4.2.3 AT+CMGL List SMS Messages From Preferred Store

##### AT+CMGL List SMS Messages From Preferred Store

Test Command <b>AT+CMGL=?</b>	Response <b>+CMGL: (list of supported &lt;stat&gt;s)</b>  <b>OK</b>
	Parameters see Write Command

<p>Write Command <b>AT+CMGL=&lt;stat&gt; t&gt;[,&lt;mode&gt;]</b></p>	<p>Parameters</p> <p>1) If text mode:</p> <table border="0"> <tr> <td><b>&lt;stat&gt;</b></td> <td><b>"REC UNREAD"</b></td> <td>Received unread messages (default)</td> </tr> <tr> <td></td> <td><b>"REC READ"</b></td> <td>Received read messages</td> </tr> <tr> <td></td> <td><b>"STO UNSENT"</b></td> <td>Stored unsent messages</td> </tr> <tr> <td></td> <td><b>"STO SENT"</b></td> <td>Stored sent messages</td> </tr> <tr> <td></td> <td><b>"ALL"</b></td> <td>All messages</td> </tr> </table> <p><b>&lt;mode&gt;</b> 0 normal 1 not change status of the specified SMS record</p> <p>2) If PDU mode:</p> <table border="0"> <tr> <td><b>&lt;stat&gt;</b></td> <td><b>0</b></td> <td>Received unread messages (default)</td> </tr> <tr> <td></td> <td><b>1</b></td> <td>Received read messages</td> </tr> <tr> <td></td> <td><b>2</b></td> <td>Stored unsent messages</td> </tr> <tr> <td></td> <td><b>3</b></td> <td>Stored sent messages</td> </tr> <tr> <td></td> <td><b>4</b></td> <td>All messages</td> </tr> </table> <p><b>&lt;mode&gt;</b> 0 normal 1 not change status of the specified SMS record</p> <p>Response</p> <p>TA returns messages with status value &lt;stat&gt; from message storage &lt;mem1&gt; to the TE. . If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>1) If text mode (+CMGF=1) and Command successful: for SMS-SUBMITs and/or SMS-DELIVERs:</p> <p><b>+CMGL:</b> <b>&lt;index&gt;,&lt;stat&gt;,&lt;oa/da&gt;,[&lt;alpha&gt;],[&lt;scts&gt;],[&lt;tooa/toda&gt;,&lt;length&gt;]&lt;CR&gt; &gt;&lt;LF&gt;&lt;data&gt;[&lt;CR&gt;&lt;LF&gt;</b></p> <p><b>+CMGL:</b> <b>&lt;index&gt;,&lt;stat&gt;,&lt;da/oa&gt;,[&lt;alpha&gt;],[&lt;scts&gt;],[&lt;tooa/toda&gt;,&lt;length&gt;]&lt;CR&gt; &gt;&lt;LF&gt;&lt;data&gt;[...]</b></p> <p>for SMS-STATUS-REPORTs:</p> <p><b>+CMGL:</b> <b>&lt;index&gt;,&lt;stat&gt;,&lt;fo&gt;,&lt;mr&gt;,[&lt;ra&gt;],[&lt;tora&gt;,&lt;scts&gt;,&lt;dt&gt;,&lt;st&gt;[&lt;CR&gt;&lt;LF&gt; &gt;</b></p> <p><b>+CMGL:</b> <b>&lt;index&gt;,&lt;stat&gt;,&lt;fo&gt;,&lt;mr&gt;,[&lt;ra&gt;],[&lt;tora&gt;,&lt;scts&gt;,&lt;dt&gt;,&lt;st&gt;[...]</b></p> <p>for SMS-COMMANDs:</p> <p><b>+CMGL: &lt;index&gt;,&lt;stat&gt;,&lt;fo&gt;,&lt;ct&gt;[&lt;CR&gt;&lt;LF&gt;</b></p> <p><b>+CMGL: &lt;index&gt;,&lt;stat&gt;,&lt;fo&gt;,&lt;ct&gt;[...]</b></p> <p>for CBM storage:</p> <p><b>+CMGL:&lt;index&gt;,&lt;stat&gt;,&lt;sn&gt;,&lt;mid&gt;,&lt;page&gt;,&lt;pages&gt;&lt;CR&gt;&lt;LF&gt;&lt;data&gt; &gt;[&lt;CR&gt;&lt;LF&gt;</b></p> <p><b>+CMGL:</b> <b>&lt;index&gt;,&lt;stat&gt;,&lt;sn&gt;,&lt;mid&gt;,&lt;page&gt;,&lt;pages&gt;&lt;CR&gt;&lt;LF&gt;&lt;data&gt;[...]</b></p>	<b>&lt;stat&gt;</b>	<b>"REC UNREAD"</b>	Received unread messages (default)		<b>"REC READ"</b>	Received read messages		<b>"STO UNSENT"</b>	Stored unsent messages		<b>"STO SENT"</b>	Stored sent messages		<b>"ALL"</b>	All messages	<b>&lt;stat&gt;</b>	<b>0</b>	Received unread messages (default)		<b>1</b>	Received read messages		<b>2</b>	Stored unsent messages		<b>3</b>	Stored sent messages		<b>4</b>	All messages
<b>&lt;stat&gt;</b>	<b>"REC UNREAD"</b>	Received unread messages (default)																													
	<b>"REC READ"</b>	Received read messages																													
	<b>"STO UNSENT"</b>	Stored unsent messages																													
	<b>"STO SENT"</b>	Stored sent messages																													
	<b>"ALL"</b>	All messages																													
<b>&lt;stat&gt;</b>	<b>0</b>	Received unread messages (default)																													
	<b>1</b>	Received read messages																													
	<b>2</b>	Stored unsent messages																													
	<b>3</b>	Stored sent messages																													
	<b>4</b>	All messages																													

**OK**

2) If PDU mode (+CMGF=0) and Command successful:

+CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF>

+CMGL: <index>,<stat>,[alpha],<length><CR><LF><pdu>[...]]

**OK**

3)If error is related to ME functionality:

**+CMS ERROR: <err>**

Parameters

- <alpha>** string type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with Command Select TE Character Set +CSCS (see definition of this Command in TS 07.07)
- <da>** GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer Command+CSCS in TS 07.07); type of address given by <toda>
- <data>** In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:
- if <dc> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is not set:
  - if TE character set other than "HEX" (refer Command Select TE Character Set +CSCS in TS 07.07):ME/TA converts GSM alphabet into current TE character set according to rules of Annex A
  - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55))
  - if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format:
  - if <dc> indicates that GSM 03.38 default alphabet is used:

	<ul style="list-style-type: none"> <li>- if TE character set other than "HEX" (refer Command +CSCS in GSM 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</li> <li>- if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number</li> <li>- if &lt;dc&gt; indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number</li> </ul> <p><b>&lt;length&gt;</b> integer type value indicating in the text mode (+CMGF=1) the length of the message body &lt;data&gt; (or &lt;cdata&gt;) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><b>&lt;index&gt;</b> integer type; value in the range of location numbers supported by the associated memory</p> <p><b>&lt;oa&gt;</b> GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer Command +CSCS in TS 07.07); type of address given by &lt;tooa&gt;</p> <p><b>&lt;pdu&gt;</b> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><b>&lt;scts&gt;</b> GSM 03.40 TP-Service-Center-Time-Stamp in time-string format (refer &lt;dt&gt;)</p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer&lt;toda&gt;)</p>
Reference GSM 07.05	Note

#### 4.2.4 AT+CMGR Read SMS Message

##### AT+CMGR Read SMS Message

Test Command	Response
AT+CMGR=?	OK

<p>Write Command <b>AT+CMGR=&lt;index&gt;[,&lt;mode&gt;]</b></p>	<p>Parameters</p> <p><b>&lt;index&gt;</b> integer type; value in the range of location numbers supported by the associated memory</p> <p><b>&lt;mode&gt;</b> 0 normal 1 not change status of the specified SMS record</p>
	<p>Response</p> <p>TA returns SMS message with location value &lt;index&gt; from message storage &lt;mem1&gt; to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>1) If text mode (+CMGF=1) and Command successful: for SMS-DELIVER: <b>+CMGR:</b> <b>&lt;stat&gt;,&lt;oa&gt;,[&lt;alpha&gt;],&lt;scts&gt;[,&lt;toa&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dcs&gt;,&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b></p> <p>for SMS-SUBMIT: <b>+CMGR:</b> <b>&lt;stat&gt;,&lt;da&gt;,[&lt;alpha&gt;],[&lt;toda&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dcs&gt;,[&lt;vp&gt;],&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b></p> <p>for SMS-STATUS-REPORTs: <b>+CMGR: &lt;stat&gt;,&lt;fo&gt;,&lt;mr&gt;,[&lt;ra&gt;],[&lt;tora&gt;],&lt;scts&gt;,&lt;dt&gt;,&lt;st&gt;</b></p> <p>for SMS-COMMANDs: <b>+CMGR:</b> <b>&lt;stat&gt;,&lt;fo&gt;,&lt;ct&gt;[,&lt;pid&gt;,[&lt;mn&gt;],[&lt;da&gt;],[&lt;toda&gt;],&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;]</b></p> <p>for CBM storage: <b>+CMGR: &lt;stat&gt;,&lt;sn&gt;,&lt;mid&gt;,&lt;dcs&gt;,&lt;page&gt;,&lt;pages&gt;&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b></p> <p>2) If PDU mode (+CMGF=0) and Command successful: <b>+CMGR: &lt;stat&gt;,[&lt;alpha&gt;],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b></p> <p><b>OK</b></p> <p>3) If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;alpha&gt;</b> string type alphanumeric representation of &lt;da&gt; or &lt;oa&gt; corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by &lt;toda&gt;</p> <p><b>&lt;data&gt;</b> In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format: - if &lt;dcs&gt; indicates that GSM 03.38 default alphabet is used and</p>



	<p>&lt;fo&gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is not set:</p> <ul style="list-style-type: none"> <li>- if TE character set other than "HEX" (refer Command Select TE Character Set +CSCS in TS 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</li> <li>- if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55))</li> <li>- if &lt;dc&gt; indicates that 8-bit or UCS2 data coding scheme is used, or &lt;fo&gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format:</li> <li>- if &lt;dc&gt; indicates that GSM 03.38 default alphabet is used:</li> <li>- if TE character set other than "HEX" (refer Command +CSCS in GSM 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</li> <li>- if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number</li> <li>- if &lt;dc&gt; indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number</li> </ul>
<dc>	depending on the Command or result code: GSM 03.38 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format
<fo>	depending on the Command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format
<length>	integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mid>	GSM 03.41 CBM Message Identifier in integer format
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted characters of the currently

	<p>selected TE character set (specified by +CSCS in TS 07.07); type of address given by &lt;tooa&gt;</p> <p><b>&lt;pdu&gt;</b> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><b>&lt;pid&gt;</b> GSM 03.40 TP-Protocol-Identifier in integer format (default 0)</p> <p><b>&lt;sca&gt;</b> GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07);; type of address given by &lt;tosca&gt;</p> <p><b>&lt;scts&gt;</b> GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer &lt;dt&gt;)</p> <p><b>&lt;stat&gt;</b></p> <table border="0"> <tr> <td>0</td> <td>"REC UNREAD"</td> <td>Received unread messages</td> </tr> <tr> <td>1</td> <td>"REC READ"</td> <td>Received read messages</td> </tr> <tr> <td>2</td> <td>"STO UNSENT"</td> <td>Stored unsent messages</td> </tr> <tr> <td>3</td> <td>"STO SENT"</td> <td>Stored sent messages</td> </tr> <tr> <td>4</td> <td>"ALL"</td> <td>All messages</td> </tr> </table> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer &lt;toda&gt;)</p> <p><b>&lt;tosca&gt;</b> GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer &lt;toda&gt;)</p> <p><b>&lt;vp&gt;</b> depending on SMS-SUBMIT &lt;fo&gt; setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer &lt;dt&gt;)</p>	0	"REC UNREAD"	Received unread messages	1	"REC READ"	Received read messages	2	"STO UNSENT"	Stored unsent messages	3	"STO SENT"	Stored sent messages	4	"ALL"	All messages
0	"REC UNREAD"	Received unread messages														
1	"REC READ"	Received read messages														
2	"STO UNSENT"	Stored unsent messages														
3	"STO SENT"	Stored sent messages														
4	"ALL"	All messages														
Reference GSM 07.05	Note															

#### 4.2.5 AT+CMGS Send SMS Message

##### AT+CMGS Send SMS Message

Test Command	Response
AT+CMGS=?	OK

## SIM300 AT Commands Set

<p>Write Command</p> <p>1) If text mode (+CMGF=1): +CMGS=&lt;da&gt;[,&lt;toda&gt;]&lt;CR&gt; <b>text is entered</b> &lt;ctrl-Z/ESC&gt; ESC quits without sending</p> <p>2) If PDU mode (+CMGF=0): +CMGS=&lt;length&gt;&gt;&lt;CR&gt; <b>PDU is given</b> &lt;ctrl-Z/ESC&gt;</p>	<p>Parameters</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by &lt;toda&gt;</p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;length&gt;</b> integer type value indicating in the text mode (+CMGF=1) the length of the message body &lt;data&gt; (or &lt;cdata&gt;) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p>Response</p> <p>TA sends message from a TE to the network (SMS-SUBMIT). Message reference value &lt;mr&gt; is returned to the TE on successful message delivery. Optionally (when +CSMS &lt;service&gt; value is 1 and network supports) &lt;scts&gt; is returned. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: <b>+CMGS: &lt;mr&gt;</b></p> <p><b>OK</b></p> <p>2) If PDU mode(+CMGF=0) and sending successful: <b>+CMGS: &lt;mr&gt;</b></p> <p><b>OK</b></p> <p>3)If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;mr&gt;</b> GSM 03.40 TP-Message-Reference in integer format</p>
<p>Reference GSM 07.05</p>	<p>Note</p>

### 4.2.6 AT+CMGW Write SMS Message To Memory

AT+CMGW Write SMS Message To Memory	
<p>Test Command AT+CMGW=?</p>	<p>Response <b>OK</b></p>

**SIM300 AT Commands Set**

Write Command	Response
<p>1) If text mode (+CMGF=1):  <b>AT+CMGW</b>=[&lt;oa/da&gt;[,&lt;tooa/toda&gt;[,&lt;stat&gt;]]]            &lt;CR&gt; <b>text is entered</b>            &lt;ctrl-Z/ESC&gt;            &lt;ESC&gt; quits without sending</p>	<p>TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage &lt;mem2&gt;. Memory location &lt;index&gt; of the stored message is returned. By default message status will be set to 'stored unsent', but parameter &lt;stat&gt; allows also other status values to be given.</p> <p>If writing is successful:  <b>+CMGW: &lt;index&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CMS ERROR: &lt;err&gt;</b></p>
<p>2) If PDU mode (+CMGF=0):  <b>AT+CMGW</b>=&lt;length&gt;[,&lt;stat&gt;]&lt;CR&gt;  <b>PDU is given</b>            &lt;ctrl-Z/ESC&gt;</p>	<p><b>Parameters</b></p> <p><b>&lt;oa&gt;</b> GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07);type of address given by &lt;tooa&gt;</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by &lt;toda&gt;</p> <p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer &lt;toda&gt;)</p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)            129 Unknown type(ISDN format number)            161 National number type(ISDN format)            145 International number type(ISDN format )            177 Network specific number(ISDN format)</p> <p><b>&lt;length&gt;</b> integer type value indicating in the text mode (+CMGF=1) the length of the message body &lt;data&gt; (or &lt;cdata&gt;) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><b>&lt;pdu&gt;</b> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters</p>

	2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format. <b>&lt;index&gt;</b> Index of message in selected storage <b>&lt;mem2&gt;</b>
Reference GSM 07.05	Note

#### 4.2.7 AT+CMSS Send SMS Message From Storage

<b>AT+CMSS Send SMS Message From Storage</b>	
Test Command <b>AT+CMSS=?</b>	Response <b>OK</b>
Write Command <b>AT+CMSS=&lt;index&gt;[,&lt;da&gt;[,&lt;toda&gt;]]</b>	<p>Response</p> <p>TA sends message with location value <b>&lt;index&gt;</b> from message storage <b>&lt;mem2&gt;</b> to the network (SMS-SUBMIT). If new recipient address <b>&lt;da&gt;</b> is given, it shall be used instead of the one stored with the message. Reference value <b>&lt;mr&gt;</b> is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: <b>+CMGS: &lt;mr&gt; [,&lt;scts&gt;]</b></p> <p><b>OK</b></p> <p>2) If PDU mode(+CMGF=0) and sending successful: <b>+CMGS: &lt;mr&gt; [,&lt;ackpdu&gt;]</b></p> <p><b>OK</b></p> <p>3) If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;index&gt;</b> integer type; value in the range of location numbers supported by the associated memory</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07);; type of address given by <b>&lt;toda&gt;</b></p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <b>&lt;da&gt;</b> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;mr&gt;</b> GSM 03.40 TP-Message-Reference in integer format</p>
Reference	Note

## 4.2.8 AT+CMGC Send SMS Command

## AT+CMGC Send SMS Command

Test Command	Response
AT+CMGC=?	OK
Write Command	Parameters
1) If text mode (+CMGF=1): AT+CMGC=<fo> >[,<ct><pid>,<mn>,<da>,<toda>] <CR> text is entered <ctrl-Z/ESC> ESC quits without sending	<p>&lt;fo&gt; first octet of GSM 03.40 SMS-COMMAND (default 2) in integer format</p> <p>&lt;ct&gt; GSM 03.40 TP-Command-Type in integer format (default 0)</p> <p>&lt;pid&gt; GSM 03.40 TP-Protocol-Identifier in integer format (default 0)</p> <p>&lt;mn&gt; GSM 03.40 TP-Message-Number in integer format</p> <p>&lt;da&gt; GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by &lt;toda&gt;</p>
2) If PDU mode (+CMGF=0): AT+CMGC=<length><CR> PDU is given <ctrl-Z/ESC>	<p>&lt;toda&gt; GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p>129 Unknown type(ISDN format number)</p> <p>161 National number type(ISDN format)</p> <p>145 International number type(ISDN format )</p> <p>177 Network specific number(ISDN format)</p> <p>&lt;length&gt; integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p>

	<p>Response</p> <p>TA transmits SMS Command message from a TE to the network (SMS-COMMAND). Message reference value &lt;mr&gt; is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful:  <b>+CMGC: &lt;mr&gt; [,&lt;scts&gt;]</b></p> <p><b>OK</b></p> <p>2) If PDU mode(+CMGF=0) and sending successful:  <b>+CMGC: &lt;mr&gt; [,&lt;ackpdu&gt;]</b></p> <p><b>OK</b></p> <p>3) If error is related to ME functionality:  <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;mr&gt;</b> GSM 03.40 TP-Message-Reference in integer format</p>
Reference GSM 07.05	Note

**4.2.9 AT+CNMI New SMS Message Indications**

<b>AT+CNMI New SMS Message Indications</b>	
Test Command <b>AT+CNMI=?</b>	<p>Response</p> <p><b>+CNMI:</b> (list of supported &lt;mode&gt;s),(list of supported &lt;mt&gt;s),(list of supported &lt;bm&gt;s),(list of supported &lt;ds&gt;s),(list of supported &lt;bfr&gt;s)</p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
Read Command <b>AT+CNMI?</b>	<p>Response</p> <p><b>+CNMI:</b> &lt;mode&gt;,&lt;mt&gt;,&lt;bm&gt;,&lt;ds&gt;,&lt;bfr&gt;</p> <p><b>OK</b></p> <p>Parameters see Write Command</p>

**SIM300 AT Commands Set**

<p>Write Command  <b>AT+CNMI=[&lt;mode&gt;[,&lt;mt&gt;[,&lt;bm&gt;[,&lt;ds&gt;[,&lt;bfr&gt;]]]]]</b></p>	<p>Response</p> <p>TA selects the procedure for how the receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in GSM 03.38.</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>ERROR</b></p>
--	--



Parameters	
<b>&lt;mode&gt;</b>	<p>0 Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</p> <p>1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.</p> <p>2 Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</p> <p>3 Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.</p>
<b>&lt;mt&gt;</b>	<p>(the rules for storing received SMSs depend on its data coding scheme (refer GSM 03.38 [2]), preferred memory storage (+CPMS) setting and this value):</p> <p>0 No SMS-DELIVER indications are routed to the TE.</p> <p>1 If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: &lt;mem&gt;,&lt;index&gt;</p> <p>2 SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: +CMT: [&lt;alpha&gt;],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; (PDU mode enabled) or +CMT: &lt;oa&gt;, [&lt;alpha&gt;],&lt;scts&gt; [,&lt;tooa&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dcs&gt;,&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt; (text mode enabled; about parameters in italics, refer Command Show Text Mode Parameters +CSDH). Class 2 messages result in indication as defined in &lt;mt&gt;=1.</p> <p>3 Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in &lt;mt&gt;=2. Messages of other classes result in indication as defined in &lt;mt&gt;=1.</p>
<b>&lt;bm&gt;</b>	<p>(the rules for storing received CBMs depend on its data coding scheme (refer GSM 03.38 [2]), the setting of Select CBM Types (+CSCB) and this value):</p> <p>0 No CBM indications are routed to the TE.</p> <p>2 New CBMs are routed directly to the TE using unsolicited result code: +CBM: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; (PDU mode enabled) or</p>



<p>Write Command  <b>AT+CPMS=</b>  <b>[&lt;mem1&gt;</b>  <b>,&lt;mem2&gt;</b>  <b>,&lt;mem3&gt;]</b></p>	<p>Response</p> <p>TA selects memory storages &lt;mem1&gt;, &lt;mem2&gt; and &lt;mem3&gt; to be used for reading, writing, etc.</p> <p><b>+CPMS: &lt;used1&gt;,&lt;total1&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;used3&gt;,&lt;total3&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>ERROR</b></p>
	<p>Parameters</p> <p><b>&lt;mem1&gt;</b> Messages to be read and deleted from this memory storage  "SM" SIM message storage</p> <p><b>&lt;mem2&gt;</b> Messages will be written and sent to this memory storage  "SM" SIM message storage</p> <p><b>&lt;mem3&gt;</b> Received messages will be placed in this memory storage if routing to PC is not set ("CNMI")  "SM" SIM message storage</p> <p><b>&lt;usedx&gt;</b> integer type;Number of messages currently in &lt;memx&gt;</p> <p><b>&lt;totalx&gt;</b> integer type;Number of messages storable in &lt;memx&gt;</p>
<p>Reference  GSM 07.05</p>	<p>Note</p>

#### 4.2.11 AT+CRES Restore SMS Settings

<b>AT+CRES Restore SMS Settings</b>	
<p>Test Command  <b>AT+CRES=?</b></p>	<p>Response</p> <p><b>+CRES: (list of supported &lt;profile&gt;s)</b></p> <p><b>OK</b></p>
<p>Write Command  <b>AT+CRES=[&lt;profile&gt;]</b></p>	<p>Response</p> <p>TA restores SMS settings for +CMGF, +CNMI, +CSDH from non-volatile memory to active memory. A TA can contain several profiles of settings. Settings specified in commands Service Centre Address +CSCA, Set Message Parameters +CSMP and Select Cell Broadcast Message Types +CSCB (if implemented) are restored. Certain settings may not be supported by the storage (e.g. SIM SMS parameters) and therefore can not be restored.</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>ERROR</b></p>

## SIM300 AT Commands Set

	<p>Parameter</p> <p><b>&lt;profile&gt;</b> <u>0</u> manufacturer specific profile number where setting are to be stored</p>
Reference GSM 07.05	Note

### 4.2.12 AT+CSAS Save SMS Settings

<b>AT+CSAS Save SMS Settings</b>	
<p>Test Command</p> <p><b>AT+CSAS=?</b></p>	<p>Response</p> <p><b>+CSAS:</b> (list of supported <b>&lt;profile&gt;</b>s)</p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CSAS=[&lt;profile&gt;]</b></p>	<p>Response</p> <p>TA restores SMS settings for +CMGF, +CNMI, +CSDH from non-volatile memory to active memory. A TA can contain several profiles of settings. Settings specified in commands Service Centre Address +CSCA, Set Message Parameters +CSMP and Select Cell Broadcast Message Types +CSCB (if implemented) are restored. Certain settings may not be supported by the storage (e.g. SIM SMS parameters) and therefore can not be restored</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>ERROR</b></p> <p>Parameter</p> <p><b>&lt;profile&gt;</b> <u>0</u> manufacturer specific profile number where settings are to be stored</p>
Reference GSM 07.05	Note

### 4.2.13 AT+CSCA SMS Service Center Address

<b>AT+CSCA SMS Service Center Address</b>	
<p>Read Command</p> <p><b>AT+CSCA?</b></p>	<p>Response</p> <p><b>+CSCA:</b> &lt;sca&gt;,&lt;tosca&gt; &lt;scaAlpha&gt;</p> <p><b>OK</b></p> <p>Parameters</p> <p>see Write Command</p>
<p>Test Command</p> <p><b>AT+CSCA=?</b></p>	<p>Response</p> <p><b>OK</b></p>

<p>Write Command  <b>AT+CSCA</b> =  <b>[&lt;sca&gt;[,&lt;tosca&gt;]]</b></p>	<p>Response</p> <p>TA updates the SMSC address, through which mobile originated SMS are transmitted. In text mode, setting is used by send and writes commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into &lt;pdu&gt; parameter equals zero.</p> <p>Note: The Command writes the parameters in NON-VOLATILE memory.</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p> <hr/> <p>Parameters</p> <p><b>&lt;sca&gt;</b> GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by &lt;tosca&gt;</p> <p><b>&lt;tosca&gt;</b> Service center address format GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer &lt;toda&gt;)</p> <p><b>&lt;scaAlpha&gt;</b> string type  Service center address alpha data</p>
<p>Reference  GSM 07.05</p>	<p>Note</p> <p>Only if Command +SMEXTRAINFO=1 , &lt;scaAlpha&gt; is available. And nothing can be displayed if it is empty.</p>

#### 4.2.14 AT+CSCB Select Cell Broadcast SMS Messages

<b>AT+CSCB Select Cell Broadcast SMS Messages</b>	
<p>Read Command  <b>AT+CSCB?</b></p>	<p>Response</p> <p><b>+CSCB: &lt;mode&gt;,&lt;mids&gt;,&lt;dcss&gt;</b></p> <p><b>OK</b></p> <hr/> <p>Parameters</p> <p>see Write Command</p>
<p>Test Command  <b>AT+CSCB=?</b></p>	<p>Response</p> <p><b>+CSCB: (list of supported &lt;mode&gt;s)</b></p> <p><b>OK</b></p> <hr/> <p>Parameters</p> <p>see Write Command</p>

<p>Write Command <b>AT+CSCB=</b> <b>&lt;mode&gt;[,mids&gt;[,</b> <b>&lt;dcss&gt;]]</b></p>	<p>Response TA selects which types of CBMs are to be received by the ME.</p> <p>Note: The Command writes the parameters in NON-VOLATILE memory. <b>OK</b></p> <p>If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;mode&gt;</b>     0     message types specified in &lt;mids&gt; and &lt;dcss&gt; are accepted                   1     message types specified in &lt;mids&gt; and &lt;dcss&gt; are not accepted</p> <p><b>&lt;mids&gt;</b>     string type; all different possible combinations of CBM message identifiers (refer &lt;mid&gt;) (default is empty string); e.g. "0,1,5,320-478,922".</p> <p><b>&lt;dcss&gt;</b>     string type; all different possible combinations of CBM data coding schemes (refer &lt;dc&gt;) (default is empty string); e.g. "0-3,5".</p>
<p>Reference GSM 07.05</p>	<p>Note</p>

#### 4.2.15 AT+CSDH Show SMS Text Mode Parameters

<b>AT+CSDH Show SMS Text Mode Parameters</b>	
<p>Read Command <b>AT+CSDH?</b></p>	<p>Response <b>+CSDH: &lt;show&gt;</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
<p>Test Command <b>AT+CSDH=?</b></p>	<p>Response <b>+CSDH: (list of supported &lt;show&gt;s)</b></p> <p><b>OK</b></p> <p>Parameter see Write Command</p>
<p>Write Command <b>AT+CSDH=[&lt;show&gt;]</b></p>	<p>Response TA determines whether detailed header information is shown in text mode result codes. <b>OK</b></p>

	<p>Parameter</p> <p><b>&lt;show&gt;</b>     <u>0</u>     do not show header values defined in commands +CSCA and +CSMP (&lt;sca&gt;, &lt;tosca&gt;, &lt;fo&gt;, &lt;vp&gt;, &lt;pid&gt; and &lt;dcs&gt;) nor &lt;length&gt;, &lt;toda&gt; or &lt;tooa&gt; in +CMT, +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode</p> <p>                  1     show the values in result codes</p>
Reference GSM 07.05	Note

#### 4.2.16 AT+CSMP Set SMS Text Mode Parameters

<b>AT+CSMP Set SMS Text Mode Parameters</b>	
<p>Read Command</p> <p><b>AT+CSMP?</b></p>	<p>Response</p> <p><b>+CSMP: &lt;fo&gt;,&lt;vp&gt;,&lt;pid&gt;,&lt;dcs&gt;</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
<p>Test Command</p> <p><b>AT+CSMP=?</b></p>	<p>Response</p> <p><b>+CSMP: (list of supported &lt;fo&gt;s),(list of supported &lt;vp&gt;s), (list of supported &lt;pid&gt;s), (list of supported &lt;dcs&gt;s)</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
<p>Write Command</p> <p><b>AT+CSMP=[&lt;fo&gt; &gt;[&lt;vp&gt;[,&lt;pid&gt;[,&lt;dcs&gt;]]]]</b></p>	<p>Response</p> <p>TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (&lt;vp&gt; is in range 0... 255) or define the absolute time of the validity period termination (&lt;vp&gt; is a string).</p> <p>Note: The Command writes the parameters in NON-VOLATILE memory.</p> <p><b>OK</b></p>

	<p>Parameters</p> <p><b>&lt;fo&gt;</b> depending on the Command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format. SMS status report is supported under text mode if &lt;fo&gt; is set to 49.</p> <p><b>&lt;vp&gt;</b> depending on SMS-SUBMIT &lt;fo&gt; setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer &lt;dt&gt;)</p> <p><b>&lt;pid&gt;</b> GSM 03.40 TP-Protocol-Identifier in integer format (default 0).</p> <p><b>&lt;dc&gt;</b> GSM 03.38 SMS Data Coding Scheme in Integer format.</p>
Reference GSM 07.05	Note

#### 4.2.17 AT+CSMS Select Message Service

<b>AT+CSMS Select Message Service</b>	
Read Command <b>AT+CSMS?</b>	<p>Response</p> <p><b>+CSMS: &lt;service&gt;,&lt;mt&gt;,&lt;mo&gt;,&lt;bm&gt;</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
Test Command <b>AT+CSMS=?</b>	<p>Response</p> <p><b>+CSMS: (list of supported &lt;service&gt;s)</b></p> <p><b>OK</b></p> <p>Parameters see Write Command</p>
Write Command <b>AT+CSMS= &lt;service&gt;</b>	<p>Response</p> <p><b>+CSMS: &lt;mt&gt;,&lt;mo&gt;,&lt;bm&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p>





## SIM300 AT Commands Set

Write Command <b>AT+SMALPHAID</b> <b>D =&lt;mode&gt;</b>	Response <b>OK</b> Parameter <b>&lt;mode&gt;</b> Enable/disable the Alpha id lookup for phone numbers when displaying SMS <u>0</u> disable the Alpha id(default) <u>1</u> enable the Alpha id
Reference	Note

### 4.3.2 AT+SMEXTRINFO Configure Extra SMS Information Display

<b>AT+SMEXTRINFO    Configure Extra SMS Information Display</b>	
Test Command <b>AT+SMEXTRINFO</b> <b>O=?</b>	Response <b>+SMEXTRINFO:</b> (list of supported <b>&lt;mode&gt;</b> s)  <b>OK</b> Parameter See Write Command
Read Command <b>AT+SMEXTRINFO</b> <b>O?</b>	Response <b>+SMEXTRINFO :</b> <b>&lt;mode&gt;</b>  <b>OK</b> Parameter See Write Command
Write Command <b>AT+SMEXTRINFO</b> <b>O =&lt;mode&gt;</b>	Response <b>OK</b> If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b>  Parameter <b>&lt;mode&gt;</b> Enable/disable the extra non-standard information on some commands and messages <u>0</u> disable the extra non-standard information <u>1</u> enable the extra non-standard information
Reference	Note e.g. Adds an extra field onto the AT+CSCA Command: <b>+CSCA: "+447802000332",145,"BT Cellnet SMS"</b>

### 4.3.3 AT+SMEXTRAUNSOL Configure Extra Unsolicited SMS Message

<b>AT+SMEXTRAUNSOL    Configure Extra Unsolicited SMS Message</b>	
Test Command	Response

## SIM300 AT Commands Set

AT+SMEXTRAUNSOL =?	+SMEXTRAUNSOL: (list of supported <mode>s)  <b>OK</b> Parameter See Write Command
Read Command AT+SMEXTRAUNSOL ?	Response +SMEXTRAUNSOL : <mode>  <b>OK</b> Parameter See Write Command
Write Command AT+SMEXTRAUNSOL =<mode>	Response <b>OK</b> If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b> Parameter <mode>      Enable/disable the extra unsolicited messages. 0      disable the extra unsolicited message 1      enable the extra unsolicited message
Reference	Note

## 5 AT Commands for GPRS Support

### 5.1 Overview of AT Commands for GPRS Support

Command	Description
AT+CGATT	ATTACH/DETACH FROM GPRS SERVICE
AT+CGDCONT	DEFINE PDP CONTEXT
AT+CGQMIN	QUALITY OF SERVICE PROFILE (MINIMUM ACCEPTABLE)
AT+CGQREQ	QUALITY OF SERVICE PROFILE (REQUESTED)
AT+CGACT	PDP CONTEXT ACTIVATE OR DEACTIVATE
AT+CGDATA	ENTER DATA STATE
AT+CGPADDR	SHOW PDP ADDRESS
AT+CGCLASS	GPRS MOBILE STATION CLASS
AT+CGEREP	CONTROL UNSOLICITED GPRS EVENT REPORTING
AT+CGREG	NETWORK REGISTRATION STATUS
AT+CGSMS	SELECT SERVICE FOR MO SMS MESSAGES
AT+CGCOUNT	GPRS PACKET COUNTERS

## 5.2 Detailed Descriptions of AT Commands for GPRS Support

### 5.2.1 AT+CGATT Attach /Detach From GPRS Service

AT+CGATT Attach /Detach From GPRS Service	
Test Command <b>AT+CGATT=?</b>	Response <b>+CGATT:</b> (list of supported <state>s)  <b>OK</b> Parameter See Write Command
Read Command <b>AT+CGATT?</b>	Response <b>+CGATT:</b> <state>  <b>OK</b> Parameter See Write Command
Write Command <b>AT+CGATT=&lt;state&gt;</b>	Response <b>OK</b> If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b> Parameter <state> indicates the state of GPRS attachment 0 – detached 1 – attached Other values are reserved and will result in an ERROR response to the Write Command.
Reference GSM07.07	Note

### 5.2.2 AT+CGDCONT Define PDP Context

AT+CGDCONT Define PDP Context	
Test Command <b>AT+CGDCONT=?</b>	Response <b>+CGDCONT:</b> (range of supported <cid>s), <PDP_type>, <APN>, <PDP_addr>, (list of supported <data_comp>s), <list of supported <head_comp>s)  <b>OK</b> Parameters See Write Command
Read Command <b>AT+CGDCONT?</b>	Response <b>+CGDCONT:</b> <cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp> [<CR><LF>+CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp>

	<p>[...]</p> <p><b>OK</b></p> <p>Parameters</p> <p>See Write Command</p>
<p>Write Command</p> <p><b>AT+CGDCONT</b></p> <p><b>=&lt;cid&gt;[,&lt;PDP_type&gt;,[&lt;APN&gt;[,&lt;PDP_addr&gt;[,&lt;d_comp&gt;[,&lt;h_comp&gt;]]]]]</b></p>	<p>Response</p> <p><b>OK</b></p> <p><b>ERROR</b></p> <p>Parameters</p> <p><b>&lt;cid&gt;</b> (PDP Context Identifier) a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1) is returned by the test form of the Command.</p> <p><b>&lt;PDP_type&gt;</b> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol X25 ITU-T/CCITT X.25 layer 3 IP Internet Protocol (IETF STD 5) OSPIH Internet Hosted Octet Stream Protocol PPP Point to Point Protocol (IETF STD 51)</p> <p><b>&lt;APN&gt;</b> (Access Point Name) a string parameter which is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.</p> <p><b>&lt;PDP_addr&gt;</b> a string parameter that identifies the MT in the address space applicable to the PDP. If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The read form of the Command will continue to return the null string even if an address has been allocated during the PDP startup procedure. The allocated address may be read using the +CGPADDR Command.</p> <p><b>&lt;d_comp&gt;</b> a numeric parameter that controls PDP data compression 0 – off (default if value is omitted) 1 – on Other values are reserved</p> <p><b>&lt;h_comp&gt;</b> a numeric parameter that controls PDP data compression 0 – off (default if value is omitted) 1 – on Other values are reserved</p> <p>Note: At present only one data compression algorithm (V.42bis) is provided in SMDCP. If and when other</p>

	algorithms become available, a Command will be provided to select one or more of these.
Reference GSM07.07	Note

### 5.2.3 AT+CGQMIN Quality Of Service Profile (Minimum Acceptable)

AT+CGQMIN Quality Of Service Profile (Minimum Acceptable)	
Test Command AT+CGQMIN=?	<p>Response</p> <p>+CGQMIN: &lt;PDP_type&gt;,(list of supported &lt;precedence&gt;s),(list of supported &lt;delay&gt;s),(list of supported &lt;reliability&gt;s),&lt;list of supported &lt;peak&gt;s),(list of supported &lt;mean&gt;s)</p> <p>[&lt;CR&gt;&lt;LF&gt;+CGQMIN: &lt;PDP_type&gt;,(list of supported &lt;precedence&gt; s),(list of supported &lt;delay&gt;s),(list of supported &lt;reliability&gt;s),&lt;list of supported &lt;peak&gt;s),(list of supported &lt;mean&gt;s)</p> <p>[...]</p> <p><b>OK</b></p> <p>Parameters</p> <p>See Write Command</p>
Read Command AT+CGQMIN?	<p>Response</p> <p>+CGQMIN: &lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&gt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;</p> <p>[&lt;CR&gt;&lt;LF&gt;+CGQMIN:</p> <p>&lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;</p> <p>[...]</p> <p><b>OK</b></p> <p>Parameters</p> <p>See Write Command</p>
Write Command AT+CGQMIN=<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameters</p> <p>&lt;cid&gt; a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command)</p> <p>The following parameter are defined in GSM 03.60</p> <p>&lt;precedence&gt; a numeric parameter which specifies the precedence class</p> <p>&lt;delay&gt; a numeric parameter which specifies the delay class</p> <p>&lt;reliability&gt; a numeric parameter which specifies the reliability class</p> <p>&lt;peak&gt; a numeric parameter which specifies the peak throughput class</p> <p>&lt;mean&gt; a numeric parameter which specifies the mean throughput class</p>

Reference	Note
GSM07.07	

### 5.2.4 AT+CGQREQ Quality Of Service Profile (Requested)

AT+CGQREQ Quality Of Service Profile (Requested)	
Test Command <b>AT+CGQREQ=?</b>	Response <b>+CGQREQ: &lt;PDP_type&gt;</b> ,(list of supported <b>&lt;precedence&gt;</b> s),(list of supported <b>&lt;delay&gt;</b> s),(list of supported <b>&lt;reliability&gt;</b> s),<list of supported <b>&lt;peak&gt;</b> s),(list of supported <b>&lt;mean&gt;</b> s) [<CR><LF> <b>+CGQREQ: &lt;PDP_type&gt;</b> ,(list of supported <b>&lt;precedence&gt;</b> s),(list of supported <b>&lt;delay&gt;</b> s),(list of supported <b>&lt;reliability&gt;</b> s),<list of supported <b>&lt;peak&gt;</b> s),(list of supported <b>&lt;mean&gt;</b> s) [...]]  <b>OK</b> Parameters See Write Command
Read Command <b>AT+CGQREQ?</b>	Response <b>+CGQREQ: &lt;cid&gt;</b> ,< <b>precedence</b> >,< <b>delay</b> >,< <b>reliability</b> >,< <b>peak</b> >,< <b>mean</b> > [<CR><LF> <b>+CGQMIN: &lt;cid&gt;</b> ,< <b>precedence</b> >,< <b>delay</b> >,< <b>reliability</b> >,< <b>peak</b> >,< <b>mean</b> > [...]]  <b>OK</b> Parameters See Write Command
Write Command <b>AT+CGQREQ=</b> <b>&lt;cid&gt;</b> ,< <b>precedence</b> >,< <b>delay</b> >,< <b>reliability</b> >,< <b>peak</b> >,< <b>mean</b> >	Response <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameters <b>&lt;cid&gt;</b> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command) The following parameter are defined in GSM 03.60 <b>&lt;precedence&gt;</b> a numeric parameter which specifies the precedence class <b>&lt;delay&gt;</b> a numeric parameter which specifies the delay class <b>&lt;reliability&gt;</b> a numeric parameter which specifies the reliability class <b>&lt;peak&gt;</b> a numeric parameter which specifies the peak throughput class <b>&lt;mean&gt;</b> a numeric parameter which specifies the mean throughput class
Reference	Note





















































































































































































































